

Index

• Numbers •

- 2-Second Self-Timer/Remote Control mode, 128, 306
- 10-Second Self-Timer/Remote Control mode, 128, 129
- 35mm equivalent, 23

• A •

- A:B C firing group (Speedlites), 181–183
- A:B firing group (Speedlites), 179–181
- abstract images, creating, 306–308
- Access lamp, 12
- accessing
 - menu, 32–35
 - Programmed Auto Exposure mode, 32–33
- action photography
 - fast-moving subjects, photographing, 186–188
 - freezing action, 188–190
 - overview, 186
 - slow-moving subjects, photographing, 191–192
- Adams, Ansel (photographer), 196, 213, 215
- Adobe RGB, 155–156
- AE lock/AEB in progress icon, 19
- AE Lock/Index/Reduce button, 12
- AF mode/Drive mode button, 11
- AF Point Selection/Magnify button, 12
- AF-On button
 - described, 12
 - locking focus with, 127
- after sunset, shooting, 194–195
- AI Focus mode, 149
- AI Servo mode, 149
- always have your camera with you, taking good pictures by, 216
- analyzing histogram, 66–67
- animals
 - pet photography
 - eyes are in focus, making sure that, 199
 - overview, 197–199
 - tips for, 197–199
 - wildlife photography
 - birds, photographing, 207–208
 - long telephoto lenses, stabilizing camera when using, 204–206
 - Mirror Lockup, stabilizing camera with, 205–206
 - overview, 201
 - Self-Timer, stabilizing camera with, 204–205
 - state parks, photographing animals at, 201–203
 - tracking wildlife, 203–204
 - zoo, photographing animals at, 206–207
- aperture
 - in Aperture Priority mode, 40
 - in B (Bulb) mode, 40
 - in Creative Auto mode, 40
 - in Full Auto mode, 40
 - in M (Manual) mode, 40
 - overview, 38–40, 110
 - in P (Programmed Auto Exposure) mode, 40
 - in Shutter Priority mode, 40
- Aperture icon
 - LCD panel, 17
 - viewfinder, 20
- Aperture Priority (Av) mode
 - aperture in, 40
 - depth of field, controlling, 114
 - depth of field, previewing, 115–116
 - flash-sync speed in, changing, 164–165
 - magazine images, determining use in, 215
 - overview, 109
 - shutter speed in, 40
 - taking pictures in, 112–116
- The Artist's Way* (Cameron), 209

aspect ratios, leaving room in, 259
 attaching a lens to your camera, 20–21
 author name added to camera, 281–283
 Auto Lighting Optimizer, 143–144
 Auto mode, 70–71
 auto power-off time, changing, 26
 auto reset for file numbering, 62
 auto white balance option, 157
 autofocus mode

- AI Focus mode, 149
- AI Servo mode, 149
- choosing, 148–150
- One-Shot AF mode, 149

 Autofocus mode icon, 18
 autofocus points

- changing, 151–152
- overview, 37
- selection modes, switching between, 150–151

 autofocus zones, 152
 Automatic exposure bracketing icon, 18
 auxiliary flash, 168
 Av mode. *See* Aperture Priority (Av) mode

• B •

B (Bulb) mode

- aperture in, 40
- overview, 109
- shutter speed in, 40
- taking pictures in, 120–122

 back of camera controls

- Access lamp, 12
- AE Lock/Index/Reduce button, 12
- AF Point Selection/Magnify button, 12
- AF-On button, 12
- Dioptric adjustment knob, 14
- Erase button, 14
- Info button, 14
- LCD monitor, 14
- Light sensor, 12
- Live View/Movie Shooting switch, 12
- Menu button, 14
- Multi-controller button, 12
- overview, 12
- Picture Style Selection button, 14
- Power switch, 13
- Quick Control button, 14
- Quick Control dial, 12
- Quick Control switch, 13
- Set button, 12
- speaker, 14
- Start/Stop button, 12
- Viewfinder/eyepiece, 14

 backing up images, 238
 bags, camera, 16
 barrel, zoom lens with, 24
 Battery status icon, 19
 batteries

- charging, 29–30
- corrupt data, changing batteries
 - to avoid, 294
- smart, 142–143
- tips for using, 30
- viewing information on your, 142–143

 Battery status icon, 18
 beanbag used to steady camera, 306
 birds, photographing, 207–208
 Black and White icon, 20
 Black & White picture style icon, 18
 Blurb, 260
 Body cap, 14
 bracketing

- exposure, 124–126
- white balance, 131–132

 brightness of monitor

- in Auto mode, 70–71
- in Manual mode, 71–72
- overview, 70–72

 built-in flash

- controlling external Speedlites with, 173–183
- overview, 162–163
- second-curtain sync, enabling, 166–167
- using, 164

 Bulb mode. *See* B (Bulb) mode
 Butcher, Clyde (photographer), 215
 buttons

- AE Lock/Index/Reduce button, 12
- AF mode/Drive mode button, 11
- AF Point Selection/Magnify button, 12
- AF-On button
 - described, 12
 - locking focus with, 127

- customization of, 136–138
 - Depth-of-Field Preview button, 15
 - Erase button, 14
 - Flash button, 15
 - Info button, 14
 - ISO speed setting/Flash Exposure Compensation button, 11
 - LCD Panel Illumination button, 10
 - Lens-release button, 15
 - Menu button, 14
 - Metering Mode/White Balance button, 11
 - M-Fn button, 150–151
 - Multi-controller button, 12
 - Multi-function button, 10
 - Picture Style Selection button, 14
 - Quick Control button, 14
 - RAW+JPEG button, 54–56
 - Set button, 12
 - shutter button
 - described, 10
 - locking focus with, 127
 - Start/Stop button, 12
- C •
- calibrating your monitor
 - for color, 256–257
 - for printing, 256–257
 - camera bags, 16
 - camera body, cleaning, 290
 - Camera Functions (camera menu), 35
 - camera LCD monitor. *See* LCD monitor
 - Camera Settings 1 (camera menu), 35
 - Camera Settings 2 (camera menu), 35
 - Camera Settings 3 (camera menu), 35
 - Cameron, Julia (*The Artist's Way*), 209
 - Canon Digital Photo Professional
 - editing RAW images in, 245–250
 - launching, 245
 - Photoshop launched from, 253–254
 - printing from, 267–268
 - saving edited RAW images in, 248–250
 - Canon Digital Professional Pro, trimming images in, 262–264
 - Canon Speedlite System Digital Field Guide* (Thomas), 173
 - card readers, external, 227
 - Cartier-Bresson, Henri (photographer), 196, 215
 - CD, saving images to, 297–298
 - center of interest, determining, 217
 - Center-weighted average metering mode, 146
 - CF (CompactFlash) card
 - formatting, 28
 - inserting, 27
 - overview, 18, 227
 - removing, 27–28
 - C.Fn I: Exposure, 133–134
 - C.Fn II: Image High ISO Noise Speed Reduction, 134–135
 - C.Fn II: Image Highlight Tone Priority, 135–136
 - C.Fn II Image Long Exp. Noise Reduction, 134
 - choosing
 - metering mode, 146
 - picture style, 152–154
 - clarity, adjusting, 24
 - cleaning
 - camera body, 290
 - lenses, 289–290
 - clearing custom functions, 138–139
 - cloudy white balance option, 157
 - color
 - adjusting, 240–242
 - calibrating your monitor, 256–257
 - as digital noise, 143, 161
 - white balance compensation, 129–131
 - color space
 - Adobe RGB, 155–156
 - default, 155
 - specifying, 155–156
 - sRGB, 155–156
 - color temperature, 157–158
 - comments added to images, 232
 - comparing multiple images, 236–238
 - compensation
 - flash, 168–169
 - white balance, 129–131
 - composition
 - curves, looking for naturally occurring, 211
 - horizon line, placement of, 211–212
 - for landscape photography, 193

- composition (*continued*)
 - off-center subjects, focusing on, 40–41
 - overview, 210–212
 - Portrait format, using, 211
 - Rule of Thirds, 212
- contact sheets
 - in Canon Digital Photo Professional, 270–273
 - in ZoomBrowser EX, 268–270
- continuous file numbering, 62
- continuous shooting, 107
- controls
 - back of camera controls
 - Access lamp, 12
 - AE Lock/Index/Reduce button, 12
 - AF Point Selection/Magnify button, 12
 - AF-On button, 12
 - Dioptic adjustment knob, 14
 - Erase button, 14
 - Info button, 14
 - LCD monitor, 14
 - Light sensor, 12
 - Live View/Movie Shooting switch, 12
 - Menu button, 14
 - Multi-controller button, 12
 - overview, 12
 - Picture Style Selection button, 14
 - Power switch, 13
 - Quick Control button, 14
 - Quick Control dial, 12
 - Quick Control switch, 13
 - Set button, 12
 - speaker, 14
 - Start/Stop button, 12
 - Viewfinder/eyepiece, 14
 - external controls
 - located in back of camera, 12–14
 - located on front of camera, 14–15
 - located on top of camera, 10–12
 - overview, 10
 - front of camera controls
 - Body cap, 14
 - DC coupler cord hole, 14
 - Depth-of-Field Preview button, 15
 - EF index mount, 14
 - EF-S index mount, 15
 - Flash button, 15
 - Lens-release button, 15
 - overview, 14
 - Remote control sensor, 14
 - top of camera controls
 - AF mode/Drive mode button, 11
 - Hot shoe, 12
 - ISO speed setting/Flash Exposure Compensation button, 11
 - LCD panel, 11
 - LCD Panel Illumination button, 10
 - Main dial, 10
 - Metering Mode/White Balance button, 11
 - Mode dial, 12
 - Multi-function button, 10
 - overview, 10
 - Shutter button, 10
- copyright information
 - added to camera, 280–281
 - editing, 281
- corrupt data, changing batteries
 - to avoid, 294
- Creative Auto mode
 - aperture in, 40
 - flash used in, 48
 - overview, 42
 - shooting pictures in, 42–45
 - shutter speed in, 40
- creativity
 - enhancing your, 209–210
 - lowest common denominator, simplifying a scene to its, 210
 - multiple shots, taking, 210
 - patterns, looking for, 210
 - themes, using, 210
 - tips for increasing your, 210
- cropping grid, displaying, 96–97
- curves, looking for naturally occurring, 211
- custom functions
 - clearing, 138–139
 - for exposure, 133–134
 - for images, 134–136
 - Mirror Lockup, 136
 - for operations, 136–138
 - overview, 133
 - Safety Shift, 133–134
- custom white balance option, 157
- customization
 - of buttons on camera, 136–138
 - of menu, 277–279
 - for white balance, 158–160

• D •

date and time, changing, 25
 daylight white balance option, 157
 DC coupler cord hole, 14
 default settings
 auto power-off time, changing, 26
 battery, charging, 29–30
 CF (CompactFlash) card
 formatting, 28
 inserting, 27
 removing, 27–28
 color space, 155
 date and time, changing, 25
 image size, 52
 overview, 24–25
 resolution, 52
 restoring, 293–294
 deleting images
 multiple images in LCD monitor,
 deleting, 73–75
 overview, 239
 protecting images from accidental
 deletion, 76–78
 single images in LCD monitor,
 deleting, 72–73
 depth of field
 controlling, 114
 large, 39
 overview, 15, 39–40
 previewing, 115–116
 small, 39
 Depth-of-Field Preview button, 15
 digital noise
 color as, 143, 161
 luminance as, 143
 in shadow areas, 161
 Digital Photo Professional (Canon)
 editing RAW images in, 245–250
 launching, 245
 Photoshop launched from, 253–254
 printing from, 267–268
 saving edited RAW images in, 248–250
 digital photography, immediacy of, 219
Digital Portrait Photography For Dummies
 (Sahlin), 199
 Digital Professional Pro (Canon), trimming
 images in, 262–264

Digital Video For Dummies
 (Underdahl), 102
 Dioptic adjustment knob, 14
 displaying
 grid, 147
 histogram, 65–67
 distracting elements in image, removing,
 218–219
 downloading your images for editing,
 224–226
 Drive mode, 128–129
 Drive mode icon, 18
 drugstore printing services, 256
 dual-axis level, 9
 dust on sensor, avoiding, 22

• E •

edges, 41
 editing
 copyright information, 281
 images
 comments added to images, 232
 comparing multiple images, 236–238
 deleting images, 239
 downloading your images for editing,
 224–226
 folder, creating new image, 239
 JPEG images, 239–245
 keywords added to images, 229–231
 metadata added to images, 232
 moving images, 239
 organizing images, 239
 with Photoshop, 251–254
 in Photoshop Elements 8.0, 308–309
 ranking images, 229
 RAW images, 245–250
 renaming images, 228–229
 sharpening images, 244–245
 movies in camera, 288–289
 EF index mount, 14
 EF-S index mount, 15
 electronic level, displaying, 148
 e-mail, sending images through, 298–299
 enabling Live View mode, 88
 enhancing your creativity, 209–210
 Erase button, 14
 E-TTL II option (Speedlites), 172
 Evaluative metering mode, 146

- exiting menu, 34
 - Exp. Comp. option (Speedlites), 172
 - exporting
 - screensaver, computer, 303–304
 - shooting properties, 300
 - wallpaper, computer, 301–302
 - exposure
 - bracketing, 124–126
 - compensation
 - LCD panel, 18
 - for sunset photography, 197
 - custom functions for, 133–134
 - how it works, 109–110
 - locking, 126, 169–170
 - manually compensating, 123–124
 - modifying, 122–126
 - overview, 38–40
 - Exposure compensation icon, 20
 - extending ISO range, 161–162
 - external card readers, 227
 - external controls
 - located in back of camera, 12–14
 - located on front of camera, 14–15
 - located on top of camera, 10–12
 - overview, 10
 - external hard drive, backing up
 - images to, 238
 - external image editors
 - overview, 250
 - Photoshop, 251–254
 - eyes are in focus, making sure that, 199
- **F** ●
- Faithful picture style, 153, 154
 - fast-moving subjects, photographing, 186–188
 - FEB (flash exposure bracketing), 172
 - FEB option (Speedlites), 172
 - file formats
 - choosing, 53–54
 - image sizes for, 57–59
 - JPEG file format
 - choosing, 53–54
 - overview, 51
 - RAW compared, 57
 - recommendations for, 58
 - RAW file format
 - choosing, 53–54
 - JPEG compared, 57
 - overview, 51
 - recommendations for, 58
 - statistics for, 58
 - recommendations for, 58
 - file management
 - auto reset for file numbering, 62
 - continuous file numbering, 62
 - file-numbering method, choosing, 61–62
 - folders
 - creating, 59–60
 - selecting, 60–61
 - manual reset for file numbering, 62
 - overview, 59
 - file numbering, continuous, 62
 - file-numbering method, choosing, 61–62
 - finding images for printing, 257–259
 - firmware, updating, 290–291
 - first picture, taking your, 35–38
 - flash. *See also* Speedlites
 - auxiliary, 168
 - built-in flash
 - controlling external Speedlites with, 173–183
 - overview, 162–163
 - second-curtain sync, enabling, 166–167
 - using, 164
 - compensation, 168–169
 - in Creative Auto mode, 48
 - exposure, locking, 169–170
 - in Full Auto mode, 46–48
 - Flash button, 15
 - flash exposure bracketing (FEB), 172
 - Flash exposure compensation icon, 18
 - Flash exposure lock/FEB in progress icon, 19
 - Flash mode option (Speedlites), 171
 - Flash ready icon, 19
 - flash white balance option, 157
 - flash-sync speed in, changing, 164–165
 - Flickr, 310

focal length multiplier, 23

focus

AF-On button, locking focus with, 127

in Live View mode, 91–93

locking, 127

manual focus

overview, 41

steps for, 42

selective focus

overview, 199

steps for, 199–200

shutter button, locking focus with, 127

Focus confirmation light icon, 20

folders

creating, 59–60

selecting, 60–61

in ZoomBrowser EX, 239

formatting memory cards, 294

frame rate, changing, 101–102

freezing action, 188–190

front of camera controls

Body cap, 14

DC coupler cord hole, 14

Depth-of-Field Preview button, 15

EF index mount, 14

EF-S index mount, 15

Flash button, 15

Lens-release button, 15

overview, 14

Remote control sensor, 14

f-stop number, 39–40, 110

Full Auto mode

aperture in, 40

first picture taken in, 35–38

flash used in, 46–48

shooting in, 35–38

shutter speed in, 40

full-frame sensor, 23

functions, custom

clearing, 138–139

for exposure, 133–134

for images, 134–136

for operations, 136–138

Mirror Lockup, 136

overview, 133

Safety Shift, 133–134

• G •

goals

center of interest, determining, 217

digital photography, immediacy of, 219

distracting elements in image, removing,
218–219

overview, 216–217

vantage point, determining best, 217–218

Golden Hour, 193, 194

good picture-taking methods

always have your camera with you, 216

light, waiting for best, 216

magazines, studying images in, 215

in the moment, being, 213

overview, 213

photo walkabouts, 214

practice, 214

student of photography, becoming a, 215

Gorman, Greg (photographer), 215

grid display

LCD monitor, 147

Live View mode, 94–95

• H •

HD television set, viewing images on a,
82–83

Hi Speed Continuous Shooting mode, 107,
128, 129

Highlight tone priority icon

LCD panel, 18

viewfinder, 20

High-speed sync icon, 19

hints

author name added to camera, 281–283

cleaning your camera, 289–290

copyright information added to camera,
280–281

creativity, for increasing your, 210

custom menu, creating a, 277–279

editing movies in camera, 288–289

memory cards, maintaining, 294

for movies, 105

for using batteries, 30

hints (*continued*)

- pet photography, 197–199
 - picture style
 - customizing, 285–287
 - registering, 287
 - portrait photography, 197–199
 - restoring default camera settings, 293–294
 - sensor, manually cleaning, 283–285
 - updating your camera's firmware, 290–291
 - user settings, registering, 291–293
- histogram
- analyzing, 66–67
 - displaying, 65–67
 - overview, 65–66
- horizon line, placement of, 211–212
- hot shoe
- controlling flash in, 170–172
 - described, 12



ICC (International Color Consortium), 274

icons

- AE lock/AEB in progress icon, 19
 - Aperture icon, 17, 20
 - Autofocus mode icon, 18
 - Automatic exposure bracketing icon, 18
 - Battery status icon, 18–19
 - Black and White icon, 20
 - Black & White picture style icon, 18
 - clarity, adjusting, 24
 - Drive mode icon, 18
 - Exposure compensation icon, 20
 - Flash exposure compensation icon, 18
 - Flash exposure lock/FEB in progress icon, 19
 - Flash ready icon, 19
 - Focus confirmation light icon, 20
 - Highlight tone priority icon, 18, 20
 - High-speed sync icon, 19
 - ISO speed setting icon, 18, 20
 - JPEG image size and quality icon, 17
 - Max burst icon, 20
 - in menu, 35
 - RAW format icon, 17
 - Shots remaining/Self-Timer countdown icon, 18
 - Shutter speed icon, 17, 20
 - White balance adjustment icon, 17, 20
 - White balance setting icon, 16
- image editors, external
- overview, 250
 - Photoshop, 251–254
- image stabilization lens, 22
- images
- custom functions for, 134–136
 - information on LCD monitor, displaying, 64–65
- JPEG images
- color, adjusting, 240–242
 - editing, 239–245
 - editing images, 239–245
 - sharpening images, 244–245
 - text to images, adding, 295–297
 - tone curve, adjusting, 242–243
- RAW images, editing, 245–250
- review time, modifying, 69–70
- sharpness affected by shutter speed, 39
- size
- choosing, 53–54
 - default, 52
 - file formats for, 57–59
 - overview, 51–52
 - for printing, 261
- immediacy of digital photography, 219
- improving your photographs
- always have your camera with you, 216
 - light, waiting for best, 216
 - magazines, studying images in, 215
 - in the moment, being, 213
 - overview, 213
 - photo walkabouts, 214
 - practice, 214
 - student of photography, becoming a, 215
 - in the moment, being, 213
- index sheet in ZoomBrowser EX, printing, 268–270
- Info button, 14
- International Color Consortium (ICC), 274

- ISO range
 - extending, 161–162
 - overview, 161
- ISO speed
 - overview, 160
 - setting, 160–161
- ISO speed setting icon
 - LCD panel, 18
 - viewfinder, 20
- ISO speed setting/Flash Exposure Compensation button, 11

• J •

- JPEG file format
 - choosing, 53–54
 - overview, 51
 - RAW compared, 57
 - recommendations for, 58
- JPEG image size and quality icon, 17
- JPEG images
 - color, adjusting, 240–242
 - editing, 239–245
 - sharpening images, 244–245
 - text to images, adding, 295–297
 - tone curve, adjusting, 242–243
- JPEG Large Fine image, 57
- JPEG Large Normal image, 57
- JPEG Medium Fine image, 57
- JPEG Medium Normal image, 57
- JPEG Small Fine image, 58
- JPEG Small Normal image, 58

• K •

- K white balance option, 157
- keywords added to images, 229–231

• L •

- landscape photography
 - composition for, 193
 - in Golden Hour, 193, 194
 - overview, 192
 - steps for, 193
 - time of day for, 193

- landscape picture style, 153, 154
- large depth of field, 39
- launching
 - Canon Digital Photo Professional, 245
 - Photoshop
 - from Canon Digital Photo Professional, 253–254
 - from ZoomBrowser EX, 251–254
- LCD monitor
 - brightness of monitor
 - Auto mode, 70–71
 - Manual mode, 71–72
 - overview, 70–72
 - calibrating your monitor
 - for color, 256–257
 - for printing, 256–257
 - deleting multiple images in, 73–75
 - deleting single images in, 72–73
 - described, 14
 - electronic level, displaying, 148
 - grid, displaying, 147
 - histogram, using, 65–67
 - image information on, displaying, 64–65
 - image review time, modifying, 69–70
 - previewing images on, 67–69
 - previewing movies on, 103–104
 - protecting images from accidental deletion in, 76–78
 - Quick Control menu, 78–79
 - rotating images in, 75–76
 - single image, modifying view of, 68–69
 - viewing images as slideshow on, 79–81
- LCD panel
 - Aperture icon, 17
 - Autofocus mode icon, 18
 - Automatic exposure bracketing icon, 18
 - Battery status icon, 18
 - Black & White picture style icon, 18
 - described, 11
 - Drive mode icon, 18
 - Exposure compensation, 18
 - Flash exposure compensation icon, 18
 - Highlight tone priority icon, 18
 - ISO speed setting icon, 18
 - JPEG image size and quality icon, 17
 - overview, 16

- LCD panel (*continued*)
 - RAW format icon, 17
 - Shots remaining/Self-Timer countdown icon, 18
 - Shutter speed icon, 17
 - White balance adjustment icon, 17
 - White balance setting icon, 16
 - LCD Panel Illumination button, 10
 - Leibovitz, Annie (photographer), 215
 - lenses
 - attaching a lens to your camera, 20–21
 - cleaning, 289–290
 - image stabilization, 22
 - removing a lens from your camera, 21–22
 - for sunset photography, 195
 - zoom lens
 - with barrel, 24
 - overview, 24
 - push/pull, 24
 - using, 24
 - Lens-release button, 15
 - light, waiting for best, 216
 - light falloff, 144–145
 - Light sensor, 12
 - Live Mode (Face Detection), focusing
 - with, 93
 - Live View mode
 - cropping grid, displaying, 96–97
 - disadvantages of, 90
 - enabling, 88
 - focusing in, 91–93
 - grid, displaying, 94–95
 - Live Mode (Face Detection), focusing
 - with, 93
 - options for, 96–97
 - overview, 87–88
 - Quick Control menu, 94
 - Quick mode focusing, 93
 - shooting information, displaying, 90–91
 - taking pictures in, 89–95
 - Live View/Movie Shooting switch, 12
 - locking
 - exposure, 126
 - focus, 127
 - long telephoto lenses, stabilizing camera
 - when using, 204–206
 - Low Speed Continuous Shooting mode, 128, 129
 - lowest common denominator, simplifying
 - a scene to its, 210
 - luminance noise, 143
- M •
- M (Manual) mode
 - aperture in, 40
 - brightness of monitor, changing, 71–72
 - overview, 109
 - shutter speed in, 40
 - macro photography, 200–201
 - magazine images, determining Shutter
 - Priority mode use in, 215
 - magazines, studying images in, 215
 - Main dial, 10
 - manual exposure
 - for images, 119–120
 - for movies, 99–100
 - manual focus
 - overview, 41
 - steps for, 42
 - manual reset for file numbering, 62
 - manually cleaning sensor, 283–285
 - manually compensating exposure, 123–124
 - masters of photography
 - Adams, Ansel, 196, 213, 215
 - Butcher, Clyde, 215
 - Cartier-Bresson, Henri, 196, 215
 - Gorman, Greg, 215
 - Leibovitz, Annie, 215
 - Newman, Arnold, 215
 - studying, 196, 215
 - Max burst icon, 20
 - memory cards
 - formatting, 294
 - maintaining, 294
 - menu
 - accessing, 32–35
 - custom menu, creating a, 277–279
 - exiting, 34
 - icons in, 35
 - tabs in, 35
 - Menu button, 14
 - metadata added to images, 232
 - metering, 108
 - metering mode, choosing, 146

- Metering Mode/White Balance button, 11
- methods for taking good pictures
 - always have your camera with you, 216
 - in the moment, being, 213
 - light, waiting for best, 216
 - magazines, studying images in, 215
 - overview, 213
 - photo walkabouts, 214
 - practice, 214
 - student of photography, becoming a, 215
- M-Fn button, 150–151
- Mirror Lockup
 - overview, 136
 - stabilizing camera with, 205–206
- Mode dial, 12
- modes
 - AI Focus mode, 149
 - AI Servo mode, 149
 - Aperture Priority (Av) mode
 - aperture in, 40
 - depth of field, controlling, 114
 - depth of field, previewing, 115–116
 - flash-sync speed in, changing, 164–165
 - magazine images, determining use in, 215
 - overview, 109
 - shutter speed in, 40
 - taking pictures in, 112–116
 - Auto mode, 70–71
 - autofocus mode
 - AI Focus mode, 149
 - AI Servo mode, 149
 - choosing, 148–150
 - One-Shot AF mode, 149
 - B (Bulb) mode
 - aperture in, 40
 - overview, 109
 - shutter speed in, 40
 - taking pictures in, 120–122
 - Center-weighted average metering mode, 146
 - Creative Auto mode
 - aperture in, 40
 - flash used in, 48
 - overview, 42
 - shooting pictures in, 42–45
 - shutter speed in, 40
 - Drive mode, 128–129
 - enabling Live View mode, 88
 - Evaluative metering mode, 146
 - Full Auto mode
 - aperture in, 40
 - first picture taken in, 35–38
 - flash used in, 46–48
 - shooting in, 35–38
 - shutter speed in, 40
 - Hi Speed Continuous mode, 107, 128, 129
 - Live Mode (Face Detection), focusing
 - with, 93
 - Live View mode
 - cropping grid, displaying, 96–97
 - disadvantages of, 90
 - enabling, 88
 - focusing in, 91–93
 - grid, displaying, 94–95
 - Live Mode (Face Detection), focusing
 - with, 93
 - options for, 96–97
 - overview, 87–88
 - Quick Control menu, 94
 - Quick mode focusing, 93
 - shooting information, displaying, 90–91
 - taking pictures in, 89–95
 - Low Speed Continuous mode, 128–129
 - M (Manual) mode
 - aperture in, 40
 - brightness of monitor, changing, 71–72
 - overview, 109
 - shutter speed in, 40
 - magazine images, determining Shutter Priority mode use in, 215
 - metering mode, choosing, 146
 - One-Shot AF mode, 149
 - P (Programmed Auto Exposure) mode
 - accessing, 32–33
 - aperture in, 40
 - overview, 109
 - shifting programmed exposure in, 111–112
 - shutter speed in, 40
 - taking pictures in, 110–112
 - Partial metering mode, 146
 - Preview mode (ZoomBrowser EX),
 - viewing images in, 234–236

modes (*continued*)

- Quick mode focusing in Live View mode, 93
 - Scroll mode (ZoomBrowser EX), viewing images in, 234
 - shifting programmed exposure in
 - Programmed Auto Exposure mode, 111–112
 - Shutter Priority mode
 - aperture in, 40
 - magazine images, determining use in, 215
 - overview, 109
 - shutter speed in, 40
 - taking pictures in, 116–118
 - Single shot mode, 128, 129
 - Spot metering mode, 146
 - 10-Second Self-Timer/Remote Control mode, 128, 129
 - 2-Second Self-Timer/Remote Control mode, 128, 306
 - Zoom mode (ZoomBrowser EX), viewing images in, 233–234
- modifying exposure, 122–126
- monitors (LCD)
- brightness of monitor
 - Auto mode, 70–71
 - Manual mode, 71–72
 - overview, 70–72
 - calibrating your monitor
 - for color, 256–257
 - for printing, 256–257
 - deleting multiple images in, 73–75
 - deleting single images in, 72–73
 - described, 14
 - electronic level, displaying, 148
 - grid, displaying, 147
 - histogram, using, 65–67
 - image information on, displaying, 64–65
 - image review time, modifying, 69–70
 - previewing images on, 67–69
 - previewing movies on, 103–104
 - protecting images from accidental deletion in, 76–78
 - Quick Control menu, 78–79
 - rotating images in, 75–76
 - single image, modifying view of, 68–69
 - viewing images as slideshow on, 79–81

- Monochrome picture style, 153, 154
- motion blur, 192
- movies
 - editing movies in camera, 288–289
 - frame rate, changing, 101–102
 - LCD monitor, previewing movies on, 103–104
 - manually exposing, 99–100
 - Quick Control menu for, 103
 - recording, 98–100
 - shooting information, displaying, 100–101
 - still picture taken while recording movies, 102–103
 - taking a still picture while recording, 102–103
 - tips for, 105
 - video dimensions, changing, 101–102
- moving images, 239
- Mpix, 256
- MRAW image, 58
- Multi-controller button, 12
- Multi-function button, 10
- multiple shots, taking, 210
- My Menu Settings (camera menu), 35



- Neutral picture style, 153, 154
- Newman, Arnold (photographer), 215



- Obermeier, Barbara (*Photoshop Elements 8 For Dummies*), 261
- off-center subjects, focusing on, 40–41
- One-Shot AF mode, 149
- online photo-sharing sites, 310–311
- online printing services, 256
- operations, custom functions for, 136–138
- optimal setting for specific situation, choosing, 185–185
- organizing images, 239
- outdoor photography
 - landscape photography
 - composition for, 193
 - in Golden Hour, 193, 194
 - overview, 192

- steps for, 193
- time of day for, 193
- wildlife photography
 - birds, photographing, 207–208
 - Mirror Lockup, stabilizing camera with, 205–206
 - overview, 201
 - Self-Timer, stabilizing camera with, 204–205
 - state parks, photographing animals at, 201–203
 - tracking wildlife, 203–204
 - zoo, photographing animals at, 206–207

• p •

P (Programmed Auto Exposure) mode

- accessing, 32–33
- aperture in, 40
- overview, 109
- shifting programmed exposure in, 111–112
- shutter speed in, 40
- taking pictures in, 110–112

Padova, Ted (*Photoshop Elements 8 For Dummies*), 261

panel, LCD

- Aperture icon, 17
- Autofocus mode icon, 18
- Automatic exposure bracketing icon, 18
- Battery status icon, 18
- Black & White picture style icon, 18
- described, 11
- Drive mode icon, 18
- Exposure compensation, 18
- Flash exposure compensation icon, 18
- Highlight tone priority icon, 18
- ISO speed setting icon, 18
- JPEG image size and quality icon, 17
- overview, 16
- RAW format icon, 17
- Shots remaining/Self-Timer countdown icon, 18
- Shutter speed icon, 17
- White balance adjustment icon, 17
- White balance setting icon, 16

- Partial metering mode, 146
- patterns, looking for, 210
- peripheral illumination, correcting, 144–145
- pet photography
 - eyes are in focus, making sure that, 199
 - overview, 197–199
 - tips for, 197–199
- photo books, creating, 260
- photo walkabouts, 214
- photographers
 - Adams, Ansel, 196, 213, 215
 - Butcher, Clyde, 215
 - Cartier-Bresson, Henri, 196, 215
 - Gorman, Greg, 215
 - Leibovitz, Annie, 215
 - Newman, Arnold, 215
- Photo.net, 209, 215
- photo-sharing sites, online, 310–311
- Photoshop
 - editing images in, 251–254
 - launched from Canon Digital Photo Professional, 253–254
 - launched from ZoomBrowser EX, 251–254
 - Photoshop Elements 8.0, 308–309
 - Photoshop Elements 8 For Dummies* (Obermeier and Padova), 261
- Photosilk, 290
- picture style
 - choosing, 152–154
 - customizing, 285–287
 - Faithful, 153, 154
 - Landscape, 153, 154
 - Monochrome, 153, 154
 - Neutral, 153, 154
 - Portrait, 153, 154
 - registering, 287
 - Standard, 153, 154
 - User-Created, 153
- Picture Style Selection button, 14
- Playback Settings 1 (camera menu), 35
- Playback Settings 2 (camera menu), 35
- Portrait format, using, 211
- portrait photography
 - eyes are in focus, making sure that, 199
 - masters, studying, 215
 - overview, 197–199
 - tips for, 197–199

Portrait picture style, 153, 154
 Power switch, 13
 practicing taking pictures, 214
 Preview mode (ZoomBrowser EX), viewing images in, 234–236
 previewing images on LCD monitor, 67–69
 printers
 disadvantages of, 255–256
 improvements to, 255
 overview, 255–256
 printing
 aspect ratios, leaving breathing room in, 259
 calibrating your monitor for, 256–257
 from Canon Digital Photo Professional, 267–268
 contact sheet in Canon Digital Photo Professional, 270–273
 contact sheet in ZoomBrowser EX, 268–270
 drugstore printing services, 256
 finding images for, 257–259
 image resolution for, 261
 image size for, 261
 index sheet in ZoomBrowser EX, 268–270
 online printing services, 256
 superstore printing services, 256
 with third-party papers, 274
 from ZoomBrowser EX, 264–266
 Programmed Auto Exposure mode. *See* P (Programmed Auto Exposure) mode
 protecting images from accidental deletion in LCD monitor, 76–78
 push/pull zoom lens, 24



Quick Control button, 14
 Quick Control dial, 12
 Quick Control menu
 Live View mode, 94
 for movies, 103
 overview, 78–79
 Quick Control switch, 13
 Quick mode focusing in Live View mode, 93



ranking images, 229
 RAW file format
 choosing, 53–54
 JPEG compared, 57
 overview, 51
 recommendations for, 58
 statistics for, 58
 RAW format icon, 17
 RAW images, editing, 245–250
 RAW+JPEG button, 54–56
 recommendations for file formats, 58
 recording movies, 98–100
 red-eye reduction, 46–48
 registering user settings, 291–293
 Remote control sensor, 14
 remote triggering of shutter, 50
 removing a lens from your camera, 21–22
 renaming images, 228–229
 resolution
 default, 52
 for printing, 261
 restoring default camera settings, 293–294
 review time, modifying image, 69–70
 rotating images in LCD monitor, 75–76
 Rule of Thirds, 212



Safety Shift custom function, 133–134
 Sahlin, Doug (*Digital Portrait Photography For Dummies*), 199
 saving edited RAW images in Canon Digital Photo Professional, 248–250
 screensaver, creating computer, 303–304
 Scroll mode (ZoomBrowser EX), viewing images in, 234
 SD (Secure Digital) cards, 227
 second-curtain sync, enabling, 166–167
 selective focus
 overview, 199
 steps for, 199–200
 Self-Timer
 overview, 48–49
 stabilizing camera with, 204–205
 using, 49

- sensor
 - dust on sensor, avoiding, 22
 - full-frame, 23
 - manually cleaning, 283–285
- Set button, 12
- setting
 - ISO speed, 160–161
 - white balance, 156–157
- shade white balance option, 157
- shadow areas, digital noise in, 161
- sharpening images, 244–245
- sharpness of image affected by shutter speed, 39
- shifting programmed exposure in
 - Programmed Auto Exposure mode, 111–112
- shooting
 - in Aperture Priority mode, 112–116
 - in Bulb mode, 120–122
 - continuous, 107
 - in Creative Auto mode, 42–45
 - in Full Auto mode, 35–38
 - information, displaying
 - Live View mode, 90–91
 - movies, 100–101
 - in Live View mode, 89–95
 - in Programmed Auto Exposure mode, 110–112
 - in Shutter Priority mode, 116–118
 - time exposures, 120–122
- Shooting Settings 1 (camera menu), 35
- Shooting Settings 2 (camera menu), 35
- Shooting Settings 3 (camera menu), 35
- Shooting Settings 4 (camera menu), 35
- shooting wide open, 114
- Shots remaining/Self-Timer countdown icon, 18
- shutter button
 - described, 10
 - locking focus with, 127
- Shutter Priority mode
 - aperture in, 40
 - magazine images, determining use in, 215
 - overview, 109
 - shutter speed in, 40
 - taking pictures in, 116–118
- shutter speed
 - in Aperture Priority mode, 40
 - in B (Bulb) mode, 40
 - in Creative Auto mode, 40
 - in Full Auto mode, 40
 - image sharpness affected by, 39
 - in M (Manual) mode, 40
 - overview, 38–40, 109
 - in P (Programmed Auto Exposure) mode, 40
 - in Shutter Priority mode, 40
- Shutter speed icon
 - LCD panel, 17
 - viewfinder, 20
- Shutter Sync option (Speedlites), 172
- single image, modifying view of, 68–69
- Single shot mode, 128, 129
- size of image
 - choosing, 53–54
 - default, 52
 - file formats for, 57–59
 - overview, 51–52
 - for printing, 261
- slide show, creating, 304–305
- slow-moving subjects, photographing, 191–192
- small depth of field, 39
- smart battery, 142–143
- SmugMug, 310–311
- speaker, 14
- specific situation, choosing optimal setting for, 185–185
- specifying color space, 155–156
- Speedlites
 - A:B C firing group, 181–183
 - A:B firing group, 179–181
 - built-in flash, controlling external Speedlites with, 173–183
 - E-TTL II option, 172
 - Exp. Comp. option, 172
 - FEB option, 172
 - Flash mode option, 171
 - hot shoe, controlling flash in, 170–172
 - overview, 170
 - Shutter Sync option, 172
 - Zoom option, 172

- Spot metering mode, 146
 - SRAW image, 58
 - sRGB, 155–156
 - Standard picture style, 153, 154
 - Start/Stop button, 12
 - state parks, photographing animals at, 201–203
 - statistics for RAW file format, 58
 - steps
 - for landscape photography, 193
 - for selective focus, 199–200
 - still picture taken while recording movies, 102–103
 - student of photography, becoming a, 215
 - style, developing a, 196
 - style of picture
 - choosing, 152–154
 - customizing, 285–287
 - Faithful, 153, 154
 - Landscape, 153, 154
 - Monochrome, 153, 154
 - Neutral, 153, 154
 - Portrait, 153, 154
 - registering, 287
 - Standard, 153, 154
 - User-Created, 153
 - sunset photography
 - exposure compensation for, 197
 - lens for, 195
 - overview, 194–197
 - after sunset, shooting, 194–195
 - warnings for, 197
 - superstore printing services, 256
 - SyncBackSE, 238
- T •
- taking pictures
 - in Aperture Priority mode, 112–116
 - in Bulb mode, 120–122
 - in Live View mode, 89–95
 - in Programmed Auto Exposure mode, 110–112
 - in Shutter Priority mode, 116–118
 - television set, viewing images on a, 82–83
 - 10-Second Self-Timer/Remote Control
 - mode, 128, 129
 - text to images, adding, 295–297
 - themes, using, 210
 - third-party papers, printing with, 274
 - 35mm equivalent, 23
 - Thomas, J. Dennis (*Canon Speedlite System Digital Field Guide*), 173
 - time and date, changing, 25
 - time exposures
 - overview, 120
 - shooting, 120–122
 - time of day for landscape photography, 193
 - tips and tricks
 - author name added to camera, 281–283
 - cleaning your camera, 289–290
 - copyright information added to camera, 280–281
 - creativity, for increasing your, 210
 - custom menu, creating a, 277–279
 - editing movies in camera, 288–289
 - memory cards, maintaining, 294
 - for movies, 105
 - pet photography, 197–199
 - picture style
 - customizing, 285–287
 - registering, 287
 - portrait photography, 197–199
 - restoring default camera settings, 293–294
 - sensor, manually cleaning, 283–285
 - updating your camera's firmware, 290–291
 - user settings, registering, 291–293
 - for using batteries, 30
 - tone curve, adjusting, 242–243
 - top of camera controls
 - AF mode/Drive mode button, 11
 - Hot shoe, 12
 - ISO speed setting/Flash Exposure Compensation button, 11
 - LCD panel, 11
 - LCD Panel Illumination button, 10
 - Main dial, 10

- Metering Mode/White Balance button, 11
 - Mode dial, 12
 - Multi-function button, 10
 - overview, 10
 - Shutter button, 10
 - tracking wildlife, 203–204
 - triggering shutter remotely, 50
 - trimming images
 - in Canon Digital Professional Pro, 262–264
 - in ZoomBrowser EX, 261–262
 - tripods
 - alternatives, 305–306
 - human, 305
 - tungsten white balance option, 157
 - 2-Second Self-Timer/Remote Control mode, 128, 306
- U •
- Underdahl, Keith (*Digital Video For Dummies*), 102
 - updating your camera's firmware, 290–291
 - USB cable, 227
 - user settings, registering, 291–293
 - User-Created picture style, 153
- V •
- vantage point, determining best, 217–218
 - video dimensions, changing, 101–102
 - viewfinder
 - AE lock/AEB in progress icon, 19
 - Aperture icon, 20
 - Battery status icon, 19
 - Black and White icon, 20
 - clarity, adjusting, 24
 - Exposure compensation icon, 20
 - Flash exposure lock/FEB in progress icon, 19
 - Flash ready icon, 19
 - Focus confirmation light icon, 20
 - Highlight tone priority icon, 20
 - High-speed sync icon, 19
 - ISO speed setting icon, 20
 - Max burst icon, 20
 - overview, 18–19
 - Shutter speed icon, 20
 - White balance adjustment icon, 20
 - viewing images
 - as slideshow on LCD monitor, 79–81
 - on a television set, 82–83
 - in ZoomBrowser EX, 233–236
 - viewing information on your battery, 142–143
 - VisibleDust, 284
 - visualizing your images, 213
- W •
- wallpaper, creating computer, 301–302
 - warnings for sunset photography, 197
 - white balance
 - auto white balance option, 157
 - bracketing, 131–132
 - cloudy white balance option, 157
 - compensation, 129–131
 - custom white balance, creating, 158–160
 - custom white balance option, 157
 - daylight white balance option, 157
 - flash white balance option, 157
 - K white balance option, 157
 - overview, 156
 - setting, 156–157
 - shade white balance option, 157
 - tungsten white balance option, 157
 - white fluorescent white balance option, 157
 - White balance adjustment icon
 - LCD panel, 17
 - viewfinder, 20
 - white balance compensation, 129–131
 - White balance setting icon, 16
 - white fluorescent white balance option, 157
 - wildlife photography
 - birds, photographing, 207–208
 - long telephoto lenses, stabilizing camera when using, 204–206
 - Mirror Lockup, stabilizing camera with, 205–206
 - overview, 201

wildlife photography (*continued*)

- Self-Timer, stabilizing camera with, 204–205
- state parks, photographing animals at, 201–203
- tracking wildlife, 203–204
- zoo, photographing animals at, 206–207

● Z ●

- zone autofocus, 152
- zoo, photographing animals at, 206–207
- zoom lens
 - with barrel, 24
 - overview, 24
 - push/pull, 24
 - using, 24
- Zoom mode (ZoomBrowser EX), viewing images in, 233–234
- Zoom option (Speedlites), 172
- ZoomBrowser EX
 - CD, saving images to, 297–298
 - comments added to images, 232
 - comparing multiple images, 236–238
 - deleting images, 239
 - downloading your images for editing, 224–226
 - e-mail, sending images through, 298–299
 - exporting shooting properties, 300
 - folder, creating new image, 239
 - JPEG images edited in, 239–245
 - keywords added to images, 229–231
 - metadata added to images, 232
 - moving images, 239
 - organizing images, 239
 - overview, 223–224
 - Photoshop launched from, 251–254
 - Preview mode, viewing images in, 234–236
 - printing, finding images for, 257–259
 - printing from, 264–266
 - ranking images, 229
 - renaming images, 228–229
 - screensaver, creating computer, 303–304
 - Scroll mode, viewing images in, 234
 - slide show, creating, 304–305
 - text to images, adding, 295–297
 - trimming images in, 261–262
 - viewing images in, 233–236
 - wallpaper, creating computer, 301–302
 - Zoom mode, viewing images in, 233–234