

INDEX

A

A (Aperture Priority mode), 10, 22, 243
a1 - AF-C priority selection, 83
a2 - Built-in AF-assist illuminator, 83
a3 - Rangefinder, 83
abstract photography, 176–178
accessories
 for abstract photography, 178
 for action and sports photography, 182
 for landscape and nature photography, 192
 for macro photography, 196
 for night and low-light photography, 201
 for portrait photography, 206
 recommended, 237–240
action and sports photography, 178–183
Active D-Lighting (ADL)
 about, 17, 18, 77–78, 88, 137, 243
 Bracketing amount, 15, 16
 in Release mode, 79
 in scene modes, 26
Adams, Ansel (photographer), 229
Adobe RGB, 77
AE (Auto-Exposure), 12, 88, 89, 172, 243
AE-L/AF-L/Protect button, 5, 6
AF (Auto-Focus), 36–37, 88, 243, 244
AF, AF-D, AF-I, AF-S lens codes, 98
AF-A (Auto), 38
AF-Area Mode, 15, 17, 18, 165–166
AF-assist illuminator, 8, 9, 243
AF-C (continuous-servo), 37, 244
AF-F (full-time-servo), 165
AF-ON, 89
AF-S (single-servo), 38, 164–165
AI-AIS lens code, 98
AI-P lens code, 99
ambient lighting, 243
angle of view, 110, 243

aperture
 about, 12–16, 124, 128–130, 243
 in flash exposure, 153
 for night and low-light photography, 198
 settings for ISO equivalents, 173
 zoom lenses, 106
Aperture Priority mode (A), 10, 22, 243
aspect ratio, 244
Auto (AF-A), 38
Auto Bracketing, 17, 18, 88, 136
auto distortion control, 76
Auto image rotation feature, 93
Auto info display, 90
Auto meter off (GPS), 93
Auto modes, 10, 23–24
Auto-Exposure (AE), 12, 88, 89, 172, 243
Auto-Focus (AF), 36–37, 88, 243, 244
Autofocus Area Modes, 38–40
Autofocus switch, 10, 11
Autumn Colors mode, 28

B

b1 - EV steps for exposure cntrl., 84
backlighting, 146–147, 244
Balanced Fill-Flash (i-TTL BL), 154–155, 156
barrel distortion, 76, 111–112, 244
Battery indicator, 12, 13, 15, 16
Beach/Snow mode, 27
Beep indicator, 15, 16
black-and-white, 52, 53, 218
Blossom mode, 28
Blue intensifier effect, 218
bounce flash, 143, 244
bracketing
 Active D-Lighting, 15, 16
 auto, 17, 18, 88, 136
 defined, 244

bracketing (*continued*)
 exposure, 136–139
 for night and low-light photography, 198
 Bracketing indicator, 12, 13
 brightness (monitor), 90
 Brightness option, 51
 broad lighting, 244
 buffer, 12, 14
 built-in flash, 8, 9, 154–155

C

c1 - Shutter-release button AE-L, 84
 c2 - Auto off timers, 84–85
 c3 - Self-timer, 85
 c4 - Remote on duration, 85
 camera shake, 244
 Candlelight mode, 28
 capture mode, 12, 14
 catchlight, 244
 center-weighted meter, 35, 244
 Child mode, 10, 25
 chrominance, 127
 cleaning image sensors, 91
 close-up filters, 194
 Close-up mode, 10, 26
 clouds, 45, 148
 CLS (Creative Lighting System), 160–162
 codes (lens), 98–99
 Color Balance option (Retouch Menu), 219
 color checker, 242
 Color Matrix Metering II, 34–35
 Color outline option (Retouch Menu), 223
 Color Sketch mode, 29, 223
 color space, 76–77
 color temperature, 150
 Color toning option, 52, 53
 colored gel filters, 244
 Command dial, 5, 7
 commander flash, 161
 compatibility (lens), 100
 components (camera), 2–11
 composition
 about, 229–230
 helpful hints, 235
 leading lines, 233–234
 Rule of Thirds, 230–232
 S-curves, 233–234
 simplicity, 230
 compression, 56–57, 244
 concert photography, 183–189
 continuous lighting, 149–151
 continuous release, 79
 continuous shooting, 59
 continuous-servo (AF-C), 37, 244
 contrast, 37, 51, 244
 cool-white fluorescent, 71
 Creative Lighting System (CLS), 160–162

Cross screen effect, 218–219
 Custom Settings Menu (CSM)
 CSM a - Autofocus, 82
 CSM b - Exposure, 83
 CSM c - Timers/AE Lock, 84–85
 CSM d - Shooting/display, 86
 CSM e - Bracketing/flash, 87
 CSM f - Controls, 87–89
 cyanotype, 52, 53, 218

D

D lens code, 98
 d1 - Beep, 86
 d2 - ISO display, 86
 d3 - File number sequence, 86
 d4 - Exposure delay mode, 86
 d5 - Print date, 86
 D5100 (Nikon), 2–18. *See also specific topics*
 date, 15, 92
 day white fluorescent, 72
 daylight fluorescent, 72
 DC lens code, 99
 dedicated flash, 245
 default, restoring settings to, 6
 delayed remote, 80
 Delete (Picture Control), 75
 Delete button, 5, 7
 Delete option (Playback Menu), 62–63
 Delete option (Shooting Menu), 69
 depth of field (DoF)
 about, 227–229, 245
 dSLR cameras, 167
 wide angle lens, 110
 zoom lenses, 106
 detachable lenses, 103
 diffuse lighting, 245
 diffusion panel, 204
 Diopter adjustment control, 5, 6
 Direct sunlight white balance setting, 45
 directional lighting, 144–147
 Display mode options (Playback Menu), 64–65
 displays, 12–18
 distortion
 barrel, 76, 111–112, 244
 pincushion, 76, 247
 Distortion Control option (Retouch Menu), 223
 D-Lighting, 216, 245
 DoF (depth of field). *See* depth of field (DoF)
 downloading images, 214
 DPOF print order (Playback menu), 66–67
 dragging the shutter, 157
 Dusk/Dawn mode, 27
 DX, 245
 DX Crop factor, 101–103
 DX lens code, 99
 Dynamic-Area AF, 39–40

E

E lens code, 98
 e1 - Flash cntrl for built-in flash, 87
 e2 - Auto bracketing set, 87
 EC value, 12, 14
 ED lens code, 99
 Edit (Picture Control), 75
 Edit movie option (Retouch Menu), 226
 editing, 211, 214–226. *See also* viewing
 electronic flash. *See* flash
 environmental portraits, 111
 equivalent focal length, 245
 exposure
 about, 123–124, 130, 245
 for abstract photography, 178
 for action and sports photography, 182
 bracketing, 136–139
 compensation, 131
 for concert photography, 188
 flash, 153–154
 histograms, 131–136
 for landscape and nature photography, 192
 for macro photography, 196
 for night and low-light photography, 201
 for portrait photography, 206
 for still-life, product, and food photography, 210
 exposure bracketing, 136–139
 Exposure Compensation indicator, 12, 13
 Exposure Compensation/Aperture button, 3, 4
 Exposure indicator/Rangefinder, 12, 13
 Exposure meter/bracketing progress, 15, 16
 exposure modes
 about, 20, 245
 Aperture Priority (A), 10, 22, 243
 Auto modes, 23–24
 Manual (M), 23, 38
 Programmed Auto (P), 10, 20–21, 247
 Scene modes, 24–28
 Shutter Priority (S), 10, 22–23, 248
 special effects, 28–31
 Eye-fi connection, 15, 16
 Eye-fi Upload feature, 94

F

f1 - Assign self-timer/FUNC. button, 87–88
 f2 - Assign AE-L/AF-L button, 88–89
 f3 - Reverse dial rotation, 89
 f4 - Slot empty release lock, 89
 f5 - Reverse indicators, 89
 Face-priority AF, 165
 FEC (Flash Exposure Compensation), 12–14, 17,
 18, 131, 159–160, 245
 field of view, 110, 243
 fill flash, 148, 156, 204, 245
 fill lighting, 245
 film speed. *See* ISO

Filter Effects option, 51, 218–219
 filters, 194, 244
 fireworks, 199–200
 Firmware version, 94
 Fisheye option (Retouch Menu), 223
 5:4 ratio, 217
 flash
 about, 152–153, 245
 for action and sports photography, 181
 bounce, 143, 244
 built-in, 8, 9, 154–155
 commander, 161
 for concert photography, 185
 dedicated, 245
 exposure, 153–154
 fill, 148, 156, 204, 245
 Flash Exposure Compensation (FEC), 12–14,
 17, 18, 131, 159–160, 245
 output level, 245
 sync modes, 155–159
 Flash Exposure Compensation (FEC), 12–14, 17,
 18, 131, 159–160, 245
 Flash pop-up/Flash mode/FEC button, 9, 10
 Flash ready indicator, 12, 14
 Flash Sync Modes, 17, 18
 Flash white balance setting, 45
 Flexible Program indicator, 12–13
 flicker reduction, 92, 170
 fluorescent lights, 149, 151, 170
 Fluorescent white balance setting, 45
 Focal length indicators, 3, 4
 focus, 12, 30, 83
 Focus ring, 3, 4
 food, product, and still-life photography, 28,
 206–210
 formatting memory cards, 89–90
 4:3 ratio, 217
 frame rate, 168–169
 Front-curtain sync, 157, 245
 frontlighting, 144–145, 246
 f-stop
 about, 12–16, 124, 128–130, 243
 in flash exposure, 153
 for night and low-light photography, 198
 settings for ISO equivalents, 173
 zoom lenses, 106
 full-time-servo AF (AF-F), 165
 Function (Fn) button, 10, 11

G

G lens code, 98
 ghosting, 157
 GN (Guide Number), 153
 golden hour, 189
 GP-1 GPS unit, 240
 GPS, 15, 16, 93

GPS/Accessory input, 10, 11
 gray card, 241–242
 Green intensifier effect, 218
 Green option, 51

H

H2 setting, 41
 halogen lights, 149, 150–151
 hard light, 143–144
 HDMI, 10, 11, 92
 HDR (High Dynamic Range), 12, 14, 78, 137–139
 HDR indicator, 15, 16
 HDR Mode, 32–33, 88
 HDTV, 213–214
 heat-generated noise, 126–128
 Hi0.3, Hi0.7, Hi1 settings, 41
 High ISO NR, 43, 78, 127
 High Key mode, 31
 Highlights option (Playback Menu), 64
 histograms, 131–136, 246
 hot shoe, 3, 4, 246
 HSM (Hyper-Sonic Motor), 100
 Hue option, 51

I

IF lens code, 99
 Image Comment feature, 92
 Image Dust Off ref photo feature, 93
 Image Overlay option (Retouch Menu), 219–220
 Image review (Playback Menu), 65
 image sensors, cleaning, 91
 images
 deleting, 62–63
 downloading, 214
 quality, 17, 18, 58, 60, 69, 88, 104, 167
 resolution, 69
 16-bit, 59
 size, 17, 18, 57–58, 69–70, 88
 in-camera editing, 211, 214–226. *See also* viewing
 incandescent lights, 149, 150–151
 Incandescent white balance setting, 45
 indoor portraits, 202–203
 Info button, 3–6
 Info display format, 14–18, 90
 infrared receiver, 5, 6, 8, 9
 interchangeable lenses, 167
 interlaced, compared with progressive, 168
 interval timer shooting, 81–82
 ISO
 about, 17, 18, 40–41, 88, 126–128
 auto, 12, 14, 41–42
 for concert photography, 184
 defined, 124, 246
 noise reduction, 42–43

settings, 12, 14, 78–79
 video, 173

i-TTL BL (Balanced Fill-Flash), 154–155, 156

J

jello, 169, 170
 JPEG (Joint Photographic Experts Group)
 about, 56–57, 246
 compared with RAW, 58–60
 image quality, 58
 image size, 57–58
 options, 69
 using with Special Effects, 28

K

K icon, 15, 16
 Kelvin, 44, 246
 kit lenses, 103–104

L

lamp life, 150
 landscape and nature photography, 25, 50, 74, 189–192
 language, 92
 leading lines, 233–234, 246
 lens flare, 246
 Lens mounting mark, 10, 11
 Lens release button, 8, 9
 lenses
 about, 97–98
 for abstract photography, 178
 for action and sports photography, 182
 compatibility, 100
 for concert photography, 185, 188
 detachable, 103
 DX Crop factor, 101–103
 interchangeable, 167
 kit, 103–104
 for landscape and nature photography, 192
 for macro photography, 117–120, 194, 196, 246
 midrange, 112–114
 for night and low-light photography, 198, 201
 Nikon codes, 98–99
 non-CPU, 21
 for portrait photography, 203, 206
 standard, 112–114
 for still-life, product, and food photography, 210
 super zooms, 117–118
 telephoto, 115–116
 third-party, 100–101
 ultrawide-angle, 108–112
 vibration reduction, 120–121
 wide-angle, 108–112, 181
 zoom compared with prime, 104–108
 lighting. *See also* flash
 about, 141–142
 for abstract photography, 177

for action and sports photography, 182
 ambient, 243
 in Aperture Priority mode, 22
 broad, 244
 for concert photography, 184, 185, 188
 continuous, 149–151
 Creative Lighting System (CLS), 160–162
 diffuse, 245
 directional, 144–147
 D-Lighting, 216, 245
 fill, 245
 fluorescent, 149, 151, 170
 frontlighting, 144–145, 246
 halogen, 149, 150–151
 hard, 143–144
 incandescent, 149, 150–151
 for landscape and nature photography, 191
 for macro photography, 196
 modifiers, 149, 150, 152
 natural, 148–149
 for night and low-light photography, 201
 for portrait photography, 205
 in Programmed Auto mode, 21
 quality, 142–144, 189
 ratio, 246
 short, 248
 in Shutter Priority mode, 23
 sidelighting, 146, 248
 soft, 142–143
 for still-life, product, and food photography,
 206–207, 209
 tungsten, 149
 for video, 238–239
 window, 148, 203
 Litepanels, 239
 Live View, 2, 3, 163–166. *See also* video
 Load/save (Picture Control), 76
 locking mirror for cleaning, 91
 Long Exposure NR, 42–43, 78
 long option, 84
 Low Key mode, 31
 low-light and night photography, 197–201
 luminance, 127
 luminance histogram, 132

M

M (Manual) mode, 10, 23, 38
 macro lenses, 117–120, 194, 196, 246
 macro photography, 192–197
 Manual flash indicator, 15
 master flash, 161
 Matrix metering mode, 33–35, 247
 MC (Monochrome setting), 50, 74
 Memory card access lamp, 5, 7
 memory cards, 6, 89–90
 Menu button, 5, 6
 menus. *See specific menus*

metering, 17, 18, 33–36, 247
 Micro-Nikkor lens code, 99
 microphone, 10, 11, 81
 midrange lenses, 112–114
 Miniature Effect mode, 29–30, 224
 mirror, locking for cleaning, 91
 ML-L3 Wireless Remote Release, 237, 238
 Mode dial, 2, 3
 modifiers, 149, 150, 152
 monitor brightness, 90
 Monochrome option (Retouch Menu), 218
 Monochrome setting (MC), 50, 74
 Movie-record button, 2, 3
 multiple exposures, 15, 16, 80
 Multi-selector, 5, 7

N

N lens code, 99
 natural light, 148–149
 nature and landscape photography, 189–192
 NEF (RAW), 43, 58–60, 69, 247
 NEF (RAW) + JPEG options, 69
 NEF (RAW) processing option (Retouch Menu),
 220–221
 Neutral setting (NL), 50, 74
 New option (Shooting Menu), 68
 night and low-light photography, 10, 26–27, 29,
 197–201
 Nikkor lenses, 110, 113, 116, 119
 Nikon D5100, 2–18. *See also specific topics*
 Nikon lenses, 113
 Nikon ME-1, 239–240
 NL (Neutral setting), 50, 74
 noise, 126–128, 247
 noise reduction (NR), 42–43, 247
 non-CPU lenses, 21
 nonobjective abstract art, 176
 normal option, 84
 Normal-area AF, 166
 number of intervals, 82

O

objective abstract art, 176
 OK button, 5, 7
 1:1 ratio, 217
 On/Off switch, 2, 3, 82
 opening up, 104, 129
 Orange option, 51
 outdoor portraits, 203–204
 Outlines controls, 29
 overriding Auto ISO setting, 24

P

P (Programmed Auto mode), 10, 20–21, 247
 panning, for action and sports photography, 180
 partial exposure, 169
 Party/Indoor mode, 27

Perspective control option (Retouch Menu), 224
 perspective distortion, 110, 111
 Pet Portrait mode, 27
 phase detection, 36–37
 photography. *See specific types*
 Picture Controls, 17, 18, 49–56, 74–76, 170
 pincushion distortion, 76, 247
 playback (video), 174
 Playback button, 5, 7
 Playback Menu
 about, 62
 Delete option, 62–63
 DPOF print order, 66–67
 Image review, 65
 playback display options, 64–65
 Playback folder, 63–64
 Rotate tall, 65
 slide show, 66
 portrait photography, 10, 25, 50, 74, 202–206
 Position (GPS), 93
 post-processing, 59
 preset manual, 45, 72–73
 prime lenses, compared with zoom lenses, 104–108
 print sets, creating, 66–67
 printing from camera, 59
 product, still-life, and food photography, 206–210
 Programmed Auto mode (P), 10, 20–21, 247
 progressive, compared with interlaced, 168
 Protect/Help button, 82
 pulse modulation, 161

Q

quality
 image, 17, 18, 58, 60, 69, 88, 104, 167
 lighting, 142–144, 189
 video, 81
 zoom lenses, 106–107
 Quality setting (video), 170
 Quick adjust option, 50
 Quick Retouch option (Retouch Menu), 222
 quick-response remote, 80

R

RAW files, 28, 67, 247. *See also* NEF (RAW)
 Rear-curtain sync, 159, 247
 Recent settings/My Menu, 94–96
 recording, 29, 171
 Red intensifier effect, 218
 Red option, 51
 Red-eye correction option (Retouch Menu), 217
 Red-Eye Reduction, 159, 247
 reflector, 152, 204
 Release mode, 17, 18, 79–80, 87
 Remaining exposures, 15, 16
 Rename (Picture Control), 75
 Rename option (Shooting Menu), 68

Resize option (Retouch Menu), 221–222
 resolution (image), 69
 Retouch Menu
 about, 94, 214–216
 NEF (RAW) processing, 220–221
 options
 Color Balance, 219
 Color outline, 223
 Color sketch, 223
 Distortion Control, 223
 D-Lighting, 216
 Edit movie, 226
 Filter effects, 218–219
 Fisheye, 223
 Image Overlay, 219–220
 Miniature effect option, 224
 Monochrome, 218
 Perspective control, 224
 Quick Retouch, 222
 Red-eye correction, 217
 Resize, 221–222
 Selective Color, 224–225
 Side-by-side comparison, 226
 Straighten, 222
 Trim, 217

reversing ring, 194
 RGB Histogram (Playback Menu), 64
 Rotate tall (Playback Menu), 65
 Rule of Odds, 207
 Rule of Thirds, 230–232
 rules of composition
 about, 229–230
 helpful hints, 235
 leading lines, 233–234
 Rule of Thirds, 230–232
 S-curves, 233–234
 simplicity, 230

S

S (Shutter Priority mode), 10, 22–23, 248
 saturation, 51, 60
 Save (Picture Control), 75
 Scene modes, 24–28
 S-curves, 233–234
 SD (Standard Picture Control), 50, 74
 Select folder option (Shooting Menu), 68
 Selective Color mode, 30–31, 224–225
 self-timer, 79, 87, 247
 sensitivity. *See* ISO
 sepia, 52, 53, 218
 sequence shots, 25
 setting(s)
 about, 61
 for abstract photography, 177, 178
 for action and sports photography, 182
 Auto Bracketing, 136, 137
 for concert photography, 188

- custom My Menu, 95
- Custom Settings Menu (CSM)
 - CSM a - Autofocus, 82
 - CSM b - Exposure, 83
 - CSM c - Timers/AE Lock, 84–85
 - CSM d - Shooting/display, 86
 - CSM e - Bracketing/flash, 87
 - CSM f - Controls, 87–89
- Information Display, 17–18
- ISO sensitivity, 78–79
 - for landscape and nature photography, 191, 192
 - for macro photography, 196
 - movie, 81
 - for night and low-light photography, 201
- Picture Control, 74–75
- Playback Menu. *See* Playback Menu
 - for portrait photography, 205, 206
- Recent settings/My Menu, 94–96
- Retouch Menu. *See* Retouch Menu
- Setup Menu. *See* Setup Menu
- Shooting Menu. *See* Shooting Menu
 - for still-life, product, and food photography, 209, 210
- Video mode, 212
 - white balance, 44–49, 70–72
- Setup Menu
 - about, 89
 - auto image rotation, 93
 - Auto info display, 90
 - cleaning image sensors, 91
 - Eye-fi Upload, 94
 - Firmware version, 94
 - Flicker reduction, 92
 - formatting memory cards, 89–90
 - GPS, 93
 - HDMI, 92
 - image content, 92
 - Image Dust Off ref photo, 93
 - Info display format, 90
 - language, 92
 - locking mirror for cleaning, 91
 - monitoring brightness, 90
 - time zone and date, 92
 - Video mode, 91
- shade, 148, 204
- Shade white balance setting, 45
- shadow edge transfer, 142
- sharpening, 51, 60, 107
- Shooting data (Playback Menu), 64
- Shooting Menu
 - about, 67
 - Active D-Lighting, 77–78
 - Auto distortion control, 76
 - color space, 76–77
 - HDR (High Dynamic Range), 78
 - High ISO NR, 78
 - image quality, 69–70
 - interval timer shooting, 81–82
 - ISO sensitivity settings, 78–79
 - Long Exposure NR, 78
 - managing Picture Control, 75–76
 - movie settings, 81
 - multiple exposure, 80
 - Release mode, 79–80
 - resetting, 67
 - setting Picture Control, 74–75
 - Storage folder, 67–69
 - white balance, 70–73
 - Shooting mode, 15, 171
 - short lighting, 248
 - short option, 84
 - shots per interval, 82
 - Shots remaining, 12, 14
 - shutter, 169–170, 248
 - Shutter Priority mode (S), 10, 22–23, 248
 - Shutter Release button, 2, 3
 - shutter speed
 - about, 12, 13, 15, 16, 124–125, 248
 - for action and sports photography, 179
 - for night and low-light photography, 198
 - in Release mode, 79
 - for video, 174
- Side-by-side comparison option (Retouch Menu), 226
- sidelighting, 146, 248
- Sigma lenses, 110, 113, 116, 120
- Silhouette mode, 31
- single frame, 79
- Single-point AF, 39
- single-servo (AF-S), 38, 164–165
- 16:9 ratio, 217
- 16-bit images, 59
- skew, 169
- Skylight filter, 218
- Slide show (Playback Menu), 66
- Slow sync mode, 157–159, 248
- Sodium-vapor lamps, 71
- soft corners, 111, 219
- soft light, 142–143
- softbox, 152
- sound (video), 170–172
- Speaker, 3, 4
- Special Effects feature, 28–31
- speed (prime lenses), 107
- speedlights, 152, 153, 203, 204, 248
- sports and action photography, 25, 178–183
- spot meter, 35–36, 147, 184, 248
- “spray and pray” technique, 179
- sRGB, 76
- standard lenses, 112–114
- Standard (SD) Picture Control, 50, 74
- standard TV, 212–213
- starting time, 82
- Steadicam, 237–238
- still-life, product, and food photography, 206–210

stopping down, 104, 124, 129
 storage folder (Shooting Menu), 67–69
 Straighten option (Retouch Menu), 222
 Subject-tracking AF, 166
 Sunset mode, 27
 super zoom lenses, 117–118
 sync modes (flash), 155–159
 Sync speed, 155–157

T

Tamron lenses, 113, 120
 telephoto lenses, 115–116
 thermal noise, 126–128
 third-party lenses, 100–101
 3:2 ratio, 217
 3D Color Matrix Metering II, 34
 3D-tracking (11 points), 40
 Thumbnail Zoom out, 5, 7
 time zone, 92
 Tokina lenses, 110
 Toning option, 52
 Trim option (Retouch Menu), 217
 TTL (Through-the-Lens), 87, 248
 tungsten lights, 149
 TV (standard), 212–213

U

ultrawide-angle lenses, 108–112
 umbrella, 152
 uploading Custom Picture Controls, 55–56
 USB/AV port, 10, 11

V

vanishing point, 248
 Vari-Angle LCD monitor, 5, 6
 VI (Vivid setting), 50
 Vibration Reduction (VR), 120–121, 248
 video

- about, 166–168
- accessories, 237–239
- frame rate, 168–169
- lighting, 238–239
- playback, 174
- progressive compared with interlaced, 168
- quality, 81
- recording, 29, 171
- settings, 81, 170–171
- shutter, 169–170

- sound, 171–172
- tricks, tips, and workarounds, 172–174

Video mode, 91
 Viewfinder, 5, 6, 12–14
 viewing. *See also* in-camera editing
 about, 211–212
 downloading images, 214
 HDTV, 213–214
 RGB histograms, 135
 standard TV, 212–213

vignetting, 111
 Vivid setting (VI), 50
 Vividness controls, 29
 VR (Vibration Reduction), 120–121, 248
 VR lens code, 99, 104
 VR switch, 10, 11

W

Warm filter, 218
 warm-white fluorescent, 71
 Warning indicator, 12, 14
 Weston, Edward (photographer), 229
 white balance (WB)
 about, 17, 18, 44, 88, 248
 bracketing, 136
 copying, 73
 Kelvin, 44
 preset manual, 72–73
 RAW compared with JPEG, 60
 recording, 12, 14
 in scene modes, 26
 settings, 44–49
 standard settings, 70–72
 taking direct measurements for, 72–73
 white fluorescent, 71
 wide-angle lenses, 108–112, 181
 Wide-area AF, 166
 window lighting, 148, 203

Y

Yellow option, 51

Z

Zoom in button, 5, 7–8
 zoom lenses, compared with prime lenses,
 104–108
 Zoom ring, 3, 4