

# Index

## • Numerics •

- 4-cylinder traverse engine, cylinder sequence and firing order in, 90
- 6-cylinder rear-wheel drive engines, cylinder sequence and firing order in, 90

## • A •

- ABS (anti-lock braking system). *See* anti-lock braking system (ABS)
- accelerator, 336–337
- accessory belts
  - adjusting and replacing, 229–230
  - checking, 32–33
  - importance of checking regularly, 29
  - keeping spare set with vehicle, 61
  - serpentine multiaccessory drive belt, 33
  - for water pumps, 200
- acrylic or enamel finishes, cleaning and polishing, 438
- adaptive cruise control (ACC), 382
- adaptive front lighting systems (AFS). *See also* headlights
  - future availability of, 98
- adjustable devices, for vehicles, 368–369
- adjustable vice-grip pliers, for toolbox, 54
- adjustable wrenches, 53
  - for removing oil drain plug, 243
- adjusting nut, replacing when reassembling drum brakes, 277
- ADS (Association of Diesel Specialists), for list of authorized shops, 414
- air bag inflator, 364
- air bags, 362–368
  - correct seating position for, 363
  - how they work, 363–364
  - ON-OFF switches for, 364–365
  - replacing, 365
  - traveling safely with, 362–363
- air cleaner, 31. *See also* air filter
  - air filter on carbureted vehicles, 32
  - in fuel system, 69
- air conditioners
  - converting from Freon to R-134a refrigerant, 232
  - servicing, 100, 231–232
  - signs of trouble in, 232
- air filters
  - buying and replacing, 148–149
  - checking, 31–32
  - checking and cleaning, 147
  - and cold air collector box, 129
  - in fuel systems, 145
  - inside air cleaner on carbureted vehicles, 32
  - inside cold air collector box, 146
  - location of under the hood, 30
  - maintaining, 146–148
- air inlet duct, in fuel systems, 146
- air inlet hose, 146
- air intake duct, 129
- air pressure, checking for tires, 44
- air springs, in suspension systems, 304–305
- air suspension systems, anatomy of, 309
- alignment
  - camber and caster, 330
  - determining need for, 331
  - toe-in and toe-out, 330
  - turning radius, 330–331
  - of wheels, 329–331
- alloy wheels, potential damage to, 319
- all-wheel drive (AWD) vehicles, 341–342
  - vs. four-wheel drive vehicles, 341
- alternative fuels, how to find, 183
- alternatively fueled vehicles, 66, 181–192
- alternator
  - checking accessory belt that drives, 32–33
  - diagram of, 87
  - other parts electrical current supplied to by, 97
  - as part of charging system, 68–69, 86–88
  - systems run by, 88
- alternator warning light, troubleshooting, 408
- aluminum cylinder head, changing spark plugs in, 102
- aluminum engines, coolant requirements for, 213
- American Petroleum Institute (API), oil classification codes by, 237–238
- antifreeze. *See* coolants
- anti-lock braking system (ABS), 76, 260–261. *See also*
  - brake systems
  - checking, 289–290
  - checking fluid for, 42
  - how they work, 261
  - used by traction control system, 378
  - what they don't do, 261
- anti-sway bars, in suspension system, 301
- API donut symbol, on oil containers, 237
- armature, in electronic ignition systems with distributor, 96
- ASA (National Automotive Service Association), Web site address, 414

- ASE certification programs, for auto repair technicians, 413–414
  - auto accidents, recording evidence for, 64
  - auto repair
    - considerations before tackling any job, 12
    - lessons on busting things loose, 12
    - things every driver should know, 11–28
  - Auto Repair For Dummies*
    - about the book, 1–2
    - conventions used in, 3–4
    - icons used in, 7–8
    - organization of, 4–7
  - auto repair toolbox, materials to keep in, 60–64
  - automatic transmission fluid
    - checking, 40
    - remedies to try, 352
    - viscosity, 40
  - automatic transmissions, 335
    - basic features of, 346–350
    - clutch action for, 71
    - cutaway view of, 347
    - importance of servicing regularly, 354
    - low-transmission-fluid blues, 352–353
    - servicing levels for, 352
  - automobiles, what makes them run, 73–75
  - axle, in rear-wheel drive vehicles, 71
  - axle bearings, hearing worn, 283
- B •**
- back-up beepers and sensors, 376
  - back-up cameras and monitors, 376
  - ball joints, in steering linkage, 295
  - batteries
    - buying right one for your vehicle, 115
    - checking, 33–36
    - cleaning deposits, 35
    - cutaway view of, 84
    - deciding if you should replace yourself, 114
    - disconnecting before working on, 34
    - in electrical system, 68–69
    - in starting system, 83–84
    - jump-starting on diesel-powered vehicles, 176–177
    - location of under the hood, 30, 114
    - maintaining power after disconnecting, 34
    - parts to check, 34
    - recycling, 116
    - removing old and installing new, 115–116
    - safety precautions for working on, 33–34
    - under-the-hood view, 82
  - battery cables, 84
    - checking for damage, 36
    - disconnecting to prevent shock, 34
    - removing and replacing, 34
  - battery terminals
    - brush for cleaning battery posts and clamps, 35
    - positive and negative, 84
  - battery warmers, for diesel engines, 179
  - bead and bead bundle, of tires, 312
  - belts. *See also* accessory belts
    - checking, 32–33
    - importance of checking regularly, 29
    - location of under the hood, 30
    - serpentine multiaccessory drive belt, 33
    - of tires, 312–313
  - Better Business Bureau, Web site address, 414
  - bias-belted tires, 313
  - bias-ply tires, 313
  - biodiesel fuel. *See also* diesel fuel
    - advantages of, 170
  - blade-type fuses, 118
  - bleeder screws
    - for bleeding cooling system, 224
    - finding to bleed brakes, 285
  - bleeder wrenches, 285–286
  - bleeding cooling system, 224
  - blind-spot information systems (BLIS), 377–378
  - block heaters, for diesel engines, 178
  - blue book. *See also* Kelly Blue Book; Edmunds Blue Book
    - checking for vehicle value, 226–227
  - body shops
    - checking finished bodywork, 462
    - choosing parts for repairs, 461
    - evaluating, 460–461
    - getting estimates from, 460
  - bodywork, 449–462
  - Bondo, for filling small dents and holes, 454
  - booster seats and child safety seats, 370–374
  - Bose acoustic suspension systems, 309
  - box-end wrenches, 51–52
  - Brake Assist (BA), brake systems, 262
  - brake bleeder screws. *See* bleeder screws
  - brake booster
    - in brake system, 77
    - location of under the hood, 41
    - for power brakes, 251
  - brake calipers
    - in brake system, 77
    - checking, 278
  - brake disc, checking for wear, 278
  - brake drums
    - anatomy of, 275
    - how they work, 255
    - replacing adjusting nut when reassembling, 277
    - things you need to remove to get at, 273
  - brake fluid
    - in brake systems, 253–254
    - buying and using, 284
    - checking, 41–43
    - checking in your master cylinder, 268–270
    - dangers of, 284
    - disposing of, 43
    - flushing and changing, 284–285
    - location of under the hood, 30
  - brake lines
    - in brake system, 77, 253
    - checking, 270–271

- brake linings. *See also* brake shoes and linings; brake systems; drum brakes  
for drum brakes, 256–257
- brake master cylinder. *See* master cylinder
- brake pads, in brake system, 77
- brake pedal, 250–251  
in brake system, 77  
checking, 265–267
- brake rotor. *See* brake disc
- brake shoes and linings  
checking, 276  
for drum brakes, 256
- brake systems  
anatomy of with drum and disc brakes, 250  
basics of, 249–254  
bleeding your brakes, 285–287  
checking, 264–271  
checking your master cylinder, 267–270  
components of, 77  
electronic brakeforce distribution (EBD), 262  
flushing and changing brake fluid, 284–285  
getting at your brakes, 271–279  
for making your vehicle stop, 77–78  
other electronic, 262  
power brakes, 251  
questions to ask when testing brake pedal, 266–267  
regenerative, 262  
steps for stopping a vehicle, 77  
types of, 76
- brake warning light switch, in brake system, 76
- brakes  
checking, 271–279  
extending the life of, 264  
things to do and not to do when working on, 271–273
- brake-shift interlocks, 378
- breakdowns, handling safely, 397–400
- ● ●
- calipers, in brake system, 77
- camera, for recording accident evidence, 64
- car covers, buying tips, 448
- car washes, adjusting do-it-yourself high-pressure hoses, 429
- carburetors, in older vehicle fuel systems, 69, 125
- carpeting and upholstery, cleaning, 444–445
- catalytic converter  
for diesel engines, 172  
in exhaust system, 75, 143–144  
needed by GDI system, 133  
troubleshooting, 155–156
- cellphone, for calling for assistance, 64
- cellulosic ethanol, 182
- cetane, diesel fuel rated by, 169
- CFC-12 refrigerant, phase out of, 202
- chain and department stores, choosing for vehicle service, 411
- charging system, 86–88  
alternator in, 68–69  
diagram of, 87  
under-the-hood view, 82
- Check Engine light, 203. *See also* malfunction indicator lights (MIL); warning lights  
troubleshooting, 400
- checklists  
Monthly Under-the-Hood, 510  
Tune-up, 510  
Lubrication and Brake, 511
- child safety seats  
and booster seats, 370–374  
choosing, 372–374  
finding top-rated, 372  
fitting stations, finding, 374  
harnesses and anchoring systems, 373–374  
ISOFIX connections for, 373–374  
LATCH system for, 373  
requirements for, 370–372  
testing before purchasing, 374
- Child Seat Fitting Stations, finding, 374
- Chilton's Web site address, 67
- Ci-4 Plus oil, for diesel engines, 237
- circuits and fuses, in starting system, 82
- cleaners  
safety rules when working with, 15  
using gentle for car cleaning, 433
- cleaning engines, tips for doing it yourself, 441–442
- cleaning your car, 429–448. *See also* washing your car  
acrylic or enamel finishes, 438  
biodegradable cleaners for, 430–431  
caring for headliners, 446–447  
safety rules for working with, 15  
cleaning and repairing convertible tops, 436–437  
clear coat and other delicate finishes, 438  
convertible tops and plastic windows, 435  
de-bugging safely, 431  
electric buffers for, 438  
exterior, 431–441  
fighting stains and odors, 445–446  
final touches, 447  
floor mats, 447  
hiring someone to do it, 430  
inside the windows, 447  
interior, 442–447  
keeping things tidy, 443–444  
leather seats, 445  
polishing metal trim and chrome, 435  
repairing tears and holes in seats, 446  
safety tips for using commercial products, 432  
tires and wheels, 436  
upholstery and carpeting, 444–445  
vinyl and plastic, 445  
vinyl tops, 437  
washing the vehicle body, 432–434  
and waxing or sealing, 434, 440–441  
windows and mirrors, 434–435
- clear coat and other delicate finishes, cleaning and polishing, 432–433, 438

- clutch
  - action in four-stroke power cycle engine, 139
  - and clutch pedal in drive train, 338
  - components of, 343–344
  - for manual transmission vehicles, 71
  - pedal free-play, 353
  - taking care of, 353–354
- clutch disk and pedal, in manual transmissions, 344
- clutch pressure plate, in manual transmissions, 344
- clutch release arm, in manual transmissions, 344
- CNG stations, finding, 191
- CO<sub>2</sub> refrigerant system, in prototype stage, 202
- coil springs, in suspension systems, 303–304
- cold air collector box, 31. *See also* air filters and air filter, 129
  - checking and cleaning air filter and, 147
  - in fuel systems, 146
  - removing air filter from, 146
- collision mitigation systems, 382
- collision warning with brake support (CWBS), used by some adaptive cruise control systems, 382
- combination hybrids, 184–185
- combination slip-joint pliers, for your toolbox, 53–54
- combination wrenches, 51–52
- combo air bags, 368
- combustion chamber
  - in four-stroke power cycle engine, 139
  - fuel delivered to, 125
- complaints
  - getting satisfaction on, 422–424
  - going to higher level with, 424–426
  - going to Federal Trade Commission (FTC), 426
- compressed natural gas (CNG) measured in gasoline-gallon equivalents (GGE), 191
- used in natural gas vehicles, 191
- compression gauges
  - for checking compression in cylinders, 157
  - for checking engine pressure, 56–57
  - how to use, 158–159
- compression ratio, in four-stroke power cycle engine, 139
- compression stroke, in four-stroke power cycle engine, 139. *See also* four-stroke power cycle
- computer. *See* engine control unit (ECU)
- connecting rods
  - at bottom of piston, 74
  - in four-stroke power cycle engine, 139
- Consumer Action Handbook, Web site address, 426
- Consumer Federation of America, Web site address, 426
- continuously variable transmissions (CVTs), 335
- components of, 349–350
- control arms
  - in steering linkage, 295
  - in suspension system, 301
- convertible tops and plastic windows, cleaning and repairing, 437
- coolant disposal, 214
- coolant hoses, keeping spare set with vehicle, 61
- coolant hydrometer, 211–212
- coolant protection level tester, 211
- coolant recovery system, 198
  - checking and adding liquid to, 209
  - in cooling system, 74
  - location of reservoir under the hood, 30, 207
  - removing cap from, 206–208
  - water and coolant mixture for, 36
- coolant/antifreeze, for cooling system, 196–197
- coolants. *See also* coolant recovery system; cooling system; radiator
  - checking, 36–37
  - checking reservoir level for, 36
  - figuring out how much you need, 212–213
  - ideal mixture of water and, 208
  - importance of checking regularly, 29
  - importance of not overfilling, 208
  - proper mixture of, 36
  - protecting children and animals from, 213–214
  - reasons to change, 37, 212
  - safe storage and disposal of used, 214
  - safety rules when working with, 15
  - safety warning, 37
  - toxicity of, 211
- cooling system. *See also* overheating
  - anatomy of, 196
  - avoiding disaster when adding liquid to, 208–209
  - bleeder screws, 225
  - bleeding, 224
  - buying and replacing hoses and hose clamps, 219–225
  - checking and adding liquid to, 36–37, 206–210
  - checking for internal engine leaks, 227–228
  - checking for leaks and other problems, 217
  - checking reservoir level for, 36
  - components of, 74–75
  - coolant/antifreeze, 196–197
  - dealing with overheating problems, 203–232
  - determining if coolant needs changing, 211
  - fan as part of, 199–200
  - finding leaks in, 216–219
  - flushing and changing coolant, 210–216
  - leaks in engine-block core plugs, 226–227
  - locating leaks by pressure testing, 228–229
  - pros and cons of flushing it yourself, 210
  - radiator as part of, 197–198
  - removing pressure cap safely, 206–208
  - repairing leaks in, 225–229

- thermostat as part of, 200–201
  - up close, 195–202
  - using sealer for small leaks in, 226
  - water pump as part of, 200
  - core plugs, location of, 226
  - crankcase
    - crankshaft and oil pan housed in, 137
    - in front-wheel drive vehicles, 71
  - crankshaft
    - connecting rod attached to, 70
    - in drive train, 338
    - housed in crankcase, 137
    - sensor in distributorless electronic ignition system, 93–94
  - crash sensors, for air bags, 364
  - creasant wrenches, 53
  - creepers, 20
    - using for auto repairs, 59–60
  - crumple zones, for added safety in vehicles, 368
  - curtain and tubular air bags, protection afforded by, 367
  - cylinder heads
    - in engine block, 135
    - in front-wheel drive vehicles, 71
    - leaks under, 227
  - cylinder sequence. *See also* ignition systems
    - of engines, 89–92, 137
    - versus firing order, 92
    - and firing order in traverse 4-cylinder engine, 90
    - and firing order in traverse V-6 engines, 92
    - and firing order in traverse V-8 engines, 92
    - and firing order in V-8 engines, 91
  - cylinders
    - anatomy of, 136
    - checking compression in, 156–159
    - fuel/air mixture passed to, 70, 85
    - gauge for checking pressure in, 56–57
    - parts in, 137
- D •**
- dealerships, choosing for vehicle service, 410–411
  - deflecting beam torque wrench, 52
  - de-icer, keeping can of with vehicle, 63
  - dents and dings
    - Bondo, 454
    - dealing with, 449–462
    - filling and painting small, 453–455
    - paintless dent-repair specialists, 453
    - removing small, 453
  - Department of Transportation's Vehicle Hotline, for complaints, 426
  - dial torque wrench, 52
  - Diesel, Rudolph, engine designed by, 170
  - diesel engines, 66
    - battery warmers for, 179
    - block heaters for, 178
    - caring for, 173–177
    - changing the fuel filter, 175
    - changing the lubricating oil, 174–175
    - Ci-4 Plus oil, 237
    - clean nontoxic newcomers, 161–162
    - common rail fuel injection system, 167
    - diesel oxide catalytic converter, 172
    - draining water separators, 176
    - electrical system, 171
    - emissions control systems, 171–173
    - finding reliable mechanic for, 180
    - four-stroke power cycle, 168
    - fuel filter in, 166
    - fuel system in, 167–171
    - glow plugs for, 165
    - how they work, 165–167
    - particulate filter, 172
    - pros and cons of, 162–164
    - starting on frosty mornings, 178–179
    - what makes them go, 164–167
  - diesel fuel, 168–176. *See also* biodiesel fuel
    - emergency substitutes, 171
    - rated by cetane, 169
    - standard, 169–170
    - toxicity of, 169
    - where to buy, 170
  - diesel fuel system, bleeding and priming, 175–176
  - diesel oil
    - changing, 174–175
    - classification codes, 174–175
  - diesel oxide catalytic converter, 172
  - diesel-powered vehicles
    - improving fuel consumption with turbocharging, 141
    - troubleshooting stalling problems, 401
  - differential, in rear-wheel drive vehicles, 71, 339–340
  - digital keys
    - key code numbers for, 28
    - pros and cons of, 28
  - dipsticks, checking, 38–41
  - directional signals. *See also* electrical system
    - flashers for, 97
    - replacing, 123
    - troubleshooting malfunctions of, 396
  - disc brakes, 76, 257–258
    - advantages over drum brakes, 258
    - anatomy of single-piston floating-caliper, 258
    - calipers, 257
    - checking, 277–279
    - diagram of, 77
  - distributor, spark-plug wires running from, 101
  - distributor cap, in electronic ignition systems with distributor, 95
  - distributorless electronic ignition system, component diagram of, 73, 93
  - door-mounted air bags, 368
  - double-wishbone suspension systems, anatomy of, 307
  - drain pan, for catching old oil during oil change, 243–244

- drive train. *See also*
    - transmission
    - basic types of, 337
    - flow of power through, 337–340
    - in four-stroke power cycle engine, 139
    - in four-wheel drive vehicles, 340–341
    - in front-wheel drive vehicles, 339
    - function of, 336–337
    - in rear-wheel drive vehicles, 338
    - rear-wheel drive vehicles with manual transmission, 71
    - tracing flow of power in, 338–339
    - troubleshooting, 350–353
    - understanding and maintaining, 335–357
  - driveshaft
    - as part of drive train, 336
    - in rear-wheel drive vehicles, 71, 73
  - driving eco-logically, 471–472
  - drum brakes, 76
    - in action, 256
    - adjusting devices for, 257
    - anatomy of, 254
    - brake shoes for, 256
    - in brake systems, 254–257
    - checking, 273–276
    - disc brakes advantages over, 258
    - reassembling after checking, 276–277
    - replacing adjusting nut when reassembling, 277
    - systems for front- and rear-wheel drive vehicles, 253
  - dual-clutch transmissions (DCTs), 348–349
  - dual-fuel vehicles. *See* flex-fuel vehicles (FFVs)
  - dual-stage air bags, 367
  - duct tape, for emergency repairs, 64
  - dust boots, on wheel cylinders, 256
- **E** ●
- E10 fuel, 182
  - E85 fuel, 182, Web site for vehicles that can run on, 183
  - Earth 911
    - for information about toxic waste disposal, 214
    - Web site address, 248
  - eco-logical fuel economy, 469–474
  - ECU (electronic control unit), air bags deployed by, 364
  - Edmunds Blue Book, Web site address, 227, 428
  - EGR valve, in exhaust systems, 144
  - electric fuel pump. *See* fuel lines and fuel pumps
  - electric vehicles (EV), 67, 188–189
    - troubleshooting stalling problems, 401
  - electrical gadgets, on automobiles, 97–98
  - electrical system
    - battery in, 68
    - controlled by ECU on newer vehicles, 81–82
    - diesel versus gasoline vehicles, 171
    - ignition switch in, 68
    - keeping in tune, 99–123
    - for making your vehicle start and run, 68–73
    - starter solenoid switch in, 68
    - your car's spark of life, 81–98
  - electrolyte, checking for batteries, 36
  - electronic brakeforce distribution (EBD) systems, 262
  - electronic control module (ECM), in electronic ignition systems with distributor, 96
  - electronic diagnostic tools, cost of, 385
  - electronic fuel injectors
    - computer controlled, 131
    - in fuel system, 131
  - electronic ignition systems
    - diagram with a distributor, 95
    - with distributor, 94–96
    - distributor cap in, 95
    - distributorless, 73
    - electronic control module (ECM) in, 95
    - leaving distributor to a pro, 113
    - pick-up coil in, 95
    - rotor in, 95
  - tools for adjustments, 56
  - troubleshooting problems with, 402
  - electronic power control unit (PCU), in fuel cell vehicles, 191
  - electronic power steering system, anatomy of, 297
  - electronic solenoid, in automatic transmissions, 351
  - electronic stability control (ESC)
    - determining if vehicle is equipped with, 381
    - how it works, 379–381
  - electronic transmission systems. *See* transmission systems
  - emergency brakes. *See* parking (emergency) brakes
  - emergency parts, keeping with vehicle, 61
  - emergency road assistance, for locked cars, 28
  - emission traps, for diesel engines, 172–173
  - emissions control devices
    - components of, 75
    - exhaust gas recirculation (EGR) system, 144
    - in exhaust system, 142–144
  - emissions control system
    - PCV valve as part of, 152–155
    - troubleshooting catalytic converter in, 155–156
  - engine
    - jump-starting, 62–63
    - in rear-wheel drive vehicles, 71
    - rebuild and replacement costs, 240
    - what to do when no amount or type of oil helps, 240
    - tips for cleaning it yourself, 441–442
  - engine block
    - four-stroke power cycle in, 137–139
    - in front-wheel drive vehicles, 71
    - major components of, 135–137
    - where fuel system and ignition system meet, 135–139

- engine control unit (ECU)  
 electrical system controlled by, 81–82  
 introduction to, 67–68  
 engine displacement, 104–105  
 engine fires, causes of, 60  
 engine flywheel, in drive train, 338  
 engine lugging, solving with downshifting, 357  
 engine oil. *See also* motor oil; oil  
 checking, 38–39  
 detergents in to dissolve sludge in, 234  
 engine cooling by, 234  
 friction reduction by, 234–235  
 how it benefits your vehicle, 234–235  
 reason for checking yourself, 39  
 EPA Stratospheric Ozone Hotline, contacting, 232  
 ethanol, methanol, and flex-fuel vehicles, troubleshooting stalling problems, 401  
 ethanol fuel  
 fewer emissions produced by, 182–183  
 usable in flex-fuel vehicles, 182  
 exhaust manifold, 129–130  
 in exhaust system, 75  
 exhaust pipe, in exhaust system, 75  
 exhaust stroke, in four-stroke power cycle engine, 138–139. *See also* four-stroke power cycle  
 exhaust system  
 components of, 75, 141–144  
 controlling noise of escaping gases in, 75  
 diagram of, 142  
 muffler heat shield, 75  
 as vehicle waste disposal system, 75  
 expansion tank. *See* coolant recovery system  
 external fuel filters, 128
- **F** ●
- factory representatives, contacting about repair complaints, 425
- fan, in cooling system, 74, 199–200  
 feeler gauge, for gapping spark plugs, 104  
 Filter Council, Web site address, 248  
 fire extinguisher  
 importance of keeping handy, 15  
 safe use of, 60  
 storing to keep it handy, 444  
 firing order. *See also* ignition systems  
 4-cylinder traverse engine  
 6-cylinder rear-wheel drive engine  
 versus cylinder sequence, 92  
 and cylinder sequence of engines, 90–92  
 in four-stroke power cycle engine, 139  
 first aid kit, in vehicle, 63  
 five-speed transmissions, 343  
 fixed-caliper brake systems, 258  
 flashlights and reflectors, for vehicle safety, 63  
*Flat Rate Manual*, service pricing from, 416  
 flat tires. *See* tires  
 flex-fuel vehicles (FFVs), 183  
 E85 fuel for, 182  
 floor mats, cleaning, 447  
 flywheel, as part of starter system, 85  
 foreign in-line 4-cylinder engines, cylinder sequence and firing order in, 90  
 fossil fuels, contribution to global warming, 181  
 four-stroke power cycle. *See also* compression stroke; exhaust stroke; intake stroke; power stroke  
 in engines, 137–139  
 in diesel engines, 168  
 four-wheel drive vehicles  
 versus all-wheel drive vehicles, 341  
 drive train in, 340–341  
 with transfer case and two differentials, 341  
 transfer case in, 340–341  
 freeze plugs. *See* core plugs  
 Freon. *See* CFC-12 refrigerant
- friction bands and plates, in automatic transmissions, 348  
 frontal air bags, 364–367  
 front-end alignment. *See* alignment; wheel alignment  
 front-wheel drive vehicles  
 crankcase in, 71  
 cutaway view of, 71  
 cylinder head in, 71  
 drive train, 337  
 dual brake systems on, 253  
 engine block in, 71  
 flow of power through transaxle on, 339  
 fuel tank in, 71  
 location of transmission in, 70  
 oil and transmission dipstick locations, 38  
 oil dipstick in, 71  
 position of cylinders in, 136  
 spark plugs in, 71  
 transaxle fluid dipstick in, 71  
 transaxle in, 71, 73, 339  
 transmissions versus rear-wheel drive vehicle transmissions, 70  
 fuel cell vehicles  
 components of, 190–191  
 how they work, 190–191  
 fuel cells  
 in fuel cell vehicles, 190  
 how they work, 190  
 fuel economy  
 checking car out ecologically, 469–474  
 cleaning out junk to lighten load, 474  
 driving eco-logically for, 471–472  
 effect of bad PCV valve on, 470  
 effect of dirty air filter on, 470  
 effect of improperly tuned ignition system on, 470  
 effect of loose accessory belts on, 470  
 effect of misfiring spark plugs on, 470  
 effect of poorly adjusted brakes on, 470  
 effect of worn wheel bearings on, 470  
 filling up eco-logically, 473  
 keep tires properly inflated, 473–474

fuel economy (*continued*)  
 keep vehicle waxed to cut wind resistance, 474  
 structuring trips for, 472–473  
 using a trailer instead of a roof rack, 465

fuel filters  
 changing in diesel engines, 175  
 deciding if you should change yourself, 149  
 in diesel engines, 166  
 in fuel systems, 128, 145  
 locating on your vehicle, 149–150  
 replacing, 148, 151–152  
 replacing an insert in, 151

fuel gauge, in fuel system, 127

fuel hoses, dangers of replacing yourself, 223

fuel injection systems  
 controlled by ECU on newer vehicles, 69  
 improvements to, 133

fuel injectors  
 anatomy of, 131, 166  
 following fuel through, 130–131

fuel flowing through fuel rail to, 132  
 in modern fuel systems, 125

fuel lines and fuel pumps, in fuel systems, 69, 127–128

fuel pressure regulator, in throttle-body fuel injection systems, 134

fuel pumps. *See also* fuel lines and fuel pumps  
 checking, 128  
 disabling to change fuel filter, 151  
 in fuel systems, 69, 145  
 rebuilt versus new, 152

fuel rail assembly, for fuel injector systems, 132

fuel systems  
 for alternative fuel vehicles, 125  
 basic components of, 125–130  
 in diesel engine, 167–171  
 float in fuel tank, 127  
 following fuel through fuel injectors, 130–131  
 fuel filters in, 128  
 fuel lines and fuel pumps, 127–128  
 fuel/air mixture, 130

in internal combustion engine (ICE), 69–70  
 introduction to traditional, 125–144  
 keeping in tune, 145–160  
 troubleshooting stalling problems with, 401  
 what to do when all else fails, 159–160

fuel tank  
 dangers of topping off, 17  
 in front-wheel drive vehicles, 71  
 in fuel system, 69  
 how to fill, 15–17  
 importance of keeping full, 149  
 location of in fuel system, 126–127

fuel/air mixture, in fuel systems, 70, 130

fuels, 182–183. *See also specific fuel names*

funnels  
 automotive uses for, 60  
 using for oil changes, 244

fuse boxes, locations of, 116–117

fuses. *See also* electrical system  
 blade-type, 118  
 changing, 116–118  
 keeping replacements with vehicle, 61  
 as part of electrical system, 97  
 removing and replacing, 118  
 replacing with proper type and amperage, 118  
 tubular, 118

fuses and circuits, in starting system, 82

• **G** •

garages. *See* service facilities  
 gas stations, how to fill gas tank, 15–17

gas tank. *See* fuel tank

gasohol. *See* fuels

gasoline (fuel). *See* fuel systems; fuels

gasoline cans  
 dangers of empty, 130  
 disposing of empty, 14

gasoline direct injection (GDI) system, catalytic converter needed by, 133

gasoline-gallon equivalents (GGE), CNG measured in, 191

gauges, types of for your toolbox, 55

gear ratio, in manual transmissions, 339

gears. *See also* transmission in transmissions, 344

gearshift, 343  
 in drive train, 336, 338

gearshift linkage, problems with, 355

gear-type hose clamps, dealing with, 222

global warming  
 caused by ICE emissions, 66  
 fossil fuel contribution to, 181

glossary, of automotive terms, 475–506

gloves, keeping in vehicle for repairs, 64

glow plug, in diesel engine precombustion chamber, 165

GPS systems, 383

grease seal, for inner wheel bearings, 282, 283

## • **H** •

halogen headlamps, 98. *See also* headlights  
 replacing and adjusting, 120–121

hand cleaner, keeping in vehicle, 63

hazardous materials, disposing of, 30

head gasket, checking for leakage, 37, 227

head restraints  
 adjustable for vehicles, 369  
 recommended positioning of, 369

headlights  
 checking alignment of, 122–123  
 checking for markings on, 120  
 determining which you have, 119–120  
 getting inspection certificate for, 122  
 troubleshooting, 119  
 types of, 98

- headlights and directional signals, dealing with, 119–123
  - Xenon, 120
- headliners, caring for, 446–447
- heater core
  - and hoses in cooling system, 74
  - location of, 201
- heater hoses, in cooling system, 74
- HID (high intensity discharge) lamps, 98, 120. *See also* headlights
- hood release, finding, 17
- hoods, how to open, 17–18
- hose clamps
  - buying and replacing, 222
  - checking and tightening as necessary, 219
  - types of, 222
- hoses. *See also* heater hoses; radiator hoses
  - checking for leaks, 218–219
  - checking radiator hoses for damage, 37
  - in cooling system, 74
  - installing, 223
  - location of under the hood, 30
  - for radiator, 197–198
  - replacing, 223–225
- how to
  - add air to your tires, 326–327
  - add liquid to cooling system, 209
  - adjust and replace accessory belts, 229–230
  - adjust parking brake, 289
  - apply body filler for dents and dings, 454–455
  - bleed a master cylinder, 287
  - bleed and prime diesel fuel system, 175–176
  - bleed your brake system, 285, 287
  - buy and replace an air filter, 147–148
  - buy the right hoses for your vehicle, 220–221
  - buy the right parts for your vehicle, 13–14
  - change a tire, 23–27
  - change diesel fuel filter, 175
  - change diesel lubricating oil, 174–175
  - change fuses, 116–118
  - change oil and filter, 244–247
  - change radiator or heater hoses, 224–225
  - change spark plugs, 101–114
  - change vacuum hoses, 223
  - change your oil, 241–248
  - check accessory belts, 32–33
  - check air filter, 31–32
  - check air pressure in tires, 325–326
  - check and add liquid to radiator, 209–210
  - check and clean air filter and cold air collector box, 147
  - check and diagnose leaks under your car, 393–395
  - check and replace windshield wipers, 43–44
  - check anti-lock brakes, 289–290
  - check automatic transmission fluid, 40
  - check battery, 33–36
  - check brake fluid, 41–43
  - check brake lines, 270–271
  - check brake pedal, 265–267
  - check compression in cylinders, 156–159
  - check coolant, 36–37
  - check coolant recovery system, 209
  - check dipsticks, 38–41
  - check disc brakes, 277–279
  - check drum brakes, 273–276
  - check fuel pump, 128
  - check headlight adjustment, 122–123
  - check hoses, 37
  - check master cylinder, 267–270
  - check oil, 38–39
  - check PCV valve, 154
  - check power-steering fluid, 41
  - check radiator hoses for leaks, 218–219
  - check steering, 299–300
  - check tires, 44
  - check tires for wear, 332–334
  - check wheel bearings for wear, 283
  - check windshield washer fluid, 43
  - check wiring, 43
  - clean and polish lacquered or enameled car, 439–440
  - clean the PCV valve, 155
  - deal with any rust you find, 451–452
  - determine which headlights you have, 119–120
  - determine how much coolant you need, 212–213
  - determine if car needs a tune-up, 100
  - determine if coolant needs changing, 211–212
  - disassemble and put anything back together, 18–20
  - fill fuel tanks, 15–17
  - find a reliable diesel mechanic, 180
  - find leaks in the cooling system, 216–219
  - flush and change brake fluid, 284–285
  - flush cooling system and change coolant, 210–216
  - gapping spark plugs, 89
  - get at wheel bearings, 280
  - get into car when locked out, 28
  - get your bearings under the hood, 30
  - identify types of cooling system leaks, 227–228
  - inspect and repack wheel bearings, 280–283
  - install new weatherstripping, 457–458
  - jump-start, 406–408
  - jump-start diesel batteries, 176–177
  - keep electrical system in tune, 99–123
  - locate the fuel filter, 148–149
  - locate the PCV valve, 153
  - loosen lug nuts, 24–26
  - maintain your air filter, 146–148
  - measure inside and outside diameter of hoses, 221
  - open car hood, 17–18
  - read tires for treadwear, 332
  - reassemble drum brakes after checking, 276–277
  - remove and repack inner wheel bearings, 282
  - remove and replace gear-type hose clamps, 222
  - remove and replace screw-type hose clamps, 222
  - remove and replace the PCV valve, 154
  - remove and replace wire hose clamps, 222

how to (*continued*)

- remove pressure cap safely, 206–208
- remove wheel covers or hubcaps, 24
- repack outer wheel bearings, 281–282
- repair radiator leaks, 225–226
- replace a battery, 114–116
- replace a fuel filter, 148–150
- replace an insert in fuel filter, 151
- replace and adjust halogen and Xenon headlamps, 120–121
- replace and adjust sealed-beam headlights, 121–122
- replace directional signals, 123
- replace the inner wheel bearing grease seal, 282–283
- replace your thermostat, 230–231
- rotate your tires, 327–328
- safely dispose of empty gas cans, 14
- service the PCV valve, 152–155
- shop for and use jacks, 58–59
- shop for tools, 45–46
- stock your repair toolbox, 61–64
- take apart anything and put it back together, 18–20
- test for loose accessory belts, 229–230
- touch up paint job, 456–457
- troubleshoot catalytic converter, 155–156
- troubleshoot headlights, 119
- use combination wrench, 51
- use compression gauge, 56–57, 158–159
- use creepers, 59–60
- use gauges, 55–57
- use jack safely, 20–23
- use jack stands, 59
- use pliers safely, 54
- use tire pressure gauges, 56
- use wire and taper feeler gauges, 55
- hubcap. *See* wheel cover (hubcap)
- hybrid vehicles, 67
  - combination hybrids, 184–185
  - parallel hybrids, 184–185
  - plug-in hybrids, 186–187
- regenerative braking systems for, 187
- troubleshooting stalling problems, 402
- two-mode hybrids, 187
- types of, 184–188
- hydraulic automatic transmission, cutaway view of, 347
- hydraulic brakes, 77. *See also* brake systems
- hydraulic jack
  - shopping for, 58
  - using safely, 22
- hydrogen and fuel cell vehicles, 190–191
- hydrogen gas, in fuel cell vehicles, 190
- hydrogen-powered electric vehicles (EV). *See* fuel-cell vehicles
- hydrogen-powered fuel cells, how they work, 188–189
- hydrogen-powered vehicles, troubleshooting stalling problems, 402

## ● 1 ●

- ice and snow equipment, keeping with vehicle, 63
- idiot lights. *See* malfunction indicator lights (MIL); warning lights
- ignition coil, spark-plug wires running from, 101
- ignition control module (ICM) in distributorless electronic ignition system, 93–94
- timing information stored in, 93
- ignition switch
  - in electrical system, 68
  - in starting system, 83
- ignition systems
  - battery as part of, 33
  - components of, 88–96
  - electric current provided by, 73
  - modern distributorless, 93–94
  - troubleshooting problems with, 402–403
  - under-the-hood view, 82
- ignitions, override switch for, 28
- IHS list of Ten Safest Vehicles and air bag ratings, Web site address, 362
- independent garages, choosing for vehicle service, 411

- inflator/sealant, for emergency flat tire repair, 62
- injector solenoid, in throttle-body fuel injection systems, 134
- in-line engines, 137
  - finding spark plugs in, 101
  - oil and transmission dipstick locations, 38
- intake and exhaust valve, openings in cylinders, 137
- intake manifold, 129
  - checking PCV valve in, 154
  - fuel pumped into, 70
  - location of PCV valve in, 153
- intake stroke, in four-stroke power cycle engine, 137–138. *See also* four-stroke power cycle
- integral parking brakes, anatomy of, 288
- internal combustion engine (ICE)
  - as the heart of most vehicles, 65–66
  - main parts of, 135
- invoices
  - checking for listing of parts and labor guarantees, 417–420
  - importance of checking carefully, 417–420
- ISOFIX connections, for child safety seats, 373–374

## ● J ●

- jack stands, 20
  - importance of for auto repairs, 59
  - proper positioning of, 22
  - using safely, 59
- jacks
  - blocking wheels, 20
  - shopping for, 58–59
  - types of, 22
  - using safely, 20–23, 59
- jumper cables
  - for emergency car starting, 62–63
  - using safely, 407–408
- jump-starting engines, 62–63

## ● K ●

- Kelly Blue Book, Web site address, 227, 428
- key code numbers, finding for digital keys, 28

## • L •

LATCH (Lower Anchors and Tethers for Children) system  
 for child safety seats, 373  
 Web site address for information about, 373

leaf springs, in suspension systems, 302–303

leaks, troubleshooting, 393–395  
 in engine block core plugs, 226–227  
 head gasket, checking for in, 37, 227  
 locating by pressure testing, 228–229

LED headlamps, 98. *See also* headlights

lifetime lubrication systems, for steering systems, 295

locked car, getting into when you're locked out, 28

locksmith, calling for locked car assistance, 28

LoJack  
 Early Warning Recovery System, 384  
 Stolen Vehicle Recovery System, 384

low-pressure warning systems, types of for tires, 321

lubrication system  
 components of, 74  
 for reducing friction on metal engine parts, 234–235

lug nuts  
 loosening, 21, 24–26

lug wrench  
 for changing tires, 24  
 keeping with vehicle, 61  
 for removing lug nuts, 61

## • M •

MacPherson struts, 306

maintenance. *See also* preventive maintenance  
 finding a reliable diesel mechanic for, 180  
 finding a reliable service facility, 413–414  
 importance of monthly, 29–44  
 location of parts under the hood, 30

Maintenance Record, 29  
 form, 509  
 importance of keeping, 421

Lubrication and Brake checklist, 511

Monthly Under-the-Hood checklist, 510

Parts Replacement checklist, 512

Tune-up checklist, 510

malfunction indicator lights (MIL), 203  
 dealing with, 401  
 getting report from electronic sensors, 97  
 showing if alternator isn't working properly, 88  
 and warning lights, 96–97

manifolds, intake and exhaust, 129–130

manual transmissions, 335  
 components of, 342–344  
 gear ratio, 345  
 having fluid level checked for, 40  
 how they work, 345–346  
 location of clutch for, 71  
 shifting actions of, 346

master cylinder  
 ABS actuator in Japanese cars, 287  
 activated by the brake booster, 251  
 bleeding air out of, 287  
 for brake fluid, 41  
 in brake system, 76  
 looking inside of, 269  
 metal, 252  
 plastic, 252  
 removing lid from, 268  
 types of, 41

mechanic's invoices, sections of, 418–420

metal trim and chrome, polishing, 435

methanol fuel, uses for, 182–183

metric wrenches, 49

mild hybrids. *See* parallel hybrids

monthly under-the-hood check, 29–44, 466

motor oil, used in lubrication system, 74

muffler, in exhaust system, 75, 142

multi-fuel vehicles. *See* flex-fuel vehicles (FFVs)

multigrade oil. *See* multi-viscosity (multi-weight) oil

multi-link suspension systems, anatomy of, 308

multi-port injection (MFI) systems, 131–132

multi-viscosity (multi-weight) oil, 237

## • N •

National Automobile Dealers Association, complaining to, 425

natural gas vehicles (NGV), 191–192  
 example of, 192  
 troubleshooting stalling problems, 402

navigation systems, types of, 383

needle-nosed pliers, for your toolbox, 53–54

negative ground, for batteries, 83

NHTSA, Web site address, 362

NHTSA's brochure, for information about ON-OFF switches, 365

nonflammable inflator/sealant, for emergency flat tire repair, 27

NOx (nitrogen oxides) emissions, 133

## • O •

OEM (Original Equipment Manufacturer) parts, 13, 461

offset screwdriver, 47

oil. *See also* engine oil; lubrication system; motor oil  
 change frequency in extreme operating conditions, 241  
 checking, 38–39  
 checking after oil change, 247  
 choosing the right one for your vehicle, 238–240  
 Ci-4 Plus, 237  
 classification codes, 237–238  
 cleaning up spilled thoroughly, 248  
 how often to change, 240–241

- oil (*continued*)
    - keeping your car young and happy, 233–248
    - for oil changes, 242
    - reason for checking yourself, 39
    - recycling old, 248
    - synthetic versus mineral-based, 238
    - viscosity ratings, 236–237
    - what to do when no amount or type helps, 240
    - what you should know about it, 235–238
  - oil additives, 236
  - oil change intervals, 241
  - oil changes
    - doing systematically, 244–247
    - getting your supplies together, 242–243
    - how to clean up oil, 244
    - keeping your hands clean during, 244
  - oil classification codes
    - for gasoline and diesel engines, 238
    - start of, 237
  - oil dipstick
    - checking oil level on, 39
    - in front-wheel drive vehicles, 71
    - location of under the hood, 30, 38
  - oil drain plug, removing and replacing, 245–247
  - oil drain plug gasket, 243
  - oil filter
    - draining oil from old, 246
    - in lubrication system, 74
    - for oil changes, 242–243
    - recycling old, 248
    - removing and replacing, 246
    - wrench for removing, 243
  - oil pan, 234
    - housed in crankcase, 137
  - oil pump, 234
  - oil recycling centers, locating, 248
  - oil warmers, for diesel engines, 179
  - onboard computers, protecting against damage, 34
  - ON-OFF switches
    - for air bags, 364–365
    - NHTSA's brochure for information about, 365
  - OnStar, 384
  - open-end wrenches, 51–52
  - overheating
    - addressing occasional, 204
    - collapsing bottom radiator hose as cause of, 205
    - dealing with chronic, 204
    - identifying other causes of, 205–206
    - late timing as cause of, 205
    - low oil level as cause of, 205
    - overcoming, 203–206
    - plugged radiator as cause of, 205
    - pressure cap problems as cause of, 204
    - slipping accessory belts as cause of, 205
    - troubleshooting problems with, 403–404
  - owner's manual
    - importance of keeping handy, 66–67
    - for parts specifications, 13
  - oxidation catalysts, in catalytic converters, 143–144
- *p* ●
- painting and priming, touching up your paint job, 455–457
  - parallel hybrids, 184–185
    - examples of, 186
  - parking (emergency) brakes, 76, 258–260
    - adjusting, 260, 288–289
    - cable activating on rear-wheel disc brakes, 260
    - integral, 259, 288
    - setting before changing fuel filter, 151
    - transmission-type, 259
  - particulate filter, for diesel engines, 172
  - parts
    - buying the right ones for your vehicle, 13–14
    - choosing for repairs, 461
    - how to disassemble and put back together, 18–20
    - keeping old with vehicle, 61
    - making notes during disassembly, 19
    - OEM and aftermarket, 13
    - “Pass Air Bag Off” warning light, 365
  - PAX system, for run-flat tires, 320
  - PCV valve
    - cleaning, 155
    - in exhaust system, 76, 142–143
    - how it works, 143
    - locating on your vehicle, 152
    - methods for checking function of, 154
    - as part of emissions control system, 152
    - removing and replacing, 154
    - servicing, 152–155
  - pedals, adjustable for vehicles, 369
  - Phillips screwdrivers, 46–47
  - pick-up coil, in electronic ignition systems with distributor, 95
  - piston rings
    - gauge for checking, 56–57
    - on outside of pistons, 137
  - pistons
    - in cylinder, 70, 137
    - as part of starter system, 85
  - plasma catalyst, for diesel engines, 173
  - pliers
    - types of, 53
    - using safely, 54
  - plies, of tires, 312
  - plug-in hybrids, 186–187
  - polymer electrolyte membrane, in hydrogen-powered fuel cells, 189
  - polymer exchange membrane, in hydrogen-powered fuel cells, 188
  - positive crankcase ventilation valve. *See* PCV valve
  - power brakes, 76, 251
  - power steering systems, 295–300
    - electronically assisted, 297
    - recirculating-ball steering, 298
    - steer-by-wire steering, 299
  - power-steering fluid
    - checking, 41
    - location of under the hood, 30
  - power-steering pump
    - checking accessory belt that drives, 32–33
    - location of under the hood, 41

- power stroke, in four-stroke power cycle engine, 138–139. *See also* four-stroke power cycle
- pressure cap  
checking for leaks, 218  
for radiator, 199  
removing safely, 206–208
- pretensioners, for smart seat belts, 375
- preventive maintenance  
changing air filter, 467  
changing coolant, 468  
changing fuel filters, 467  
changing oil filters, 467  
changing oil frequently, 465  
checking tire inflation and alignment, 466  
getting rid of rust, 467  
keeping the interior clean, 466  
lubricating moving and rubber parts, 468  
monthly under-the-hood check, 29–44, 466  
scheduled maintenance to keep warranties valid, 468  
washing car frequently, 467
- puncture-proof tires, 313
- **R** •
- R-134a refrigerant, replacement for CFC-12 refrigerant, 202
- rack-and-pinion steering systems, 295–297
- radar, used by some adaptive cruise control systems, 382
- radial tires, 313
- radiator  
checking for leaks, 218  
in cooling system, 75, 197–198
- radiator cap. *See* radiator pressure cap
- radiator drain valve. *See* petcock
- radiator hoses, 197–198  
avoiding universal hoses when possible, 220  
buying the right ones for your vehicle, 220–221  
checking for damage, 37  
in cooling system, 74  
flexible bottom hose with wire insert, 221
- radiator pressure cap, 37, 199  
keeping replacement one with vehicle, 61  
pressurized in cooling system, 75  
valves in, 199
- rag  
safely disposing of dirty, 61
- rail fuel injection system, common in diesel engines, 167
- ratchet handles  
for changing spark plugs, 104  
identifying good quality, 51  
mastering, 108  
offset handles for, 107  
for socket wrenches, 49–50  
T-bar handles for, 107  
universal extensions for, 107
- rear-engine vehicles, location of engine and transmission in, 71
- rear-wheel drive engines, oil and transmission dipstick locations, 38
- rear-wheel drive vehicles  
axle in, 71  
cutaway view of, 71  
differential in, 71  
drive train, 337–338  
driveshaft in, 71  
dual brake systems on, 253  
engine in, 71  
location of transmission in, 71  
position of cylinders in, 136  
transmissions versus front-wheel drive vehicle transmissions, 67  
U-joints (universal joints) in, 71
- recirculating-ball steering, anatomy of, 298
- records, specification and maintenance  
Maintenance, 509  
Parts Replacement, 512  
Specifications, 508
- reduction catalysts, in catalytic converters, 143–144
- reflector triangles, for emergencies, 63
- refrigerant, types of for air conditioning, 202
- regenerative braking systems, 187, 262. *See also* brake systems  
checking fluid for, 42  
for electric vehicles (EV) and hybrids, 76, 188
- repair shops. *See also* service facilities  
turning to for larger repairs, 459–462
- repairs, getting the best possible deal, 416–422  
test driving after, 422  
written estimates for, 416
- Retread Buyers Guide*, by Tire Retread Information Bureau (TRIB), 323
- Robogrip pliers, for your toolbox, 54
- rollover stability control (RSC), 381–382
- rotary engines, on some Mazdas, 137
- rotary valve, in rack-and-pinion steering systems, 295
- rotor, in electronic ignition systems with distributor, 95
- rubbing compounds, using on your car, 439
- run-flat tires, 313  
advantage of, 27  
construction of, 320–321  
low-pressure warning systems for, 320
- rust  
checking for, 450–451  
getting rid of, 450–453  
undercoating to prevent, 452
- **S** •
- SAE (Society of Automotive Engineers), wrench measurements, 49
- safety, staying safe on the road, 361–384
- safety cages, incorporated into vehicle body structure, 368

- safety precautions, when
  - losing power on the road, 397–400
- safety procedures, for getting to side of road, 397
- safety rules
  - importance of following, 14–15
  - for working on batteries, 33–34
- safety systems
  - adaptive cruise control (ACC), 382
  - adjustable devices, for vehicles, 368–369
  - air bags, 362–368
  - back-up beepers, sensors, cameras, and monitors, 376
  - blind-spot information systems (BLIS), 377–378
  - brake-shift interlocks, 378
  - child safety seats and booster seats, 370–374
  - electronic stability control (ESC), 379–381
  - rollover stability control (RSC), 381–382
  - seatbelts, 369, 375
  - side air bags and side impact protection system (SIPS), 364, 367–369
  - stability control systems, 379–382
  - telematics, how cars communicate, 383–384
  - traction control systems (TCS), 378–379
- scissor jack, using safely, 22
- screwdrivers
  - basic types of, 46–48
  - punching hole in oil filter with, 243
  - standard and Phillips and their screws, 47
- screwdrivers, for getting into hard-to-reach places, 48
- screws, removing difficult, 48
- screw-type hose clamps, dealing with, 222
- sealed-beam headlights, 98, 120
  - replacing and adjusting, 121–122
- seatbelts
  - adjustable for vehicles, 369
  - importance of wearing, 375
  - smart, with airbags, 375
- selective reduction catalyst (SRC), for diesel engines, 172–173
- self-adjusting brakes, 257
  - checking, 276
- sensors
  - for fuel injector systems, 131
  - for monitoring and controlling engine functions, 68
- sequential fuel injection (SFI), efficiency of, 132–133
- series hybrid, 185
- serpentine multiaccessory drive belt, 33, 229
- service facilities
  - authorizing all repairs, 417
  - chain and department stores, 411
  - checking how they price services, 415–416
  - choosing, 409–413
  - complaining effectively, 422–426
  - dealerships, 410–411
  - evaluating, 414–416
  - finding and dealing with, 409–426
  - finding reliable, 413–414
  - getting credit for core charges on rebuildable parts, 417
  - getting second opinions for major repairs, 416
  - guidelines for establishing a good relationship with, 420–422
  - independent garages, 411
  - organizations that test, rate, and certify, 413–414
  - saving yourself from paying for unnecessary R&R, 417
  - specialist, 412–413
- service manual
  - for parts specifications, 13
  - sources of, 66–67
- shock absorbers, standard, 306
- shocks and struts
  - points to keep in mind about, 306
  - in suspension systems, 305–307
- side air bags (SAB), types of, 367–368
- side electrode, in spark plugs, 109
- side impact protection systems (SIPS), required on American vehicles, 368
- side-impact air bags, 364
- silicone lubricant, using on spark plugs, 103–104
- single-piston floating-caliper disc brake systems, anatomy of, 258
- single-viscosity (single-weight) oil, 237
- slip-joint pliers, for your toolbox, 53–54
- smart seat belts, 375
- smells and smoke. *See* troubleshooting
- snow and ice equipment, keeping with vehicle, 63
- socket wrenches
  - advantage of buying good quality, 49–51
  - for changing spark plugs, 104
  - contents of good set, 50–51
  - extenders for reaching nuts and bolts, 51
  - flex-head handles for, 50
  - ratchet handles for, 49–50
  - sounds. *See* troubleshooting
  - spare parts, keeping old with vehicle, 61
- spare tire, periodically checking, 61
- spark plug cables. *See* spark plug wires
- spark plug gap, recording in Specifications Record, 106
- spark plug socket, for removing spark plugs, 107
- spark plug terminal, 107
- spark plug wires
  - checking, 43, 113
  - connection to spark plugs, 101
  - importance of removing one at a time, 106
- spark plugs. *See also* ignition systems; tune-ups
  - anatomy of, 89, 109
  - buying the right ones for your vehicle, 104–106
  - changing, 101–114
  - checking gap on, 109
  - cleaning, 110
  - dealing with hidden, 102
  - deciding if you should change yourself, 101–102

- finding in your engine block, 101
  - in front-wheel drive vehicles, 71
    - gapping, 55, 111–112
    - gapping tools for, 55–56
    - getting to hard-to-reach, 107
    - for igniting fuel/air mixture, 73
    - in ignition systems, 89–92
    - installing, 112–114
    - items needed to change and gap, 103–104
    - loosening to remove, 108
    - reading, 109–111
    - reasons for having a
      - professional change, 102
    - removing, 106–108
    - seating, 112–114
    - what the old tell you about your vehicle, 110
  - spark-plug socket wrench, 49–50
  - specifications
    - checking before buying parts, 13
  - Specifications Record, 29
    - form, 508
    - important vehicle and hose information for, 221
    - recording vehicle
      - specifications in, 106
  - speed ratings, of tires, 315–316
  - spin-on fuel filters, 128
  - sport-utility vehicles (SUVs),
    - four-wheel drive drive train in, 341
  - springs, types of in suspension systems, 302–305
  - stability control systems, 379–382
    - in some modern vehicles, 301
  - stabilizer bars, in suspension system, 301
  - stalling problems,
    - troubleshooting, 100–101
  - standard (or slot)
    - screwdrivers, 46–48
  - standard transmissions, 335
  - standard wrenches, 49
  - starburst symbol, on oil containers, 237
  - starter
    - anatomy of, 85
    - how it works, 85–86
    - with starter solenoid attached, 85
  - starter solenoid switch
    - in electrical system, 68
    - in starting system, 82
  - starting car, without warming up, 470–471
  - starting system
    - avoiding damage to after starting car, 86
    - components of, 82–86
    - computer malfunctions, 471
    - problems with, 471
    - troubleshooting, 101, 405–408
    - under-the-hood view, 82, 83
  - steer-by-wire steering system,
    - anatomy of, 299
  - steering and suspension systems, 293–310
  - steering knuckle, attached to suspension system, 295
  - steering linkage, components of, 294–295
  - steering ratio, of steering system, 293–294
  - steering system
    - checking, 299–300
    - lifetime lubrication systems for, 295
    - types and components of, 293–300
  - steering wheels, adjustable, 369
  - stop-leak sealer, using for small cooling system leaks, 226
  - straight engines. *See* in-line engines
  - strut suspension systems,
    - anatomy of, 308–309
  - supercharging versus turbocharging, 140
  - suspension systems, 300–309
    - anatomy of typical, 300
    - Bose acoustic, 309
    - major parts of, 301–307
    - types of, 307–309
  - synthetic oil, 238
- T •**
- tailpipe, as part of exhaust system, 76
  - taper feeler gauges, for gapping spark plugs, 55, 104
  - technicians, ASE certification programs for, 413–414
  - telematics, how cars communicate, 383–384
    - Web site for comparisons of features, 384
  - Temperature light, 203
  - thermostat
    - anatomy of, 201
    - checking for starting problems, 471
    - keeping replacement one with vehicle, 61
    - as part of cooling system, 200–201
    - replacing, 230–231
  - throttle-body fuel injection (TBI) system
    - fuel pressure regulator in, 134
    - how it works, 134
    - injector solenoid in, 134
    - location of in fuel system, 131
  - throw-out bearing, in manual transmissions, 344
  - tie rod ends, in steering linkage, 294
  - timing belt, water pump driven by in some vehicles, 200
  - Tire Retread Information Bureau (TRIB), *Retread Buyers Guide* by, 323
  - tires, 317
    - adding air to, 326–327
    - adverse effects of driving on worn, 311
    - anatomy of, 313
    - bias-ply tires, 313
    - body, 312
    - breaking in, 324
    - caring for, 324–334
    - categories for trucks and SUVs, 319
    - chains, keeping with vehicle, 63
    - changing, 26–27
    - checking for air pressure and damage, 44, 325–326
    - checking for wear, 332–334
    - codes and classifications, 314–315
    - codes found on sidewall, 314
    - construction of, 311–313
    - dealing with defective, 334
    - determining cause of problems, 333–334
    - DOT identification and registration, 316
    - getting information about recalls, 334
    - how to change, 23–24
    - how to read treads, 332
    - inflator/sealant for, 62
    - low-pressure warning systems for, 321

- tires (*continued*)
    - maximum air pressure (psi)
      - data, 317–318
    - maximum load data for, 317
    - nonflammable
      - inflator/sealant for, 27
    - ozone checking of, 323
    - periodically checking spare, 61
    - pressure gauges, 56, 326
    - puncture-proof tires, 313
    - quality grade codes, 317
    - radial tires, 313
    - registering, 316
    - repairing flats immediately, 27
    - retreads, 323
    - rotating for uniform wear, 327–328
    - run-flat tires, 27, 313, 320
    - secrets of car sidewall codes, 314
    - self-inflating systems, 321
    - specialized systems, 319–320
    - speed ratings of, 315–316
    - suitable for passenger vehicles, 318–319
    - tips for buying, 321–324
    - tread, 312
    - types of, 318–319
    - valve, 313
    - varieties of over the years, 313
    - Web site address for filing complaints, 334
    - Web site address for ratings information, 317
    - wheel alignment and balancing, 328–331
  - tools. *See also names of individual tools*
    - general pointers for, 46
    - keeping spares in vehicle, 64
    - shopping for, 45–46
  - torque converter, in automatic transmissions, 347
  - torque wrenches, 52–53
  - torsion bars, in suspension systems, 304
  - toxic chemicals, caution about working with, 15
  - Toyota Prius, how it works, 184
  - tracking systems, 384
  - traction control systems (TCS), 378–379
  - transaxle, 337
    - in front-wheel drive vehicles, 71
  - transaxle engine, oil and transmission dipstick locations, 38
  - transaxle fluid dipstick
    - in front-wheel drive vehicles, 71
    - location of under the hood, 38
  - transfer case
    - anatomy of, 341
    - in four-wheel drive vehicles, 340–341
  - transmissions
    - at end of crankshaft, 71
    - location of in front-wheel drive vehicles, 71
    - location of in rear engine vehicles, 71
    - location of in rear-wheel drive vehicles, 71
    - location of in traverse engine vehicles, 71
    - transmission bands, adjusting when servicing transmission, 354
    - transmission controller, for automatic transmissions, 348
    - transmission cooler
      - for automatic transmissions, 201
      - for keeping transmission from overheating, 74
    - transmission dipstick, location of, 38
    - transmission filters, changing when servicing, 354
  - transmission fluid
    - in automatic transmissions, 347
    - checking, 40
    - location of dipstick under the hood, 38
    - location of, 30
    - viscosity, 40
  - transmission input shaft
    - in automatic transmissions, 347
    - in drive train, 338
  - transmission output shaft, in drive train, 338
  - transmission pan gasket, changing when servicing, 355
  - transmission systems
    - symptoms of sick, 351
    - types of, 335
    - understanding and maintaining, 335–357
  - transmissions. *See also*
    - automatic transmissions;
    - five-speed transmissions;
    - manual transmissions;
    - transmission systems
  - advantages of using overdrive, 357
  - automatic, 335
  - avoiding wear and tear on, 356–357
  - continuously variable (CVTs), 349–350
  - driving habits to extend life of, 354
  - dual-clutch, 348–349
  - five-speed, 343
  - front seal leaks in, 355
  - gearshift linkage problems, 355
  - guidelines for repairs, 355
  - importance of getting repair estimates, 355–356
  - loud clunking noises, 351
  - manual, 335
  - overhauling, 355
  - shifting problems with, 351
  - types of, 73
  - undertaking repairs wisely, 354–356
  - using passing gear for burst of speed, 357
  - vacuum modulator in, 351
- transverse engine vehicles
  - constant velocity joints in, 339
  - location of transmission in, 71
  - position of cylinders in, 136
- transverse internal combustion engines, main parts of, 136
- treadwear indicators, 333–334
- troubleshooting
  - black smoke from tailpipe, 392
  - breakdown problems, 400–403

burned rubber smell, 390  
 burned toast smell, 391  
 car won't start, 405–408  
 clunking, 389  
 directional signal  
   malfunctions, 396  
 engine dieseling (running  
   after turning off), 387  
 engine knocking noises, 386  
 engine misfiring, 387  
 engine noises, 386  
 freeway breakdown  
   problems, 397  
 fuel problems, 401–402  
 gasoline smells, 391  
 headlights, 119  
 ignition system problems,  
   402–403  
 leaks, 393–395  
 light gray smoke from  
   tailpipe, 392  
 light or dark blue smoke from  
   tailpipe, 392  
 muffler noises, 387  
 noises. *See* troubleshooting,  
   sounds  
 oil or exhaust fumes in  
   passenger compartment,  
   391  
 overheating problems,  
   403–404  
 radiator noises, 386  
 rotten egg smell, 391  
 rough idling, 387  
 rumbling noises, 389  
 smell of oil burning, 390–391  
 smelling something sweet  
   and steamy, 391  
 smells, 390  
 smoke coming from tailpipe,  
   392–393  
 sounds, 386–389  
 squeaks, rattles, and  
   vibrations, 389–390  
 squealing noises when you  
   step on the brakes, 389  
 strange sensations, 395  
 stuck horn, 388  
 ticking when engine idles,  
   386  
 tire squealing on curves, 388  
 vehicles that won't start,  
   405–408  
 water getting into the  
   passenger compartment,  
   393  
 weird, rhythmic tire noises,  
   389

whining or humming sounds  
   on curves, 388  
 whistling noise from under  
   the hood, 387  
 white vapor from tailpipe on  
   cold morning, 392  
 your drive train, 350–353  
 tune-up specifications guide  
   available in auto supply  
   stores, 13  
   finding spark plug specs in,  
   104  
 tune-ups  
   determining need for,  
   100–101  
   intervals for, 99–100  
   for vehicles with electronic  
   ignition systems, 99–100  
 turbine, in turbocharging, 140  
 turbochargers, supercharging  
   with, 140–141  
 turbocharging, how it works,  
   140  
 turn signals. *See* directional  
   signals  
 two-mode hybrids, 187

## • U •

U-joints (universal joints), in  
   rear-wheel drive vehicles,  
   71, 338  
 under-the-hood check, 29–44,  
   466  
 universal joint (U-joint). *See*  
   U-joints (universal joints)  
 urea container, for diesel  
   engines, 173

## • V •

V-8 engines, cylinder sequence  
   and firing order in, 91  
 vacuum hoses, replacing, 223  
 vacuum modulator, in  
   transmissions, 351  
 vacuum valve, in radiator  
   pressure cap, 199  
 valve cover  
   PCV valve in, 153–154  
 valves, gauge for checking,  
   56–57  
 vehicle safety, items needed  
   for emergencies, 63–64  
 Vehicle Safety Hotline, 334

vehicles. *See also* cars  
   steps for jacking up, 21–23  
   what makes them run, 73–75  
 vice-grip pliers, for your  
   toolbox, 54  
 vinyl tops, cleaning and  
   repairing, 437  
 viscosity ratings, for engine oil,  
   236–237  
 volt meter  
   checking battery strength  
   with, 36  
   gauges showing charging  
   system status, 87  
 voltage regulator, in charging  
   system, 88  
 V-type engines, 137  
   finding spark plugs in, 101

## • W •

warning lights and malfunction  
   indicator lights (MIL),  
   96–97  
 washing your car, 432–434  
   de-bugging safely, 431  
   safety tips for using  
   commercial products, 432  
   waxing or sealing, 434  
   windows and mirrors,  
   434–435  
 water jackets  
   in cooling system, 74  
   located around combustion  
   chambers in cylinders,  
   200  
 water pump  
   checking accessory belt that  
   drives, 32–33  
   in cooling system, 74, 200  
   identifying leaks from, 228  
   rebuilt or remanufactured,  
   228  
 water separators, draining on  
   diesel vehicles, 176  
 waxing or sealing  
   hard or paste waxes for, 441  
   liquid waxes for, 440  
   polyglycotes for, 441  
   polymer preservatives for,  
   441  
   recommended frequency, 440  
   soft waxes for, 440–441  
 weatherstripping, installing  
   new or patching old, 457

- Web site address  
 AAA or CAA approved repair facilities, 413  
 ADS (Association of Diesel Specialists), 414  
 ASA (National Automotive Service Association), 414  
 Better Business Bureau, 414  
 Chilton's subscription service, 67  
 Consumer Action Handbook, 426  
 Consumer Federation of America, 426  
 Earth 911 for oil recycling information, 214, 248  
 Federal Trade Commission (FTC), 426  
 Filter Council for recycling oil filters, 248  
 for getting blue book vehicle value, 227  
 for hazardous materials disposal information, 30  
 IIHS list of Ten Safest Vehicles and air bag ratings, 362  
 for list of ASE-certified technicians, 414  
 Michelin PAX system information, 320  
 National Automobile Dealers Association, 425  
 National Ethanol Vehicle Coalition, 183
- National Highway Traffic Safety Administration (NHTSA), 362  
 for tire ratings, 317  
 for videos that show deployment of air bags, 368
- wheel alignment, 329–331. *See also* alignment  
 wheel balancing, 328–329  
 wheel bearings, 280  
 checking and packing, 279–283  
 determining if packable or sealed, 279  
 on four-wheel drive vehicles, 279  
 getting at your brakes, 280  
 inspecting and repacking, 280–283  
 quick check for wearing of, 283  
 replacing when reassembling drum brakes, 277
- wheel cover (hubcap), removing, 21, 24
- wheel cylinders  
 anatomy of, 255  
 checking, 276  
 cups inside of that seal, 256  
 dust boots on, 256  
 function of with drum brakes, 255
- windows and mirrors, washing, 434–435
- windshield, dealing with damaged, 459
- windshield washer fluid  
 checking, 43  
 location of under the hood, 30
- windshield wipers  
 checking and replacing, 43–44  
 in electrical system, 98  
 keeping spare set with vehicle, 61
- wire feeler gauges, for gapping spark plugs, 55, 104
- wire hose clamps, dealing with, 222
- wiring, checking, 43
- work lights  
 needed for auto repairs, 57–58  
 for seeing under vehicles, 244  
 tips for selecting, 58
- wrenches, types of, 49–53



Xenon headlamps, 98, 120. *See also* headlights  
 replacing and adjusting, 120–121