

Index

• Numerics •

- 4-cylinder traverse engine, cylinder sequence and firing order in, 90
- 6-cylinder rear-wheel drive engines, cylinder sequence and firing order in, 90

• A •

- ABS (anti-lock braking system). *See* anti-lock braking system (ABS)
- accelerator, 336–337
- accessory belts
 - adjusting and replacing, 229–230
 - checking, 32–33
 - importance of checking regularly, 29
 - keeping spare set with vehicle, 61
 - serpentine multiaccessory drive belt, 33
 - for water pumps, 200
- acrylic or enamel finishes, cleaning and polishing, 438
- adaptive cruise control (ACC), 382
- adaptive front lighting systems (AFS). *See also* headlights
 - future availability of, 98
- adjustable devices, for vehicles, 368–369
- adjustable vice-grip pliers, for toolbox, 54
- adjustable wrenches, 53
 - for removing oil drain plug, 243
- adjusting nut, replacing when reassembling drum brakes, 277
- ADS (Association of Diesel Specialists), for list of authorized shops, 414
- air bag inflator, 364
- air bags, 362–368
 - correct seating position for, 363
 - how they work, 363–364
 - ON-OFF switches for, 364–365
 - replacing, 365
 - traveling safely with, 362–363
- air cleaner, 31. *See also* air filter
 - air filter on carbureted vehicles, 32
 - in fuel system, 69
- air conditioners
 - converting from Freon to R-134a refrigerant, 232
 - servicing, 100, 231–232
 - signs of trouble in, 232
- air filters
 - buying and replacing, 148–149
 - checking, 31–32
 - checking and cleaning, 147
 - and cold air collector box, 129
 - in fuel systems, 145
 - inside air cleaner on carbureted vehicles, 32
 - inside cold air collector box, 146
 - location of under the hood, 30
 - maintaining, 146–148
- air inlet duct, in fuel systems, 146
- air inlet hose, 146
- air intake duct, 129
- air pressure, checking for tires, 44
- air springs, in suspension systems, 304–305
- air suspension systems, anatomy of, 309
- alignment
 - camber and caster, 330
 - determining need for, 331
 - toe-in and toe-out, 330
 - turning radius, 330–331
 - of wheels, 329–331
- alloy wheels, potential damage to, 319
- all-wheel drive (AWD) vehicles, 341–342
 - vs. four-wheel drive vehicles, 341
- alternative fuels, how to find, 183
- alternatively fueled vehicles, 66, 181–192
- alternator
 - checking accessory belt that drives, 32–33
 - diagram of, 87
 - other parts electrical current supplied to by, 97
 - as part of charging system, 68–69, 86–88
 - systems run by, 88
- alternator warning light, troubleshooting, 408
- aluminum cylinder head, changing spark plugs in, 102
- aluminum engines, coolant requirements for, 213
- American Petroleum Institute (API), oil classification codes by, 237–238
- antifreeze. *See* coolants
- anti-lock braking system (ABS), 76, 260–261. *See also* brake systems
 - checking, 289–290
 - checking fluid for, 42
 - how they work, 261
 - used by traction control system, 378
 - what they don't do, 261
- anti-sway bars, in suspension system, 301
- API donut symbol, on oil containers, 237
- armature, in electronic ignition systems with distributor, 96
- ASA (National Automotive Service Association), Web site address, 414

- ASE certification programs, for auto repair technicians, 413–414
 - auto accidents, recording evidence for, 64
 - auto repair
 - considerations before tackling any job, 12
 - lessons on busting things loose, 12
 - things every driver should know, 11–28
 - Auto Repair For Dummies*
 - about the book, 1–2
 - conventions used in, 3–4
 - icons used in, 7–8
 - organization of, 4–7
 - auto repair toolbox, materials to keep in, 60–64
 - automatic transmission fluid
 - checking, 40
 - remedies to try, 352
 - viscosity, 40
 - automatic transmissions, 335
 - basic features of, 346–350
 - clutch action for, 71
 - cutaway view of, 347
 - importance of servicing regularly, 354
 - low-transmission-fluid blues, 352–353
 - servicing levels for, 352
 - automobiles, what makes them run, 73–75
 - axle, in rear-wheel drive vehicles, 71
 - axle bearings, hearing worn, 283
- B •**
- back-up beepers and sensors, 376
 - back-up cameras and monitors, 376
 - ball joints, in steering linkage, 295
 - batteries
 - buying right one for your vehicle, 115
 - checking, 33–36
 - cleaning deposits, 35
 - cutaway view of, 84
 - deciding if you should replace yourself, 114
 - disconnecting before working on, 34
 - in electrical system, 68–69
 - in starting system, 83–84
 - jump-starting on diesel-powered vehicles, 176–177
 - location of under the hood, 30, 114
 - maintaining power after disconnecting, 34
 - parts to check, 34
 - recycling, 116
 - removing old and installing new, 115–116
 - safety precautions for working on, 33–34
 - under-the-hood view, 82
 - battery cables, 84
 - checking for damage, 36
 - disconnecting to prevent shock, 34
 - removing and replacing, 34
 - battery terminals
 - brush for cleaning battery posts and clamps, 35
 - positive and negative, 84
 - battery warmers, for diesel engines, 179
 - bead and bead bundle, of tires, 312
 - belts. *See also* accessory belts
 - checking, 32–33
 - importance of checking regularly, 29
 - location of under the hood, 30
 - serpentine multiaccessory drive belt, 33
 - of tires, 312–313
 - Better Business Bureau, Web site address, 414
 - bias-belted tires, 313
 - bias-ply tires, 313
 - biodiesel fuel. *See also* diesel fuel
 - advantages of, 170
 - blade-type fuses, 118
 - bleeder screws
 - for bleeding cooling system, 224
 - finding to bleed brakes, 285
 - bleeder wrenches, 285–286
 - bleeding cooling system, 224
 - blind-spot information systems (BLIS), 377–378
 - block heaters, for diesel engines, 178
 - blue book. *See also* Kelly Blue Book; Edmunds Blue Book
 - checking for vehicle value, 226–227
 - body shops
 - checking finished bodywork, 462
 - choosing parts for repairs, 461
 - evaluating, 460–461
 - getting estimates from, 460
 - bodywork, 449–462
 - Bondo, for filling small dents and holes, 454
 - booster seats and child safety seats, 370–374
 - Bose acoustic suspension systems, 309
 - box-end wrenches, 51–52
 - Brake Assist (BA), brake systems, 262
 - brake bleeder screws. *See* bleeder screws
 - brake booster
 - in brake system, 77
 - location of under the hood, 41
 - for power brakes, 251
 - brake calipers
 - in brake system, 77
 - checking, 278
 - brake disc, checking for wear, 278
 - brake drums
 - anatomy of, 275
 - how they work, 255
 - replacing adjusting nut when reassembling, 277
 - things you need to remove to get at, 273
 - brake fluid
 - in brake systems, 253–254
 - buying and using, 284
 - checking, 41–43
 - checking in your master cylinder, 268–270
 - dangers of, 284
 - disposing of, 43
 - flushing and changing, 284–285
 - location of under the hood, 30
 - brake lines
 - in brake system, 77, 253
 - checking, 270–271

- brake linings. *See also* brake shoes and linings; brake systems; drum brakes
for drum brakes, 256–257
- brake master cylinder. *See* master cylinder
- brake pads, in brake system, 77
- brake pedal, 250–251
in brake system, 77
checking, 265–267
- brake rotor. *See* brake disc
- brake shoes and linings
checking, 276
for drum brakes, 256
- brake systems
anatomy of with drum and disc brakes, 250
basics of, 249–254
bleeding your brakes, 285–287
checking, 264–271
checking your master cylinder, 267–270
components of, 77
electronic brakeforce distribution (EBD), 262
flushing and changing brake fluid, 284–285
getting at your brakes, 271–279
for making your vehicle stop, 77–78
other electronic, 262
power brakes, 251
questions to ask when testing
brake pedal, 266–267
regenerative, 262
steps for stopping a vehicle, 77
types of, 76
- brake warning light switch, in brake system, 76
- brakes
checking, 271–279
extending the life of, 264
things to do and not to do when working on, 271–273
- brake-shift interlocks, 378
- breakdowns, handling safely, 397–400
- ● ●
- calipers, in brake system, 77
- camera, for recording accident evidence, 64
- car covers, buying tips, 448
- car washes, adjusting do-it-yourself high-pressure hoses, 429
- carburetors, in older vehicle fuel systems, 69, 125
- carpeting and upholstery, cleaning, 444–445
- catalytic converter
for diesel engines, 172
in exhaust system, 75, 143–144
needed by GDI system, 133
troubleshooting, 155–156
- cellphone, for calling for assistance, 64
- cellulosic ethanol, 182
- cetane, diesel fuel rated by, 169
- CFC-12 refrigerant, phase out of, 202
- chain and department stores, choosing for vehicle service, 411
- charging system, 86–88
alternator in, 68–69
diagram of, 87
under-the-hood view, 82
- Check Engine light, 203. *See also* malfunction indicator lights (MIL); warning lights
troubleshooting, 400
- checklists
Monthly Under-the-Hood, 510
Tune-up, 510
Lubrication and Brake, 511
- child safety seats
and booster seats, 370–374
choosing, 372–374
finding top-rated, 372
fitting stations, finding, 374
harnesses and anchoring systems, 373–374
ISOFIX connections for, 373–374
LATCH system for, 373
requirements for, 370–372
testing before purchasing, 374
- Child Seat Fitting Stations, finding, 374
- Chilton's Web site address, 67
- Ci-4 Plus oil, for diesel engines, 237
- circuits and fuses, in starting system, 82
- cleaners
safety rules when working with, 15
using gentle for car cleaning, 433
- cleaning engines, tips for doing it yourself, 441–442
- cleaning your car, 429–448. *See also* washing your car
acrylic or enamel finishes, 438
biodegradable cleaners for, 430–431
caring for headliners, 446–447
safety rules for working with, 15
cleaning and repairing convertible tops, 436–437
clear coat and other delicate finishes, 438
convertible tops and plastic windows, 435
de-bugging safely, 431
electric buffers for, 438
exterior, 431–441
fighting stains and odors, 445–446
final touches, 447
floor mats, 447
hiring someone to do it, 430
inside the windows, 447
interior, 442–447
keeping things tidy, 443–444
leather seats, 445
polishing metal trim and chrome, 435
repairing tears and holes in seats, 446
safety tips for using commercial products, 432
tires and wheels, 436
upholstery and carpeting, 444–445
vinyl and plastic, 445
vinyl tops, 437
washing the vehicle body, 432–434
and waxing or sealing, 434, 440–441
windows and mirrors, 434–435
- clear coat and other delicate finishes, cleaning and polishing, 432–433, 438

- clutch
 - action in four-stroke power cycle engine, 139
 - and clutch pedal in drive train, 338
 - components of, 343–344
 - for manual transmission vehicles, 71
 - pedal free-play, 353
 - taking care of, 353–354
- clutch disk and pedal, in manual transmissions, 344
- clutch pressure plate, in manual transmissions, 344
- clutch release arm, in manual transmissions, 344
- CNG stations, finding, 191
- CO₂ refrigerant system, in prototype stage, 202
- coil springs, in suspension systems, 303–304
- cold air collector box, 31. *See also* air filters and air filter, 129
 - checking and cleaning air filter and, 147
 - in fuel systems, 146
 - removing air filter from, 146
- collision mitigation systems, 382
- collision warning with brake support (CWBS), used by some adaptive cruise control systems, 382
- combination hybrids, 184–185
- combination slip-joint pliers, for your toolbox, 53–54
- combination wrenches, 51–52
- combo air bags, 368
- combustion chamber
 - in four-stroke power cycle engine, 139
 - fuel delivered to, 125
- complaints
 - getting satisfaction on, 422–424
 - going to higher level with, 424–426
 - going to Federal Trade Commission (FTC), 426
- compressed natural gas (CNG) measured in gasoline-gallon equivalents (GGE), 191
- used in natural gas vehicles, 191
- compression gauges
 - for checking compression in cylinders, 157
 - for checking engine pressure, 56–57
 - how to use, 158–159
- compression ratio, in four-stroke power cycle engine, 139
- compression stroke, in four-stroke power cycle engine, 139. *See also* four-stroke power cycle
- computer. *See* engine control unit (ECU)
- connecting rods
 - at bottom of piston, 74
 - in four-stroke power cycle engine, 139
- Consumer Action Handbook, Web site address, 426
- Consumer Federation of America, Web site address, 426
- continuously variable transmissions (CVTs), 335
- components of, 349–350
- control arms
 - in steering linkage, 295
 - in suspension system, 301
- convertible tops and plastic windows, cleaning and repairing, 437
- coolant disposal, 214
- coolant hoses, keeping spare set with vehicle, 61
- coolant hydrometer, 211–212
- coolant protection level tester, 211
- coolant recovery system, 198
 - checking and adding liquid to, 209
 - in cooling system, 74
 - location of reservoir under the hood, 30, 207
 - removing cap from, 206–208
 - water and coolant mixture for, 36
- coolant/antifreeze, for cooling system, 196–197
- coolants. *See also* coolant recovery system; cooling system; radiator
 - checking, 36–37
 - checking reservoir level for, 36
 - figuring out how much you need, 212–213
 - ideal mixture of water and, 208
 - importance of checking regularly, 29
 - importance of not overfilling, 208
 - proper mixture of, 36
 - protecting children and animals from, 213–214
 - reasons to change, 37, 212
 - safe storage and disposal of used, 214
 - safety rules when working with, 15
 - safety warning, 37
 - toxicity of, 211
- cooling system. *See also* overheating
 - anatomy of, 196
 - avoiding disaster when adding liquid to, 208–209
 - bleeder screws, 225
 - bleeding, 224
 - buying and replacing hoses and hose clamps, 219–225
 - checking and adding liquid to, 36–37, 206–210
 - checking for internal engine leaks, 227–228
 - checking for leaks and other problems, 217
 - checking reservoir level for, 36
 - components of, 74–75
 - coolant/antifreeze, 196–197
 - dealing with overheating problems, 203–232
 - determining if coolant needs changing, 211
 - fan as part of, 199–200
 - finding leaks in, 216–219
 - flushing and changing coolant, 210–216
 - leaks in engine-block core plugs, 226–227
 - locating leaks by pressure testing, 228–229
 - pros and cons of flushing it yourself, 210
 - radiator as part of, 197–198
 - removing pressure cap safely, 206–208
 - repairing leaks in, 225–229

- thermostat as part of, 200–201
 - up close, 195–202
 - using sealer for small leaks in, 226
 - water pump as part of, 200
 - core plugs, location of, 226
 - crankcase
 - crankshaft and oil pan housed in, 137
 - in front-wheel drive vehicles, 71
 - crankshaft
 - connecting rod attached to, 70
 - in drive train, 338
 - housed in crankcase, 137
 - sensor in distributorless electronic ignition system, 93–94
 - crash sensors, for air bags, 364
 - creasant wrenches, 53
 - creepers, 20
 - using for auto repairs, 59–60
 - crumple zones, for added safety in vehicles, 368
 - curtain and tubular air bags, protection afforded by, 367
 - cylinder heads
 - in engine block, 135
 - in front-wheel drive vehicles, 71
 - leaks under, 227
 - cylinder sequence. *See also* ignition systems
 - of engines, 89–92, 137
 - versus firing order, 92
 - and firing order in traverse 4-cylinder engine, 90
 - and firing order in traverse V-6 engines, 92
 - and firing order in traverse V-8 engines, 92
 - and firing order in V-8 engines, 91
 - cylinders
 - anatomy of, 136
 - checking compression in, 156–159
 - fuel/air mixture passed to, 70, 85
 - gauge for checking pressure in, 56–57
 - parts in, 137
- D •**
- dealerships, choosing for vehicle service, 410–411
 - deflecting beam torque wrench, 52
 - de-icer, keeping can of with vehicle, 63
 - dents and dings
 - Bondo, 454
 - dealing with, 449–462
 - filling and painting small, 453–455
 - paintless dent-repair specialists, 453
 - removing small, 453
 - Department of Transportation's Vehicle Hotline, for complaints, 426
 - dial torque wrench, 52
 - Diesel, Rudolph, engine designed by, 170
 - diesel engines, 66
 - battery warmers for, 179
 - block heaters for, 178
 - caring for, 173–177
 - changing the fuel filter, 175
 - changing the lubricating oil, 174–175
 - Ci-4 Plus oil, 237
 - clean nontoxic newcomers, 161–162
 - common rail fuel injection system, 167
 - diesel oxide catalytic converter, 172
 - draining water separators, 176
 - electrical system, 171
 - emissions control systems, 171–173
 - finding reliable mechanic for, 180
 - four-stroke power cycle, 168
 - fuel filter in, 166
 - fuel system in, 167–171
 - glow plugs for, 165
 - how they work, 165–167
 - particulate filter, 172
 - pros and cons of, 162–164
 - starting on frosty mornings, 178–179
 - what makes them go, 164–167
 - diesel fuel, 168–176. *See also* biodiesel fuel
 - emergency substitutes, 171
 - rated by cetane, 169
 - standard, 169–170
 - toxicity of, 169
 - where to buy, 170
 - diesel fuel system, bleeding and priming, 175–176
 - diesel oil
 - changing, 174–175
 - classification codes, 174–175
 - diesel oxide catalytic converter, 172
 - diesel-powered vehicles
 - improving fuel consumption with turbocharging, 141
 - troubleshooting stalling problems, 401
 - differential, in rear-wheel drive vehicles, 71, 339–340
 - digital keys
 - key code numbers for, 28
 - pros and cons of, 28
 - dipsticks, checking, 38–41
 - directional signals. *See also* electrical system
 - flashers for, 97
 - replacing, 123
 - troubleshooting malfunctions of, 396
 - disc brakes, 76, 257–258
 - advantages over drum brakes, 258
 - anatomy of single-piston floating-caliper, 258
 - calipers, 257
 - checking, 277–279
 - diagram of, 77
 - distributor, spark-plug wires running from, 101
 - distributor cap, in electronic ignition systems with distributor, 95
 - distributorless electronic ignition system, component diagram of, 73, 93
 - door-mounted air bags, 368
 - double-wishbone suspension systems, anatomy of, 307
 - drain pan, for catching old oil during oil change, 243–244

- drive train. *See also*
 - transmission
 - basic types of, 337
 - flow of power through, 337–340
 - in four-stroke power cycle engine, 139
 - in four-wheel drive vehicles, 340–341
 - in front-wheel drive vehicles, 339
 - function of, 336–337
 - in rear-wheel drive vehicles, 338
 - rear-wheel drive vehicles with manual transmission, 71
 - tracing flow of power in, 338–339
 - troubleshooting, 350–353
 - understanding and maintaining, 335–357
 - driveshaft
 - as part of drive train, 336
 - in rear-wheel drive vehicles, 71, 73
 - driving eco-logically, 471–472
 - drum brakes, 76
 - in action, 256
 - adjusting devices for, 257
 - anatomy of, 254
 - brake shoes for, 256
 - in brake systems, 254–257
 - checking, 273–276
 - disc brakes advantages over, 258
 - reassembling after checking, 276–277
 - replacing adjusting nut when reassembling, 277
 - systems for front- and rear-wheel drive vehicles, 253
 - dual-clutch transmissions (DCTs), 348–349
 - dual-fuel vehicles. *See* flex-fuel vehicles (FFVs)
 - dual-stage air bags, 367
 - duct tape, for emergency repairs, 64
 - dust boots, on wheel cylinders, 256
- **E** ●
- E10 fuel, 182
 - E85 fuel, 182, Web site for vehicles that can run on, 183
 - Earth 911
 - for information about toxic waste disposal, 214
 - Web site address, 248
 - eco-logical fuel economy, 469–474
 - ECU (electronic control unit), air bags deployed by, 364
 - Edmunds Blue Book, Web site address, 227, 428
 - EGR valve, in exhaust systems, 144
 - electric fuel pump. *See* fuel lines and fuel pumps
 - electric vehicles (EV), 67, 188–189
 - troubleshooting stalling problems, 401
 - electrical gadgets, on automobiles, 97–98
 - electrical system
 - battery in, 68
 - controlled by ECU on newer vehicles, 81–82
 - diesel versus gasoline vehicles, 171
 - ignition switch in, 68
 - keeping in tune, 99–123
 - for making your vehicle start and run, 68–73
 - starter solenoid switch in, 68
 - your car's spark of life, 81–98
 - electrolyte, checking for batteries, 36
 - electronic brakeforce distribution (EBD) systems, 262
 - electronic control module (ECM), in electronic ignition systems with distributor, 96
 - electronic diagnostic tools, cost of, 385
 - electronic fuel injectors
 - computer controlled, 131
 - in fuel system, 131
 - electronic ignition systems
 - diagram with a distributor, 95
 - with distributor, 94–96
 - distributor cap in, 95
 - distributorless, 73
 - electronic control module (ECM) in, 95
 - leaving distributor to a pro, 113
 - pick-up coil in, 95
 - rotor in, 95
 - tools for adjustments, 56
 - troubleshooting problems with, 402
 - electronic power control unit (PCU), in fuel cell vehicles, 191
 - electronic power steering system, anatomy of, 297
 - electronic solenoid, in automatic transmissions, 351
 - electronic stability control (ESC)
 - determining if vehicle is equipped with, 381
 - how it works, 379–381
 - electronic transmission systems. *See* transmission systems
 - emergency brakes. *See* parking (emergency) brakes
 - emergency parts, keeping with vehicle, 61
 - emergency road assistance, for locked cars, 28
 - emission traps, for diesel engines, 172–173
 - emissions control devices
 - components of, 75
 - exhaust gas recirculation (EGR) system, 144
 - in exhaust system, 142–144
 - emissions control system
 - PCV valve as part of, 152–155
 - troubleshooting catalytic converter in, 155–156
 - engine
 - jump-starting, 62–63
 - in rear-wheel drive vehicles, 71
 - rebuild and replacement costs, 240
 - what to do when no amount or type of oil helps, 240
 - tips for cleaning it yourself, 441–442
 - engine block
 - four-stroke power cycle in, 137–139
 - in front-wheel drive vehicles, 71
 - major components of, 135–137
 - where fuel system and ignition system meet, 135–139

- engine control unit (ECU)
 electrical system controlled by, 81–82
 introduction to, 67–68
 engine displacement, 104–105
 engine fires, causes of, 60
 engine flywheel, in drive train, 338
 engine lugging, solving with downshifting, 357
 engine oil. *See also* motor oil; oil
 checking, 38–39
 detergents in to dissolve sludge in, 234
 engine cooling by, 234
 friction reduction by, 234–235
 how it benefits your vehicle, 234–235
 reason for checking yourself, 39
 EPA Stratospheric Ozone Hotline, contacting, 232
 ethanol, methanol, and flex-fuel vehicles, troubleshooting stalling problems, 401
 ethanol fuel
 fewer emissions produced by, 182–183
 usable in flex-fuel vehicles, 182
 exhaust manifold, 129–130
 in exhaust system, 75
 exhaust pipe, in exhaust system, 75
 exhaust stroke, in four-stroke power cycle engine, 138–139. *See also* four-stroke power cycle
 exhaust system
 components of, 75, 141–144
 controlling noise of escaping gases in, 75
 diagram of, 142
 muffler heat shield, 75
 as vehicle waste disposal system, 75
 expansion tank. *See* coolant recovery system
 external fuel filters, 128
- **F** ●
- factory representatives, contacting about repair complaints, 425
- fan, in cooling system, 74, 199–200
 feeler gauge, for gapping spark plugs, 104
 Filter Council, Web site address, 248
 fire extinguisher
 importance of keeping handy, 15
 safe use of, 60
 storing to keep it handy, 444
 firing order. *See also* ignition systems
 4-cylinder traverse engine
 6-cylinder rear-wheel drive engine
 versus cylinder sequence, 92
 and cylinder sequence of engines, 90–92
 in four-stroke power cycle engine, 139
 first aid kit, in vehicle, 63
 five-speed transmissions, 343
 fixed-caliper brake systems, 258
 flashlights and reflectors, for vehicle safety, 63
Flat Rate Manual, service pricing from, 416
 flat tires. *See* tires
 flex-fuel vehicles (FFVs), 183
 E85 fuel for, 182
 floor mats, cleaning, 447
 flywheel, as part of starter system, 85
 foreign in-line 4-cylinder engines, cylinder sequence and firing order in, 90
 fossil fuels, contribution to global warming, 181
 four-stroke power cycle. *See also* compression stroke; exhaust stroke; intake stroke; power stroke
 in engines, 137–139
 in diesel engines, 168
 four-wheel drive vehicles
 versus all-wheel drive vehicles, 341
 drive train in, 340–341
 with transfer case and two differentials, 341
 transfer case in, 340–341
 freeze plugs. *See* core plugs
 Freon. *See* CFC-12 refrigerant
- friction bands and plates, in automatic transmissions, 348
 frontal air bags, 364–367
 front-end alignment. *See* alignment; wheel alignment
 front-wheel drive vehicles
 crankcase in, 71
 cutaway view of, 71
 cylinder head in, 71
 drive train, 337
 dual brake systems on, 253
 engine block in, 71
 flow of power through transaxle on, 339
 fuel tank in, 71
 location of transmission in, 70
 oil and transmission dipstick locations, 38
 oil dipstick in, 71
 position of cylinders in, 136
 spark plugs in, 71
 transaxle fluid dipstick in, 71
 transaxle in, 71, 73, 339
 transmissions versus rear-wheel drive vehicle transmissions, 70
 fuel cell vehicles
 components of, 190–191
 how they work, 190–191
 fuel cells
 in fuel cell vehicles, 190
 how they work, 190
 fuel economy
 checking car out ecologically, 469–474
 cleaning out junk to lighten load, 474
 driving eco-logically for, 471–472
 effect of bad PCV valve on, 470
 effect of dirty air filter on, 470
 effect of improperly tuned ignition system on, 470
 effect of loose accessory belts on, 470
 effect of misfiring spark plugs on, 470
 effect of poorly adjusted brakes on, 470
 effect of worn wheel bearings on, 470
 filling up eco-logically, 473
 keep tires properly inflated, 473–474

fuel economy (*continued*)
 keep vehicle waxed to cut wind resistance, 474
 structuring trips for, 472–473
 using a trailer instead of a roof rack, 465

fuel filters
 changing in diesel engines, 175
 deciding if you should change yourself, 149
 in diesel engines, 166
 in fuel systems, 128, 145
 locating on your vehicle, 149–150
 replacing, 148, 151–152
 replacing an insert in, 151

fuel gauge, in fuel system, 127

fuel hoses, dangers of replacing yourself, 223

fuel injection systems
 controlled by ECU on newer vehicles, 69
 improvements to, 133

fuel injectors
 anatomy of, 131, 166
 following fuel through, 130–131

fuel flowing through fuel rail to, 132
 in modern fuel systems, 125

fuel lines and fuel pumps, in fuel systems, 69, 127–128

fuel pressure regulator, in throttle-body fuel injection systems, 134

fuel pumps. *See also* fuel lines and fuel pumps
 checking, 128
 disabling to change fuel filter, 151
 in fuel systems, 69, 145
 rebuilt versus new, 152

fuel rail assembly, for fuel injector systems, 132

fuel systems
 for alternative fuel vehicles, 125
 basic components of, 125–130
 in diesel engine, 167–171
 float in fuel tank, 127
 following fuel through fuel injectors, 130–131
 fuel filters in, 128
 fuel lines and fuel pumps, 127–128
 fuel/air mixture, 130

in internal combustion engine (ICE), 69–70
 introduction to traditional, 125–144
 keeping in tune, 145–160
 troubleshooting stalling problems with, 401
 what to do when all else fails, 159–160

fuel tank
 dangers of topping off, 17
 in front-wheel drive vehicles, 71
 in fuel system, 69
 how to fill, 15–17
 importance of keeping full, 149
 location of in fuel system, 126–127

fuel/air mixture, in fuel systems, 70, 130

fuels, 182–183. *See also specific fuel names*

funnels
 automotive uses for, 60
 using for oil changes, 244

fuse boxes, locations of, 116–117

fuses. *See also* electrical system
 blade-type, 118
 changing, 116–118
 keeping replacements with vehicle, 61
 as part of electrical system, 97
 removing and replacing, 118
 replacing with proper type and amperage, 118
 tubular, 118

fuses and circuits, in starting system, 82

• **G** •

garages. *See* service facilities
 gas stations, how to fill gas tank, 15–17

gas tank. *See* fuel tank

gasohol. *See* fuels

gasoline (fuel). *See* fuel systems; fuels

gasoline cans
 dangers of empty, 130
 disposing of empty, 14

gasoline direct injection (GDI) system, catalytic converter needed by, 133

gasoline-gallon equivalents (GGE), CNG measured in, 191

gauges, types of for your toolbox, 55

gear ratio, in manual transmissions, 339

gears. *See also* transmission in transmissions, 344

gearshift, 343
 in drive train, 336, 338

gearshift linkage, problems with, 355

gear-type hose clamps, dealing with, 222

global warming
 caused by ICE emissions, 66
 fossil fuel contribution to, 181

glossary, of automotive terms, 475–506

gloves, keeping in vehicle for repairs, 64

glow plug, in diesel engine precombustion chamber, 165

GPS systems, 383

grease seal, for inner wheel bearings, 282, 283

• **H** •

halogen headlamps, 98. *See also* headlights
 replacing and adjusting, 120–121

hand cleaner, keeping in vehicle, 63

hazardous materials, disposing of, 30

head gasket, checking for leakage, 37, 227

head restraints
 adjustable for vehicles, 369
 recommended positioning of, 369

headlights
 checking alignment of, 122–123
 checking for markings on, 120
 determining which you have, 119–120
 getting inspection certificate for, 122
 troubleshooting, 119
 types of, 98

- headlights and directional signals, dealing with, 119–123
 - Xenon, 120
- headliners, caring for, 446–447
- heater core
 - and hoses in cooling system, 74
 - location of, 201
- heater hoses, in cooling system, 74
- HID (high intensity discharge) lamps, 98, 120. *See also* headlights
- hood release, finding, 17
- hoods, how to open, 17–18
- hose clamps
 - buying and replacing, 222
 - checking and tightening as necessary, 219
 - types of, 222
- hoses. *See also* heater hoses; radiator hoses
 - checking for leaks, 218–219
 - checking radiator hoses for damage, 37
 - in cooling system, 74
 - installing, 223
 - location of under the hood, 30
 - for radiator, 197–198
 - replacing, 223–225
- how to
 - add air to your tires, 326–327
 - add liquid to cooling system, 209
 - adjust and replace accessory belts, 229–230
 - adjust parking brake, 289
 - apply body filler for dents and dings, 454–455
 - bleed a master cylinder, 287
 - bleed and prime diesel fuel system, 175–176
 - bleed your brake system, 285, 287
 - buy and replace an air filter, 147–148
 - buy the right hoses for your vehicle, 220–221
 - buy the right parts for your vehicle, 13–14
 - change a tire, 23–27
 - change diesel fuel filter, 175
 - change diesel lubricating oil, 174–175
 - change fuses, 116–118
 - change oil and filter, 244–247
 - change radiator or heater hoses, 224–225
 - change spark plugs, 101–114
 - change vacuum hoses, 223
 - change your oil, 241–248
 - check accessory belts, 32–33
 - check air filter, 31–32
 - check air pressure in tires, 325–326
 - check and add liquid to radiator, 209–210
 - check and clean air filter and cold air collector box, 147
 - check and diagnose leaks under your car, 393–395
 - check and replace windshield wipers, 43–44
 - check anti-lock brakes, 289–290
 - check automatic transmission fluid, 40
 - check battery, 33–36
 - check brake fluid, 41–43
 - check brake lines, 270–271
 - check brake pedal, 265–267
 - check compression in cylinders, 156–159
 - check coolant, 36–37
 - check coolant recovery system, 209
 - check dipsticks, 38–41
 - check disc brakes, 277–279
 - check drum brakes, 273–276
 - check fuel pump, 128
 - check headlight adjustment, 122–123
 - check hoses, 37
 - check master cylinder, 267–270
 - check oil, 38–39
 - check PCV valve, 154
 - check power-steering fluid, 41
 - check radiator hoses for leaks, 218–219
 - check steering, 299–300
 - check tires, 44
 - check tires for wear, 332–334
 - check wheel bearings for wear, 283
 - check windshield washer fluid, 43
 - check wiring, 43
 - clean and polish lacquered or enameled car, 439–440
 - clean the PCV valve, 155
 - deal with any rust you find, 451–452
 - determine which headlights you have, 119–120
 - determine how much coolant you need, 212–213
 - determine if car needs a tune-up, 100
 - determine if coolant needs changing, 211–212
 - disassemble and put anything back together, 18–20
 - fill fuel tanks, 15–17
 - find a reliable diesel mechanic, 180
 - find leaks in the cooling system, 216–219
 - flush and change brake fluid, 284–285
 - flush cooling system and change coolant, 210–216
 - gapping spark plugs, 89
 - get at wheel bearings, 280
 - get into car when locked out, 28
 - get your bearings under the hood, 30
 - identify types of cooling system leaks, 227–228
 - inspect and repack wheel bearings, 280–283
 - install new weatherstripping, 457–458
 - jump-start, 406–408
 - jump-start diesel batteries, 176–177
 - keep electrical system in tune, 99–123
 - locate the fuel filter, 148–149
 - locate the PCV valve, 153
 - loosen lug nuts, 24–26
 - maintain your air filter, 146–148
 - measure inside and outside diameter of hoses, 221
 - open car hood, 17–18
 - read tires for treadwear, 332
 - reassemble drum brakes after checking, 276–277
 - remove and repack inner wheel bearings, 282
 - remove and replace gear-type hose clamps, 222
 - remove and replace screw-type hose clamps, 222
 - remove and replace the PCV valve, 154
 - remove and replace wire hose clamps, 222

how to (*continued*)

- remove pressure cap safely, 206–208
- remove wheel covers or hubcaps, 24
- repack outer wheel bearings, 281–282
- repair radiator leaks, 225–226
- replace a battery, 114–116
- replace a fuel filter, 148–150
- replace an insert in fuel filter, 151
- replace and adjust halogen and Xenon headlamps, 120–121
- replace and adjust sealed-beam headlights, 121–122
- replace directional signals, 123
- replace the inner wheel bearing grease seal, 282–283
- replace your thermostat, 230–231
- rotate your tires, 327–328
- safely dispose of empty gas cans, 14
- service the PCV valve, 152–155
- shop for and use jacks, 58–59
- shop for tools, 45–46
- stock your repair toolbox, 61–64
- take apart anything and put it back together, 18–20
- test for loose accessory belts, 229–230
- touch up paint job, 456–457
- troubleshoot catalytic converter, 155–156
- troubleshoot headlights, 119
- use combination wrench, 51
- use compression gauge, 56–57, 158–159
- use creepers, 59–60
- use gauges, 55–57
- use jack safely, 20–23
- use jack stands, 59
- use pliers safely, 54
- use tire pressure gauges, 56
- use wire and taper feeler gauges, 55
- hubcap. *See* wheel cover (hubcap)
- hybrid vehicles, 67
 - combination hybrids, 184–185
 - parallel hybrids, 184–185
 - plug-in hybrids, 186–187
- regenerative braking systems for, 187
- troubleshooting stalling problems, 402
- two-mode hybrids, 187
- types of, 184–188
- hydraulic automatic transmission, cutaway view of, 347
- hydraulic brakes, 77. *See also* brake systems
- hydraulic jack
 - shopping for, 58
 - using safely, 22
- hydrogen and fuel cell vehicles, 190–191
- hydrogen gas, in fuel cell vehicles, 190
- hydrogen-powered electric vehicles (EV). *See* fuel-cell vehicles
- hydrogen-powered fuel cells, how they work, 188–189
- hydrogen-powered vehicles, troubleshooting stalling problems, 402

● 1 ●

- ice and snow equipment, keeping with vehicle, 63
- idiot lights. *See* malfunction indicator lights (MIL); warning lights
- ignition coil, spark-plug wires running from, 101
- ignition control module (ICM) in distributorless electronic ignition system, 93–94
- timing information stored in, 93
- ignition switch
 - in electrical system, 68
 - in starting system, 83
- ignition systems
 - battery as part of, 33
 - components of, 88–96
 - electric current provided by, 73
 - modern distributorless, 93–94
 - troubleshooting problems with, 402–403
 - under-the-hood view, 82
- ignitions, override switch for, 28
- IHS list of Ten Safest Vehicles and air bag ratings, Web site address, 362
- independent garages, choosing for vehicle service, 411

- inflator/sealant, for emergency flat tire repair, 62
- injector solenoid, in throttle-body fuel injection systems, 134
- in-line engines, 137
 - finding spark plugs in, 101
 - oil and transmission dipstick locations, 38
- intake and exhaust valve, openings in cylinders, 137
- intake manifold, 129
 - checking PCV valve in, 154
 - fuel pumped into, 70
 - location of PCV valve in, 153
- intake stroke, in four-stroke power cycle engine, 137–138. *See also* four-stroke power cycle
- integral parking brakes, anatomy of, 288
- internal combustion engine (ICE)
 - as the heart of most vehicles, 65–66
 - main parts of, 135
- invoices
 - checking for listing of parts and labor guarantees, 417–420
 - importance of checking carefully, 417–420
- ISOFIX connections, for child safety seats, 373–374

● J ●

- jack stands, 20
 - importance of for auto repairs, 59
 - proper positioning of, 22
 - using safely, 59
- jacks
 - blocking wheels, 20
 - shopping for, 58–59
 - types of, 22
 - using safely, 20–23, 59
- jumper cables
 - for emergency car starting, 62–63
 - using safely, 407–408
- jump-starting engines, 62–63

● K ●

- Kelly Blue Book, Web site address, 227, 428
- key code numbers, finding for digital keys, 28

• L •

LATCH (Lower Anchors and Tethers for Children) system
 for child safety seats, 373
 Web site address for information about, 373

leaf springs, in suspension systems, 302–303

leaks, troubleshooting, 393–395
 in engine block core plugs, 226–227
 head gasket, checking for in, 37, 227
 locating by pressure testing, 228–229

LED headlamps, 98. *See also* headlights

lifetime lubrication systems, for steering systems, 295

locked car, getting into when you're locked out, 28

locksmith, calling for locked car assistance, 28

LoJack
 Early Warning Recovery System, 384
 Stolen Vehicle Recovery System, 384

low-pressure warning systems, types of for tires, 321

lubrication system
 components of, 74
 for reducing friction on metal engine parts, 234–235

lug nuts
 loosening, 21, 24–26

lug wrench
 for changing tires, 24
 keeping with vehicle, 61
 for removing lug nuts, 61

• M •

MacPherson struts, 306

maintenance. *See also* preventive maintenance
 finding a reliable diesel mechanic for, 180
 finding a reliable service facility, 413–414
 importance of monthly, 29–44
 location of parts under the hood, 30

Maintenance Record, 29
 form, 509
 importance of keeping, 421

Lubrication and Brake checklist, 511

Monthly Under-the-Hood checklist, 510

Parts Replacement checklist, 512

Tune-up checklist, 510

malfunction indicator lights (MIL), 203
 dealing with, 401
 getting report from electronic sensors, 97
 showing if alternator isn't working properly, 88
 and warning lights, 96–97

manifolds, intake and exhaust, 129–130

manual transmissions, 335
 components of, 342–344
 gear ratio, 345
 having fluid level checked for, 40
 how they work, 345–346
 location of clutch for, 71
 shifting actions of, 346

master cylinder
 ABS actuator in Japanese cars, 287
 activated by the brake booster, 251
 bleeding air out of, 287
 for brake fluid, 41
 in brake system, 76
 looking inside of, 269
 metal, 252
 plastic, 252
 removing lid from, 268
 types of, 41

mechanic's invoices, sections of, 418–420

metal trim and chrome, polishing, 435

methanol fuel, uses for, 182–183

metric wrenches, 49

mild hybrids. *See* parallel hybrids

monthly under-the-hood check, 29–44, 466

motor oil, used in lubrication system, 74

muffler, in exhaust system, 75, 142

multi-fuel vehicles. *See* flex-fuel vehicles (FFVs)

multigrade oil. *See* multi-viscosity (multi-weight) oil

multi-link suspension systems, anatomy of, 308

multi-port injection (MFI) systems, 131–132

multi-viscosity (multi-weight) oil, 237

• N •

National Automobile Dealers Association, complaining to, 425

natural gas vehicles (NGV), 191–192
 example of, 192
 troubleshooting stalling problems, 402

navigation systems, types of, 383

needle-nosed pliers, for your toolbox, 53–54

negative ground, for batteries, 83

NHTSA, Web site address, 362

NHTSA's brochure, for information about ON-OFF switches, 365

nonflammable inflator/sealant, for emergency flat tire repair, 27

NOx (nitrogen oxides) emissions, 133

• O •

OEM (Original Equipment Manufacturer) parts, 13, 461

offset screwdriver, 47

oil. *See also* engine oil; lubrication system; motor oil
 change frequency in extreme operating conditions, 241
 checking, 38–39
 checking after oil change, 247
 choosing the right one for your vehicle, 238–240
 Ci-4 Plus, 237
 classification codes, 237–238
 cleaning up spilled thoroughly, 248
 how often to change, 240–241

- oil (*continued*)
 - keeping your car young and happy, 233–248
 - for oil changes, 242
 - reason for checking yourself, 39
 - recycling old, 248
 - synthetic versus mineral-based, 238
 - viscosity ratings, 236–237
 - what to do when no amount or type helps, 240
 - what you should know about it, 235–238
 - oil additives, 236
 - oil change intervals, 241
 - oil changes
 - doing systematically, 244–247
 - getting your supplies together, 242–243
 - how to clean up oil, 244
 - keeping your hands clean during, 244
 - oil classification codes
 - for gasoline and diesel engines, 238
 - start of, 237
 - oil dipstick
 - checking oil level on, 39
 - in front-wheel drive vehicles, 71
 - location of under the hood, 30, 38
 - oil drain plug, removing and replacing, 245–247
 - oil drain plug gasket, 243
 - oil filter
 - draining oil from old, 246
 - in lubrication system, 74
 - for oil changes, 242–243
 - recycling old, 248
 - removing and replacing, 246
 - wrench for removing, 243
 - oil pan, 234
 - housed in crankcase, 137
 - oil pump, 234
 - oil recycling centers, locating, 248
 - oil warmers, for diesel engines, 179
 - onboard computers, protecting against damage, 34
 - ON-OFF switches
 - for air bags, 364–365
 - NHTSA's brochure for information about, 365
 - OnStar, 384
 - open-end wrenches, 51–52
 - overheating
 - addressing occasional, 204
 - collapsing bottom radiator hose as cause of, 205
 - dealing with chronic, 204
 - identifying other causes of, 205–206
 - late timing as cause of, 205
 - low oil level as cause of, 205
 - overcoming, 203–206
 - plugged radiator as cause of, 205
 - pressure cap problems as cause of, 204
 - slipping accessory belts as cause of, 205
 - troubleshooting problems with, 403–404
 - owner's manual
 - importance of keeping handy, 66–67
 - for parts specifications, 13
 - oxidation catalysts, in catalytic converters, 143–144
- p •**
- painting and priming, touching up your paint job, 455–457
 - parallel hybrids, 184–185
 - examples of, 186
 - parking (emergency) brakes, 76, 258–260
 - adjusting, 260, 288–289
 - cable activating on rear-wheel disc brakes, 260
 - integral, 259, 288
 - setting before changing fuel filter, 151
 - transmission-type, 259
 - particulate filter, for diesel engines, 172
 - parts
 - buying the right ones for your vehicle, 13–14
 - choosing for repairs, 461
 - how to disassemble and put back together, 18–20
 - keeping old with vehicle, 61
 - making notes during disassembly, 19
 - OEM and aftermarket, 13
 - “Pass Air Bag Off” warning light, 365
 - PAX system, for run-flat tires, 320
 - PCV valve
 - cleaning, 155
 - in exhaust system, 76, 142–143
 - how it works, 143
 - locating on your vehicle, 152
 - methods for checking function of, 154
 - as part of emissions control system, 152
 - removing and replacing, 154
 - servicing, 152–155
 - pedals, adjustable for vehicles, 369
 - Phillips screwdrivers, 46–47
 - pick-up coil, in electronic ignition systems with distributor, 95
 - piston rings
 - gauge for checking, 56–57
 - on outside of pistons, 137
 - pistons
 - in cylinder, 70, 137
 - as part of starter system, 85
 - plasma catalyst, for diesel engines, 173
 - pliers
 - types of, 53
 - using safely, 54
 - plies, of tires, 312
 - plug-in hybrids, 186–187
 - polymer electrolyte membrane, in hydrogen-powered fuel cells, 189
 - polymer exchange membrane, in hydrogen-powered fuel cells, 188
 - positive crankcase ventilation valve. *See* PCV valve
 - power brakes, 76, 251
 - power steering systems, 295–300
 - electronically assisted, 297
 - recirculating-ball steering, 298
 - steer-by-wire steering, 299
 - power-steering fluid
 - checking, 41
 - location of under the hood, 30
 - power-steering pump
 - checking accessory belt that drives, 32–33
 - location of under the hood, 41

- power stroke, in four-stroke
power cycle engine,
138–139. *See also* four-
stroke power cycle
- pressure cap
checking for leaks, 218
for radiator, 199
removing safely, 206–208
- pretensioners, for smart seat
belts, 375
- preventive maintenance
changing air filter, 467
changing coolant, 468
changing fuel filters, 467
changing oil filters, 467
changing oil frequently, 465
checking tire inflation and
alignment, 466
getting rid of rust, 467
keeping the interior clean,
466
lubricating moving and
rubber parts, 468
monthly under-the-hood
check, 29–44, 466
scheduled maintenance to
keep warranties valid, 468
washing car frequently, 467
- puncture-proof tires, 313
- **R** •
- R-134a refrigerant,
replacement for CFC-12
refrigerant, 202
- rack-and-pinion steering
systems, 295–297
- radar, used by some adaptive
cruise control systems,
382
- radial tires, 313
- radiator
checking for leaks, 218
in cooling system, 75,
197–198
- radiator cap. *See* radiator
pressure cap
- radiator drain valve. *See*
petcock
- radiator hoses, 197–198
avoiding universal hoses
when possible, 220
buying the right ones for
your vehicle, 220–221
checking for damage, 37
- in cooling system, 74
flexible bottom hose with
wire insert, 221
- radiator pressure cap, 37, 199
keeping replacement one
with vehicle, 61
pressurized in cooling
system, 75
valves in, 199
- rag
- safely disposing of dirty, 61
- rail fuel injection system,
common in diesel engines,
167
- ratchet handles
for changing spark plugs, 104
identifying good quality, 51
mastering, 108
offset handles for, 107
for socket wrenches, 49–50
T-bar handles for, 107
universal extensions for, 107
- rear-engine vehicles, location
of engine and
transmission in, 71
- rear-wheel drive engines, oil
and transmission dipstick
locations, 38
- rear-wheel drive vehicles
axle in, 71
cutaway view of, 71
differential in, 71
drive train, 337–338
driveshaft in, 71
dual brake systems on, 253
engine in, 71
location of transmission in, 71
position of cylinders in, 136
transmissions versus front-
wheel drive vehicle
transmissions, 67
U-joints (universal joints)
in, 71
- recirculating-ball steering,
anatomy of, 298
- records, specification and
maintenance
Maintenance, 509
Parts Replacement, 512
Specifications, 508
- reduction catalysts, in
catalytic converters,
143–144
- reflector triangles, for
emergencies, 63
- refrigerant, types of for air
conditioning, 202
- regenerative braking systems,
187, 262. *See also* brake
systems
checking fluid for, 42
for electric vehicles (EV) and
hybrids, 76, 188
- repair shops. *See also* service
facilities
turning to for larger repairs,
459–462
- repairs, getting the best
possible deal, 416–422
test driving after, 422
written estimates for, 416
- Retread Buyers Guide*, by Tire
Retread Information
Bureau (TRIB), 323
- Robogrip pliers, for your
toolbox, 54
- rollover stability control (RSC),
381–382
- rotary engines, on some
Mazdas, 137
- rotary valve, in rack-and-
pinion steering systems,
295
- rotor, in electronic ignition
systems with distributor,
95
- rubbing compounds, using on
your car, 439
- run-flat tires, 313
advantage of, 27
construction of, 320–321
low-pressure warning
systems for, 320
- rust
checking for, 450–451
getting rid of, 450–453
undercoating to prevent, 452
- **S** •
- SAE (Society of Automotive
Engineers), wrench
measurements, 49
- safety, staying safe on the
road, 361–384
- safety cages, incorporated into
vehicle body structure,
368

- safety precautions, when
 - losing power on the road, 397–400
- safety procedures, for getting to side of road, 397
- safety rules
 - importance of following, 14–15
 - for working on batteries, 33–34
- safety systems
 - adaptive cruise control (ACC), 382
 - adjustable devices, for vehicles, 368–369
 - air bags, 362–368
 - back-up beepers, sensors, cameras, and monitors, 376
 - blind-spot information systems (BLIS), 377–378
 - brake-shift interlocks, 378
 - child safety seats and booster seats, 370–374
 - electronic stability control (ESC), 379–381
 - rollover stability control (RSC), 381–382
 - seatbelts, 369, 375
 - side air bags and side impact protection system (SIPS), 364, 367–369
 - stability control systems, 379–382
 - telematics, how cars communicate, 383–384
 - traction control systems (TCS), 378–379
- scissor jack, using safely, 22
- screwdrivers
 - basic types of, 46–48
 - punching hole in oil filter with, 243
 - standard and Phillips and their screws, 47
- screwdrivers, for getting into hard-to-reach places, 48
- screws, removing difficult, 48
- screw-type hose clamps, dealing with, 222
- sealed-beam headlights, 98, 120
 - replacing and adjusting, 121–122
- seatbelts
 - adjustable for vehicles, 369
 - importance of wearing, 375
 - smart, with airbags, 375
- selective reduction catalyst (SRC), for diesel engines, 172–173
- self-adjusting brakes, 257
 - checking, 276
- sensors
 - for fuel injector systems, 131
 - for monitoring and controlling engine functions, 68
- sequential fuel injection (SFI), efficiency of, 132–133
- series hybrid, 185
- serpentine multiaccessory drive belt, 33, 229
- service facilities
 - authorizing all repairs, 417
 - chain and department stores, 411
 - checking how they price services, 415–416
 - choosing, 409–413
 - complaining effectively, 422–426
 - dealerships, 410–411
 - evaluating, 414–416
 - finding and dealing with, 409–426
 - finding reliable, 413–414
 - getting credit for core charges on rebuildable parts, 417
 - getting second opinions for major repairs, 416
 - guidelines for establishing a good relationship with, 420–422
 - independent garages, 411
 - organizations that test, rate, and certify, 413–414
 - saving yourself from paying for unnecessary R&R, 417
 - specialist, 412–413
- service manual
 - for parts specifications, 13
 - sources of, 66–67
- shock absorbers, standard, 306
- shocks and struts
 - points to keep in mind about, 306
 - in suspension systems, 305–307
- side air bags (SAB), types of, 367–368
- side electrode, in spark plugs, 109
- side impact protection systems (SIPS), required on American vehicles, 368
- side-impact air bags, 364
- silicone lubricant, using on spark plugs, 103–104
- single-piston floating-caliper disc brake systems, anatomy of, 258
- single-viscosity (single-weight) oil, 237
- slip-joint pliers, for your toolbox, 53–54
- smart seat belts, 375
- smells and smoke. *See* troubleshooting
- snow and ice equipment, keeping with vehicle, 63
- socket wrenches
 - advantage of buying good quality, 49–51
 - for changing spark plugs, 104
 - contents of good set, 50–51
 - extenders for reaching nuts and bolts, 51
 - flex-head handles for, 50
 - ratchet handles for, 49–50
 - sounds. *See* troubleshooting
- spare parts, keeping old with vehicle, 61
- spare tire, periodically checking, 61
- spark plug cables. *See* spark plug wires
- spark plug gap, recording in Specifications Record, 106
- spark plug socket, for removing spark plugs, 107
- spark plug terminal, 107
- spark plug wires
 - checking, 43, 113
 - connection to spark plugs, 101
 - importance of removing one at a time, 106
- spark plugs. *See also* ignition systems; tune-ups
 - anatomy of, 89, 109
 - buying the right ones for your vehicle, 104–106
 - changing, 101–114
 - checking gap on, 109
 - cleaning, 110
 - dealing with hidden, 102
 - deciding if you should change yourself, 101–102

- finding in your engine block, 101
 - in front-wheel drive vehicles, 71
 - gapping, 55, 111–112
 - gapping tools for, 55–56
 - getting to hard-to-reach, 107
 - for igniting fuel/air mixture, 73
 - in ignition systems, 89–92
 - installing, 112–114
 - items needed to change and gap, 103–104
 - loosening to remove, 108
 - reading, 109–111
 - reasons for having a
 - professional change, 102
 - removing, 106–108
 - seating, 112–114
 - what the old tell you about your vehicle, 110
 - spark-plug socket wrench, 49–50
 - specifications
 - checking before buying parts, 13
 - Specifications Record, 29
 - form, 508
 - important vehicle and hose information for, 221
 - recording vehicle specifications in, 106
 - speed ratings, of tires, 315–316
 - spin-on fuel filters, 128
 - sport-utility vehicles (SUVs),
 - four-wheel drive drive train in, 341
 - springs, types of in suspension systems, 302–305
 - stability control systems, 379–382
 - in some modern vehicles, 301
 - stabilizer bars, in suspension system, 301
 - stalling problems,
 - troubleshooting, 100–101
 - standard (or slot)
 - screwdrivers, 46–48
 - standard transmissions, 335
 - standard wrenches, 49
 - starburst symbol, on oil containers, 237
 - starter
 - anatomy of, 85
 - how it works, 85–86
 - with starter solenoid attached, 85
 - starter solenoid switch
 - in electrical system, 68
 - in starting system, 82
 - starting car, without warming up, 470–471
 - starting system
 - avoiding damage to after starting car, 86
 - components of, 82–86
 - computer malfunctions, 471
 - problems with, 471
 - troubleshooting, 101, 405–408
 - under-the-hood view, 82, 83
 - steer-by-wire steering system,
 - anatomy of, 299
 - steering and suspension systems, 293–310
 - steering knuckle, attached to suspension system, 295
 - steering linkage, components of, 294–295
 - steering ratio, of steering system, 293–294
 - steering system
 - checking, 299–300
 - lifetime lubrication systems for, 295
 - types and components of, 293–300
 - steering wheels, adjustable, 369
 - stop-leak sealer, using for small cooling system leaks, 226
 - straight engines. *See* in-line engines
 - strut suspension systems,
 - anatomy of, 308–309
 - supercharging versus turbocharging, 140
 - suspension systems, 300–309
 - anatomy of typical, 300
 - Bose acoustic, 309
 - major parts of, 301–307
 - types of, 307–309
 - synthetic oil, 238
- T •**
- tailpipe, as part of exhaust system, 76
 - taper feeler gauges, for gapping spark plugs, 55, 104
 - technicians, ASE certification programs for, 413–414
 - telematics, how cars communicate, 383–384
 - Web site for comparisons of features, 384
 - Temperature light, 203
 - thermostat
 - anatomy of, 201
 - checking for starting problems, 471
 - keeping replacement one with vehicle, 61
 - as part of cooling system, 200–201
 - replacing, 230–231
 - throttle-body fuel injection (TBI) system
 - fuel pressure regulator in, 134
 - how it works, 134
 - injector solenoid in, 134
 - location of in fuel system, 131
 - throw-out bearing, in manual transmissions, 344
 - tie rod ends, in steering linkage, 294
 - timing belt, water pump driven by in some vehicles, 200
 - Tire Retread Information Bureau (TRIB), *Retread Buyers Guide* by, 323
 - tires, 317
 - adding air to, 326–327
 - adverse effects of driving on worn, 311
 - anatomy of, 313
 - bias-ply tires, 313
 - body, 312
 - breaking in, 324
 - caring for, 324–334
 - categories for trucks and SUVs, 319
 - chains, keeping with vehicle, 63
 - changing, 26–27
 - checking for air pressure and damage, 44, 325–326
 - checking for wear, 332–334
 - codes and classifications, 314–315
 - codes found on sidewall, 314
 - construction of, 311–313
 - dealing with defective, 334
 - determining cause of problems, 333–334
 - DOT identification and registration, 316
 - getting information about recalls, 334
 - how to change, 23–24
 - how to read treads, 332
 - inflator/sealant for, 62
 - low-pressure warning systems for, 321

- tires (*continued*)
 - maximum air pressure (psi)
 - data, 317–318
 - maximum load data for, 317
 - nonflammable
 - inflator/sealant for, 27
 - ozone checking of, 323
 - periodically checking spare, 61
 - pressure gauges, 56, 326
 - puncture-proof tires, 313
 - quality grade codes, 317
 - radial tires, 313
 - registering, 316
 - repairing flats immediately, 27
 - retreads, 323
 - rotating for uniform wear, 327–328
 - run-flat tires, 27, 313, 320
 - secrets of car sidewall codes, 314
 - self-inflating systems, 321
 - specialized systems, 319–320
 - speed ratings of, 315–316
 - suitable for passenger vehicles, 318–319
 - tips for buying, 321–324
 - tread, 312
 - types of, 318–319
 - valve, 313
 - varieties of over the years, 313
 - Web site address for filing complaints, 334
 - Web site address for ratings information, 317
 - wheel alignment and balancing, 328–331
 - tools. *See also names of individual tools*
 - general pointers for, 46
 - keeping spares in vehicle, 64
 - shopping for, 45–46
 - torque converter, in automatic transmissions, 347
 - torque wrenches, 52–53
 - torsion bars, in suspension systems, 304
 - toxic chemicals, caution about working with, 15
 - Toyota Prius, how it works, 184
 - tracking systems, 384
 - traction control systems (TCS), 378–379
 - transaxle, 337
 - in front-wheel drive vehicles, 71
 - transaxle engine, oil and transmission dipstick locations, 38
 - transaxle fluid dipstick
 - in front-wheel drive vehicles, 71
 - location of under the hood, 38
 - transfer case
 - anatomy of, 341
 - in four-wheel drive vehicles, 340–341
 - transmissions
 - at end of crankshaft, 71
 - location of in front-wheel drive vehicles, 71
 - location of in rear engine vehicles, 71
 - location of in rear-wheel drive vehicles, 71
 - location of in traverse engine vehicles, 71
 - transmission bands, adjusting when servicing transmission, 354
 - transmission controller, for automatic transmissions, 348
 - transmission cooler
 - for automatic transmissions, 201
 - for keeping transmission from overheating, 74
 - transmission dipstick, location of, 38
 - transmission filters, changing when servicing, 354
 - transmission fluid
 - in automatic transmissions, 347
 - checking, 40
 - location of dipstick under the hood, 38
 - location of, 30
 - viscosity, 40
 - transmission input shaft
 - in automatic transmissions, 347
 - in drive train, 338
 - transmission output shaft, in drive train, 338
 - transmission pan gasket, changing when servicing, 355
 - transmission systems
 - symptoms of sick, 351
 - types of, 335
 - understanding and maintaining, 335–357
 - transmissions. *See also*
 - automatic transmissions;
 - five-speed transmissions;
 - manual transmissions;
 - transmission systems
 - advantages of using overdrive, 357
 - automatic, 335
 - avoiding wear and tear on, 356–357
 - continuously variable (CVTs), 349–350
 - driving habits to extend life of, 354
 - dual-clutch, 348–349
 - five-speed, 343
 - front seal leaks in, 355
 - gearshift linkage problems, 355
 - guidelines for repairs, 355
 - importance of getting repair estimates, 355–356
 - loud clunking noises, 351
 - manual, 335
 - overhauling, 355
 - shifting problems with, 351
 - types of, 73
 - undertaking repairs wisely, 354–356
 - using passing gear for burst of speed, 357
 - vacuum modulator in, 351
- transverse engine vehicles
 - constant velocity joints in, 339
 - location of transmission in, 71
 - position of cylinders in, 136
- transverse internal combustion engines, main parts of, 136
- treadwear indicators, 333–334
- troubleshooting
 - black smoke from tailpipe, 392
 - breakdown problems, 400–403

burned rubber smell, 390
 burned toast smell, 391
 car won't start, 405–408
 clunking, 389
 directional signal
 malfunctions, 396
 engine dieseling (running
 after turning off), 387
 engine knocking noises, 386
 engine misfiring, 387
 engine noises, 386
 freeway breakdown
 problems, 397
 fuel problems, 401–402
 gasoline smells, 391
 headlights, 119
 ignition system problems,
 402–403
 leaks, 393–395
 light gray smoke from
 tailpipe, 392
 light or dark blue smoke from
 tailpipe, 392
 muffler noises, 387
 noises. *See* troubleshooting,
 sounds
 oil or exhaust fumes in
 passenger compartment,
 391
 overheating problems,
 403–404
 radiator noises, 386
 rotten egg smell, 391
 rough idling, 387
 rumbling noises, 389
 smell of oil burning, 390–391
 smelling something sweet
 and steamy, 391
 smells, 390
 smoke coming from tailpipe,
 392–393
 sounds, 386–389
 squeaks, rattles, and
 vibrations, 389–390
 squealing noises when you
 step on the brakes, 389
 strange sensations, 395
 stuck horn, 388
 ticking when engine idles,
 386
 tire squealing on curves, 388
 vehicles that won't start,
 405–408
 water getting into the
 passenger compartment,
 393
 weird, rhythmic tire noises,
 389

whining or humming sounds
 on curves, 388
 whistling noise from under
 the hood, 387
 white vapor from tailpipe on
 cold morning, 392
 your drive train, 350–353
 tune-up specifications guide
 available in auto supply
 stores, 13
 finding spark plug specs in,
 104
 tune-ups
 determining need for,
 100–101
 intervals for, 99–100
 for vehicles with electronic
 ignition systems, 99–100
 turbine, in turbocharging, 140
 turbochargers, supercharging
 with, 140–141
 turbocharging, how it works,
 140
 turn signals. *See* directional
 signals
 two-mode hybrids, 187

• U •

U-joints (universal joints), in
 rear-wheel drive vehicles,
 71, 338
 under-the-hood check, 29–44,
 466
 universal joint (U-joint). *See*
 U-joints (universal joints)
 urea container, for diesel
 engines, 173

• V •

V-8 engines, cylinder sequence
 and firing order in, 91
 vacuum hoses, replacing, 223
 vacuum modulator, in
 transmissions, 351
 vacuum valve, in radiator
 pressure cap, 199
 valve cover
 PCV valve in, 153–154
 valves, gauge for checking,
 56–57
 vehicle safety, items needed
 for emergencies, 63–64
 Vehicle Safety Hotline, 334

vehicles. *See also* cars
 steps for jacking up, 21–23
 what makes them run, 73–75
 vice-grip pliers, for your
 toolbox, 54
 vinyl tops, cleaning and
 repairing, 437
 viscosity ratings, for engine oil,
 236–237
 volt meter
 checking battery strength
 with, 36
 gauges showing charging
 system status, 87
 voltage regulator, in charging
 system, 88
 V-type engines, 137
 finding spark plugs in, 101

• W •

warning lights and malfunction
 indicator lights (MIL),
 96–97
 washing your car, 432–434
 de-bugging safely, 431
 safety tips for using
 commercial products, 432
 waxing or sealing, 434
 windows and mirrors,
 434–435
 water jackets
 in cooling system, 74
 located around combustion
 chambers in cylinders,
 200
 water pump
 checking accessory belt that
 drives, 32–33
 in cooling system, 74, 200
 identifying leaks from, 228
 rebuilt or remanufactured,
 228
 water separators, draining on
 diesel vehicles, 176
 waxing or sealing
 hard or paste waxes for, 441
 liquid waxes for, 440
 polyglycotes for, 441
 polymer preservatives for,
 441
 recommended frequency, 440
 soft waxes for, 440–441
 weatherstripping, installing
 new or patching old, 457

- Web site address
 AAA or CAA approved repair facilities, 413
 ADS (Association of Diesel Specialists), 414
 ASA (National Automotive Service Association), 414
 Better Business Bureau, 414
 Chilton's subscription service, 67
 Consumer Action Handbook, 426
 Consumer Federation of America, 426
 Earth 911 for oil recycling information, 214, 248
 Federal Trade Commission (FTC), 426
 Filter Council for recycling oil filters, 248
 for getting blue book vehicle value, 227
 for hazardous materials disposal information, 30
 IIHS list of Ten Safest Vehicles and air bag ratings, 362
 for list of ASE-certified technicians, 414
 Michelin PAX system information, 320
 National Automobile Dealers Association, 425
 National Ethanol Vehicle Coalition, 183
- National Highway Traffic Safety Administration (NHTSA), 362
 for tire ratings, 317
 for videos that show deployment of air bags, 368
- wheel alignment, 329–331. *See also* alignment
 wheel balancing, 328–329
 wheel bearings, 280
 checking and packing, 279–283
 determining if packable or sealed, 279
 on four-wheel drive vehicles, 279
 getting at your brakes, 280
 inspecting and repacking, 280–283
 quick check for wearing of, 283
 replacing when reassembling drum brakes, 277
- wheel cover (hubcap), removing, 21, 24
- wheel cylinders
 anatomy of, 255
 checking, 276
 cups inside of that seal, 256
 dust boots on, 256
 function of with drum brakes, 255
- windows and mirrors, washing, 434–435
- windshield, dealing with damaged, 459
- windshield washer fluid
 checking, 43
 location of under the hood, 30
- windshield wipers
 checking and replacing, 43–44
 in electrical system, 98
 keeping spare set with vehicle, 61
- wire feeler gauges, for gapping spark plugs, 55, 104
- wire hose clamps, dealing with, 222
- wiring, checking, 43
- work lights
 needed for auto repairs, 57–58
 for seeing under vehicles, 244
 tips for selecting, 58
 wrenches, types of, 49–53



Xenon headlamps, 98, 120. *See also* headlights
 replacing and adjusting, 120–121