

# Index

## NUMERICS

### 0 (zero)

- leading, 976
- quantity display, BOM, 692
- trailing, 976

### 2D

- Command Line Emulator, 55
- Hole Wizard, 163, 506–510
- sketching parametrics, 9–11

### 3D sketches

- Drawing View mode, 636–637
- extruded features, 209–210
- Hole Wizard, 163
- line length between visual sharps, 947
- mirroring

- bodies, 296
- entire parts, 297
- features, 296

- opening and closing with Sketch toolbar, 113

- Sketch Plane, Sketch toolbar, 121

- sketching parametrics, 9–11

### weldments

- described, 865–866
- dimensions, 870
- navigating in space, 866–867
- planar path segments, 870
- planes in space, 868–870
- sketch relations, 867–868

- 32x versus 64x systems, 919

## A

- Add Parentheses by Default, 981

### Add Relation(s)

- Dimensions/Relations toolbar, 134
- Sketch toolbar, 121

### adding

- CommandManager, 45
- leaders, 654
- toolbars, 40–41

- administration guides, 1010

### administration, Toolbox

- custom parts, adding, 526
- folders, adding, 527
- libraries, merging, 527
- PDM product, 527–528
- read-only setting, 525
- upgrading SolidWorks, 525–526

- Administrative Director, 924

- Advanced Show/Hide Components, assembly configurations, 444–446

### advanced types

- Belt/Chain, 428
- Cam mate, 424–425
- described, 423
- Gear mate, 426
- Limit mates, 426–427
- Rack and Pinion mate, 426, 427
- Symmetric mate, 424
- Width mate, 425

- Aligned Section view, 626–627

### allowance, bend

- Bend Deduction and, 820–821
- Bend Table, 819–820
- K-Factor, 820
- options, 819

- alphabetized order, configurations, 319

- Alpha/Numerical Control, 996

- Alt-dragging, SmartMates, 417–419

- Alternate Position view, 634–635

- alternate section display, 977

- Alt-key method to invoke keyboard items, 58–59

- AMD versus Intel CPU, 918–919

- analysis
  - Check tool, 369–370
  - COSMOSXpress tool
    - analyze, 375–376
    - described, 374
    - loads, 375
    - materials selection, 374
    - optimization, 377
    - restraints, 374–375
    - results, 376
  - Draft Analysis tool
    - basic mode, 360–361
    - Face Classification mode, 362–363
    - Find Steep Faces, 363–364
    - Gradual Transition mode, 361–362
  - listed, 359
  - MoldflowXpress
    - analyze and results, 379
    - conditions, 378–379
    - described, 377
    - injection location, 377–378
    - material, 378
  - reflective
    - curvature display, 372
    - Deviation Analysis, 372–373
    - lights with specularly turned up, 372
    - RealView graphics display, 372
    - Tangent Edges as Phantom setting, 373
    - Zebra Stripes, 370–371
  - Thickness Analysis tool
    - Show Thick Regions option, 366–367
    - Show Thin Regions option, 365
  - tutorial, 386–387
  - Undercut Detection tool, 367–368
  - Verification on Rebuild tool, 368–369
- Angle panel, Edge Flange feature, 826–827
- angled/linear-angled display, 985
- animation speed
  - mate, 956
  - View Rotation, 967
- annotation
  - Design Library, storing, 554–555
  - display, Use Assembly's Setting For All Components, 994
  - font, 994
  - hiding, 958
  - views, 100
- annotation blocks
  - annotating drawings, 613
  - creating, 661–662
  - described, 658
  - drawing, 138–139
  - editing
    - Add/Remove Entities button, 662
    - Explode button, 663
    - options, accessing, 662
    - Rebuild button, 662
  - inserting
    - definition, 660–661
    - described, 659
    - existing relations, 660
    - layer, 661
    - leader, 661
    - parameters, 661
    - PropertyManager, 660
    - text/dimension display, 661
  - symbols
    - accessing, 663
    - custom, 664
  - templates, 610–611
  - tutorials, 143–145, 666–668
- annotation formats
  - blank screen, creating from, 601–602
  - DWG or DXF file, creating from imported, 602–604
  - existing, customizing
    - custom properties, 598–601
    - editing, 596–597
    - sample, 595–596
    - text, managing, 598
  - need for, 594
  - saving, 605
  - second sheet
    - adding new sheets, 605
    - updating drawing to new format, 605–606
  - templates versus, 593–594
- annotation notes
  - border, 989
  - favorites, 656–657
  - hyperlinking text, 657–658
  - layers, 716
  - leader
    - adding, 654
    - anchor, 988

- described, 653–654
    - jogged, 655–656
    - justification snapping, 989
    - multiple, 655
    - style, 989
  - linking to custom properties, 657
  - symbols and, 658
  - text alignment, 988
  - text boxes and wrapping, 652–653
  - workflow for placing, 651–652
- Annotation toolbar, 33
- Annotations Display
- Always Display Text At The Same Size, 994
  - Display Filter, 993
  - Display Items Only In The View In Which They Are Created, 994
  - Hide Dangling Dimensions And Annotations, 994
  - JIS Surface Finish Size, 994
  - Text Scale, 994
- anti-alias edges/sketches, 951
- appearance, table-based BOM, 693–694
- applications, small (macros)
- combining with hotkeys, 71
  - described, 60, 895–896
  - edit after recording, 936
  - form, building, 903–905
  - help, finding, 906
  - rectangle-sketching macro
    - custom toolbar button, connecting to, 902
    - hotkey, connecting to, 901–902
    - irregularities, removing, 900
    - recording, 896–899
    - replaying, 899–900
    - storing, 901
  - user form, creating with, 902–903
- arc
- centerpoints display, 939, 944
  - Structural Member segments, 876–877
- area hatch display, show halo around annotations, 979
- Area Hatch/Fill page, 941
- arrow keys
- changing view, 90
  - rotating view, 967
- arrow style, 984
- arrows
- Attachments, 992
  - Foreshortened Diameter, 992
  - Section View Size, 992
  - size, 991
- Arrows Follow Position Of Text (Radial), 985
- assembly
- auto recover info, do not save, 957
  - component patterns, 396
  - creating in FeatureManager, 411
  - depicting process
    - individual steps, 403–404
    - item numbering, 403
  - Design Library, 556
  - edges, do not display in shaded mode, 958
  - elements
    - identifying, 391–392
    - standard reference geometry items, 393
  - equations
    - external references, 393
    - link values and global variables, 393
    - recommendations, 394
    - renaming, 393–394
  - features, 396
  - folders
    - creating in FeatureManager, 404–405
    - described, 396
    - existing, adding items to, 405–406
    - reordering items in tree, 406
  - hide all planes, axes, sketches, curves, annotations, etc., 958
  - Hole Series, 397–398
  - in-context reference update holders, 397
  - LAM, 957
  - layout sketch, 394–395
  - lightweight components, automatically load, 957
  - Mates area, 396
  - modeling, multibody modeling versus, 728–729
  - move components by dragging, 957
  - parts and subassemblies, 396
  - patterning considerations, 404
  - rebuild on load, 956
  - reference geometry, 395
  - Smart Fasteners, 397

- assembly (*continued*)
  - subassembly
    - BOM (Bill of Materials), organizing for, 401–402
    - criteria, 398–399
    - dissolving, 400
    - from existing parts, 399–400
    - flexible, 400–401
    - grouping by relative motion, 402–403
    - inserting new, 400
    - legacy data, 401
    - organizing for performance, 400–401
    - purchased components, organizing groups of, 403
    - solving mates, 400
  - suspend automatic rebuild, 958
  - Toolbox, organizing parts in, 537
  - tree display options
    - options, 406–407
    - show component and config names and descriptions, 407–409
    - show feature names and descriptions, 407
    - viewing features, mates, and dependencies, 409–410
  - tutorial, 169–174
- assembly configurations
  - design tables, 452
  - display performance
    - described, 447
    - lightweight parts, 447–448
    - resolved versus unsuppressed, 448
  - dos and don'ts, 453
  - exploded views
    - Base and Tower, 454–455
    - collapsing, 458
    - Explode Line Sketch, 458–460
    - grippers, 456
    - illustrated, 457
    - initiating, 453–454
    - Twist Arm subassembly, 455–456
  - for performance
    - Advanced Show/Hide Components, 444–446
    - part configurations for speed, 444
    - SolidWorks Utilities Simplify Assembly, 446–447
    - suppressing components and features, 443–444
    - for positions
      - described, 448–449
      - with mates, driving directly, 449–450
      - with mates, driving indirectly, 450
      - with sketches, 450–451
    - for product variations, 451–452
    - tutorial, 460–464
- Assembly FeatureManager interface, 547
- Assembly toolbar, 33
- assembly transparency for in-context edit, Display/Selection, 951
- assistance
  - macro, finding, 906
  - non-commercial Web sites, 1012–1013
  - online forums, 1011–1012
  - SolidWorks Online Users Guide
    - described, 1007
    - fundamentals, 1008
    - glossary, 1008
    - index, 1008
    - Search function, 1008
  - SolidWorks Web site
    - Customer Portal, 1009–1010
    - Discussion Forum, 1010
    - graphics cards, 1009
    - Tech Tips, 1011
  - user groups, 1011
- Attachments, arrows, 992
- Auto Dimension, 134
- auto insert on view creation, 978
- auto layout balloons, 991
- Auto relief, Base Flange method
  - Rectangular and Obround, 821
  - Tear, 821
- AutoCAD, moving from documentation, 78
- automatic colors, 102
- Automatic Relations, 134–135
- auto-recover info, saving, 968
- auto-sizing Smart Components
  - creating, 580–585
  - using, 575–577
- auto-update, allowing when opening drawings, 938
- Auxiliary view, 633–634
- axes, hiding, 958

**B**

- background
  - colors, 943
  - match graphics area and FeatureManager, 944
- backup copies, number per document, 968–969
- Backup/Recover
  - backup copies, number per document, 968–969
  - save auto-recover info every, 968
  - save notification, 969
- balloons
  - auto layout, 991
  - bent leaders, 991
  - quantity, 991
  - sizes, 990
  - styles, 990
  - text, 990–991
  - uses, 989–990
- Base and Tower exploded view, 454–455
- Base Flange method
  - Auto relief
    - Rectangular and Obround, 821
    - Tear, 821
  - Base Flange and Tab tool, 815–816
- Bend Allowance
  - Bend Deduction and, 820–821
  - Bend Table, 819–820
  - K-Factor, 820
  - options, 819
- Closed Corner feature
  - Faces to Extend, 834
  - Gap setting, 834
  - Open Bend Region option, 835–836
  - Overlap/Underlap ratio setting, 834–835
- Corner Trim and Break Corner features, 836–837
- described, 814
- Edge Flange feature
  - Angle panel, 826–827
  - Curved Edges, 828–829
  - default radius, 826
  - described, 824–825
  - Edit Flange Profile, 825–826
  - Flange length, 827
  - gap distance, 826
  - Trim Side Bends flange position, 827–828
- Flat Pattern feature, 822–824
- Flatten command, 843–844
- Forming tool
  - creating, 838–839
  - described, 838
  - library, 839
  - placing, 840
  - special techniques, 840–841
- Hem feature, 831
- Insert Bends method versus, 813, 852
- Jog feature
  - described, 831–832
  - Fix Projected Length, 833
  - Fixed Face, 832
  - Jog Angle selection, 833
  - Jog Position selection, 833
  - offset, 833
- Lofted Bends feature, 842–843
- Miter Flange feature, 829–830
- Sheet Metal feature
  - Bend Radius, 818
  - described, 816–817
  - Fixed Face or Edge, 818
  - Gauge Table, 817–818
  - thickness, 818–819
  - Sketched Bend feature, 833–834
  - tutorial, 844–849
  - Unfold and Fold features, 843
- Baseline Dimensions, 132
- Belt/Chain, 428
- belts, 143–145
- Bend Allowance, Base Flange method
  - Bend Deduction and, 820–821
  - Bend Table, 819–820
  - K-Factor, 820
  - options, 819
- Bend Deduction, 820–821
- Bend Radius, Sheet Metal feature, 818
- Bend Tables
  - Bend Allowance, 819–820
  - weldment, 703
- bent leader
  - balloons, 991
  - length, 986

- best practice suggestions
  - in-context design
    - circular references, 490–491
    - communicating design intent, 493
    - with configurations, 488–489
    - and file management, 490
    - libraries, 491–492
    - and mates, 490
    - mating or in-context, 492–493
    - with motion, 489–490
    - multiple contexts, 485–488
    - with multiple instances, 490
    - skeletons and layouts, 491
  - mates, 432–433
- Bill of Materials (BOM)
  - automatic update of, 978–979
  - described, 687–688
  - Excel-based, 695–696
  - subassembly, organizing for, 401–402
  - tables
    - appearance, controlling, 693–694
    - BOM Contents, 692–693
    - BOM type, 690–691
    - Configurations panel, 691
    - Don't Add "QTY" Next To Configuration Name:, 997
    - Don't copy QTY column name from template, 997
    - Hole Tables, 708–710
    - item numbers, 692
    - Keep Missing Items, 691
    - missing component, 997
    - Restrict Top Level Only BOMs To One Configuration, 997
    - rows or columns, adding, 694–695
    - table anchor, 690
    - table format, 693
    - templates, 688–689
    - tutorials, 704–708
    - zero quantity, 997
    - Zero Quantity Display, 692
- blank screen, creating formats from, 601–602
- blocks
  - annotating drawings, 613
  - creating, 661–662
  - described, 658
  - drawing, 138–139
- editing
  - Add/Remove Entities button, 662
  - Explode button, 663
  - options, accessing, 662
  - Rebuild button, 662
- inserting
  - definition, 660–661
  - described, 659
  - existing relations, 660
  - layer, 661
  - leader, 661
  - parameters, 661
  - PropertyManager, 660
  - text/dimension display, 661
- symbols
  - accessing, 663
  - custom, 664
  - templates, 610–611
  - tutorial, 143–145, 666–668
- blue dotted lines, 135–137
- bodies
  - managing
    - deleting bodies, 755
    - folders, 752–754
    - hide or show bodies, 754–755
    - renaming bodies, 755
  - mirroring in 3D, 296
  - patterning, 283–284
- BOM (Bill of Materials)
  - automatic update of, 978–979
  - described, 687–688
  - Excel-based, 695–696
  - subassembly, organizing for, 401–402
  - tables
    - appearance, controlling, 693–694
    - BOM Contents, 692–693
    - BOM type, 690–691
    - Configurations panel, 691
    - Don't Add "QTY" Next To Configuration Name:, 997
    - Don't copy QTY column name from template, 997
    - Hole Tables, 708–710
    - item numbers, 692
    - Keep Missing Items, 691
    - missing component, 997

- Restrict Top Level Only BOMs To One Configuration, 997
  - rows or columns, adding, 694–695
  - table anchor, 690
  - table format, 693
  - templates, 688–689
  - tutorials, 704–708
  - zero quantity, 997
  - Zero Quantity Display, 692
  - border, 989
  - Boundary Surface, 767–769
  - bracket casting, 267–271
  - break dimension extension/leader lines, 985–986
  - break lines
    - dimensions, 679
    - gap, 980
  - Break view, 632–633
  - bridge between solids, multibody modeling, 743
  - broken dimension lines in broken views, 983
  - Broken-out Section view
    - closed loop, drawing, 629–630
    - depth, selecting, 630–631
    - described, 628–629
  - Browser, turning on, 532–533
- ## C
- Cam mate, 424–425
  - CD, back-of-the-book
    - customer care, 1016
    - troubleshooting, 1015–1016
  - Center Between Extension Lines, 982
  - center marks
    - custom symbols, 664–666
    - size, 979
  - centerline
    - custom symbols, 664–666
    - extension, 977
    - font, 980
    - loft features, 218
  - centerpoints display, 939, 944
  - Chamfer Dimension, 134
  - Chamfer Dimension Scheme, 981
  - chamfers, 167–169
  - changes, likely, 148
  - changing
    - blocks
      - Add/Remove Entities button, 662
      - Explode button, 663
      - options, accessing, 662
      - Rebuild button, 662
    - Broken-out Section view, 631
    - color, 195
    - design intent
      - Display, Delete Relations, 15
      - Suppressed Sketch Relations, 16
      - View, Sketch Relations, 15
    - Design Tables, 335–336, 341–342
    - Detail view, 623
    - existing formats, 596–597
    - Flyout FeatureManager, 355–356
    - macro after recording, 936
    - mates, 428–429
    - parts in assemblies, 944
    - reordering features, 353–355
    - reordering folders, 355
    - Rollback bar
      - consumed features, 349
      - described, 348
      - enhancement requests, 353
      - multiple parents, features with, 350–351
      - original color, viewing consumed features in, 351–352
      - parent-child relationship, 349–350
    - rollback methods, 347–348, 353
    - Section view, 627
    - Smart Components, 586–587
    - tutorial, 196–200, 380–386
  - Check Read-Only Files command, 28
  - Check tool, 369–370
  - choosing
    - anti-alias edges/sketches, 951
    - assembly transparency for in context edit, 951
    - described, 949
    - dynamic highlight from graphics view, 951
    - edge display in shaded with edges mode, 951
    - flat to screen, display dimensions, 952
    - four view viewport, projection type for, 952–953
    - hidden edges display, 950

- choosing (*continued*)
  - highlight all edges of features selected in graphics view, 951
  - HLR and shaded modes, 950
  - open edges of surfaces, show in different color, 951
  - Part/Assembly tangent edge display, 950
  - reference triad, 952
  - shaded planes, display, 952
  - transparency, enable selection through, 952
  - wireframe and HLV modes, 950
- circle
  - detail
    - display new as circles, 937
    - drawn in-line, 623
    - pre-drawn, 621–623
  - Sketch toolbar, 117–118
  - tutorial, 297–298
- Circular Pattern, Sketch mode, 288–289
- circular references, in-context design, 490–491
- Circular Sketch Pattern, 129, 280
- Close command, Standard toolbar, 27
- Close Loft option, 220
- Closed Corner feature, Base Flange method
  - Faces to Extend, 834
  - Gap setting, 834
  - Open Bend Region option, 835–836
  - Overlap/Underlap ratio setting, 834–835
- closed loop, drawing, 629–630
- closing 3D Sketch with Sketch toolbar, 113
- Cold Turkey switchover implementation schemes, 917
- collaboration
  - multi-user environment, 973
  - read-only files, checking if modified by other users, 973
  - shortcut menu items, adding, 973
- collapsing exploded views, 458
- color
  - configurations, controlling, 328
  - customization, 56
  - document properties, 1002–1003
  - open edges of surfaces, show in different, 951
  - original, viewing consumed features in, 351–352
  - sketches
    - Color Display mode, 195
    - Edit color, 195
    - Line color, 195
  - text, 479
  - tutorial, 69–70, 200–203
  - visualization tools
    - automatic colors, 102
    - color hierarchy, 100–101
    - Display pane, 102
    - entity colors, 101
- Color button, 32
- Color Display mode
  - Line Format, 720
  - sketches, 195
- Colors page, Systems Options
  - background
    - appearance, 943
    - match graphics area and FeatureManager, 944
  - current color scheme, 942
  - editing parts in assemblies, 944
  - object colors, 942
  - PropertyManager color, 942–943
  - PropertyManager skin, 943
  - Reset All To Defaults, 944
  - Save As Scheme, 944
  - Shaded With Edges mode, 944
- CommandManager
  - adding toolbars, 45
  - described, 44
  - minimizing size, 45
  - tutorial, 66–68
  - using, 45
- commands, single per pick, 933
- comments
  - border, 989
  - equation, 307
  - favorites, 656–657
  - hyperlinking text, 657–658
  - layers, 716
  - leader
    - adding, 654
    - anchor, 988
    - described, 653–654
    - jogged, 655–656
    - justification snapping, 989
    - multiple, 655
    - style, 989
  - linking to custom properties, 657
  - symbols and, 658
  - text alignment, 988

- text boxes and wrapping, 652–653
- workflow for placing, 651–652
- comp.cad.solidworks, 1011–1012
- complex shapes, multibody modeling, 731–733
- Component Line Font display mode, 639–640
- component patterns
  - assembly, 396
  - derived, 469–470
  - described, 465
  - local pattern references
    - described, 466–467
    - Instances to Skip option, 469
    - Pattern Seed Only option, 467–468
- RMB menu
  - add to new folder, 471
  - component pattern display options, 471
  - component patterns and configurations, 471
  - Dissolve Pattern, 471
  - illustrated, 470
  - tutorial, 472–473
- components
  - assembly configurations, suppressing, 443–444
  - automatically hide on view creation, 938
  - layers, 716–717
  - lightweight
    - assembly configurations, 447–448
    - automatically load, 955, 957
    - out-of-date, checking, 955
    - resolving, 956
- composite curve, 230
- computer hardware
  - CPU
    - AMD versus Intel, 918–919
    - multi-processor or multi-core, 918
    - 32x versus 64x systems, 919
    - Vista compatibility, 919
  - dongle hardware key, 910
  - hard drive
    - drive speed, 920
    - RAID (Redundant Array of Independent Disks)
      - configuration, 920
  - memory (RAM), 920
  - motherboard, 920
  - network card, 920
  - video card, 919
- computer hotkeys
  - macros, combining with, 71
  - organizing, 57–58
  - rectangle-sketching macro, connecting to, 901–902
  - tutorial, 70–71
  - usefulness, 57
- conditions, MoldflowXpress analysis tool, 378–379
- configs. *See* configurations
- ConfigurationManager
  - deleting configurations, 318–319
  - sorting, 319–320
- configurations. *See also* Design Tables
  - activating, 320–321
  - assembly configurations for speed, 444
  - colors, controlling, 328
  - ConfigurationManager
    - deleting, 318–319
    - sorting, 319–320
  - creating
    - advanced options, 323
    - making new, 322
    - properties and options, 322–323
  - custom properties, controlling, 327–328
  - derived, 324
  - dimensions, controlling, 325–326
  - Display States, 440–442
  - file size considerations, 324–325
  - in-context design, 488–489
  - of inserted parts, 330–331
  - installation, 925
  - library features, 331–332
  - sketch planes, controlling, 329–330
  - sketch relations, controlling, 328–329
  - Structural Member feature, 877
  - suppression, controlling, 326–327
  - Toolbox, 317, 520–521
  - unconfigurable items, 332
- configurations, assembly
  - design tables, 452
  - display performance
    - described, 447
    - lightweight parts, 447–448
    - resolved versus unsuppressed, 448
  - dos and don'ts, 453

- configurations, assembly (*continued*)
  - exploded views
    - Base and Tower, 454–455
    - collapsing, 458
    - Explode Line Sketch, 458–460
    - grippers, 456
    - illustrated, 457
    - initiating, 453–454
    - Twist Arm subassembly, 455–456
  - for performance
    - Advanced Show/Hide Components, 444–446
    - part configurations for speed, 444
    - SolidWorks Utilities Simplify Assembly, 446–447
    - suppressing components and features, 443–444
  - for positions
    - described, 448–449
    - with mates, driving directly, 449–450
    - with mates, driving indirectly, 450
    - with sketches, 450–451
  - for product variations, 451–452
  - tutorial, 460–464
- Configurations panel, table-based BOM, 691
- Configurator application, Toolbox
  - described, 516–517
  - huge screws, 517–518
  - problems, 518–519
- Configure option settings, Toolbox
  - Content tab, 528–529
  - Properties tab, 530, 531
  - Settings tab, 530
  - Smart Fasteners tab, 530–531
- Confirmation Corner, General Settings Options, 935–936
- Constant Width option, face filleting, 250
- constraining sketch motion, parametrics, 13
- constraints, end
  - Curvature to Face, 216
  - Default, 215
  - Direction Vector, 217
  - none, 215
  - Tangent to Face, 215–216
- Construction Geometry, 125
- consultant, training
  - described, 913
  - on-site training, 914
  - specialty topics, 914
- consumed features, Rollback bar, 349
- continuous curvature face filleting, 245–246
- contour selection
  - extrude options, 157
  - revolve features, 211
- Convert Entities Sketch toolbar, 121
- Copy and paste sketches, 190
- Copy command, Standard toolbar, 30
- Copy Entities, Sketch toolbar, 129
- Copy sketches, 188
- copying
  - existing settings tutorial, 64–65
  - sketches tutorial, 196–200
- corner treatments, Structural Member feature, 875
- Corner Trim and Break Corner features, Base Flange method, 836–837
- cosmetic thread display
  - high quality, 979
  - named views, 619, 620
- COSMOSXpress analysis tool
  - analyze, 375–376
  - described, 374
  - loads, 375
  - materials selection, 374
  - optimization, 377
  - restraints, 374–375
  - results, 376
- CPU
  - AMD versus Intel, 918–919
  - multi-processor or multi-core, 918
  - 32x versus 64x systems, 919
  - Vista compatibility, 919
- Create Assembly Split feature, 803
- Crop view, 627–628
- current color scheme, 942
- cursors, 50
- Curvature to Face end constraint, 216
- Curve Driven Pattern, Sketch mode, 289–292
- Curve Through Reference points, 230
- Curve Through XYZ points curve feature, 228–229
- Curve to Curve Deform option, 265
- Curved Edges, Edge Flange feature, 828–829
- curves
  - composite, 230
  - Curve Through Reference points, 230

- Curve Through XYZ points, 228–229
    - described, 224
    - generation, 954
    - Helix
      - described, 225
      - spiral, 226
      - Tapered Helix, 225–226
      - Variable Pitch Helix, 226
    - hiding, 958
    - projected
      - described, 226–227
      - Sketch Onto Face, 227
      - Sketch Onto Sketch, 227–228
    - reflective analysis tool, 372
    - split lines, 230–231
    - text, following, 193–195
  - curves, guide
    - loft features, 217–218
    - Sweep feature
      - described, 221–222
      - Pierce relation, 222–224
  - custom parts, Toolbox, 526
  - custom profiles, Structural Member feature, 874–875
  - custom properties
    - configurations, 327–328
    - General Settings Options, 936
    - linking notes to, 657
  - Custom Sizing panel, Hole Wizard, 506
  - custom toolbar button, 902
  - custom view, 635
  - customer care, back-of-the-book CD, 1016
  - Customer Portal, SolidWorks Web site, 1009–1010
  - customization options, 56–57
  - Customize Menu option, 48–50
  - Cut command, Standard toolbar, 30
  - Cut feature, multibody modeling, 748
  - Cut Lists, weldments
    - custom properties, 883
    - described, 882–883
    - Make Weld Bead, 884
  - Cut With Surface modeling
    - described, 782–783
    - tutorial, 788–789
- ## D
- data management
    - filenames
      - described, 925
      - filenames, 925
      - hybrid naming system, 927–928
      - intelligent numbering systems, 927
      - revision control, 928
      - rules, 926–927
    - network files, 928–929
    - PDM application, 929
  - datum feature display type, 978
  - Deboss Wrap feature, 258–260
  - default
    - end constraint, 215
    - interface settings tutorial, 65
    - radius, Edge Flange feature, 826
    - Section view, 623–625
    - templates
      - always use and prompt user to select, 960
      - documents, 84–85
  - Deform feature
    - Curve to Curve Deform option, 265
    - described, 263
    - Point Deform option, 264–265
    - PropertyManager interface, 264
    - Surface Push Deform option, 265–266
  - Degree-of-Freedom analysis, 420–421
  - Delete Body feature, 747
  - Delete command, 30–31
  - deleting
    - bodies, 755
    - configurations, 318–319
  - dependencies, tree display options, 409–410
  - depicting assembly process
    - individual steps, 403–404
    - item numbering, 403
  - depth, Broken-out Section view, 630–631
  - derived component patterns, 469–470
  - derived configurations, 324
  - derived sketch, 190–191
  - descriptions, tree display options, 407

- design, in-context
  - advantages, 476
  - best practice suggestions
    - circular references, 490–491
    - communicating design intent, 493
    - with configurations, 488–489
    - and file management, 490
    - libraries, 491–492
    - and mates, 490
    - mating or in-context, 492–493
    - with motion, 489–490
    - multiple contexts, 485–488
    - with multiple instances, 490
    - skeletons and layouts, 491
  - described, 475–476
  - external references
    - inserted parts, 493–494
    - mirror parts, 494
    - split parts, 494
  - potential problems, 476
  - reference update holders, 397
  - starting
    - alternative technique, 478
    - described, 477
    - InPlace* mate, 477–478
    - valid relations, 478
  - tutorial, 494–500
  - working
    - Edit Component button, 480–481
    - external reference symbol, 481–483
    - external references settings in Tools, Options, 484
    - list external references, 483–484
    - part color and transparency, 479–480
    - text color, 479
    - visual cues, 478
- design intent
  - described, 14
  - editing
    - Display, Delete Relations, 15
    - Suppressed Sketch Relations, 16
    - View, Sketch Relations, 15
  - in-context design, communicating, 493
- Design Library
  - annotations, storing, 554–555
  - assemblies, 556
  - configurations, 331–332
  - creating
    - described, 557, 558–559
    - from existing part, 562–563
    - FeatureManager, 557
    - icon, displaying, 560–562
    - limitations, 557
    - saving, 560
  - described, 549–550
  - folder
    - adding, 564
    - location, 555
  - Forming tool, Base Flange method, 839
  - in-context design, 491–492
  - interface
    - Design Library, 551–554
    - Task pane, 550–551
  - parts, 555–556
  - routing, 556
  - setting up, 550
  - sheet metal forming tools, 556
  - Smart Components, 556
    - assemblies, 556
    - starting, 572
  - Toolbox
    - merging, 527
    - sharing existing, 523–525
  - tutorial, 564–570
- Design Tables
  - assembly configurations, 452
  - described, 332, 696–698
  - Edit Control panel, 340
  - editing, 341–342
  - items driven by, 333–334
  - settings
    - Edit Control panel, 340
    - linked design table, 340
    - Options, 340–341
  - simple, creating
    - dimension, adding, 339
    - displaying, 339–340
    - editing, 335–336
    - naming, 336–338
    - techniques compared, 334–335
  - tutorial, 342–346

- design tree, Hole Wizard, 505
- detail circle
  - display new as circles, 937
  - drawn in-line, 623
  - pre-drawn, 621–623
- Detail view
  - detail circle drawn in-line, 623
  - editing, 623
  - pre-drawn detail circle, 621–623
  - scaling, 940
- Detailing
  - alternate section display, 977
  - area hatch display, show halo around annotations, 979
  - auto insert on view creation, 978
  - beyond dimension line, 978
  - BCM, automatic update of, 978–979
  - break lines, gap, 980
  - center marks, size, 979
  - centerline
    - extension, 977
    - font, 980
  - cosmetic thread display, high quality, 979
  - datum feature display type, 978
  - dimensioning standard, 975
  - display datums per 1982, 976
  - dual dimensions display, 976
  - extended lines, 980
  - extension, 980
  - extension line gap, 977
  - fixed size weld symbols, 976
  - leading zeroes, 976
  - level of, performance and, 955
  - next label, 978
  - surface finish symbols, display symbols per 2002, 978
  - trailing zeroes, 976
- developable surface modeling, 765
- Deviation Analysis reflective analysis tool, 372–373
- dimension line, Detailing beyond, 978
- Dimension Text, 677–678
- dimensions
  - Add Parentheses by Default, 981
  - angled/linear-angled display, 985
  - arrow style, 984
  - Arrows Follow Position Of Text (Radial), 985
  - bent leader length, 986
  - break dimension extension/leader lines, 985–986
  - broken dimension lines in broken views, 983
  - Center Between Extension Lines, 982
  - configurations, controlling, 325–326
  - Design Tables, adding, 339
  - direction, groove on back, 158–159
  - display 2nd Outside Arrow (Radial), 984
  - equations, creating, 304–305
  - favorites, 682–683
  - flat to screen display, 952
  - fractional display, 986
  - include prefix inside basic tolerance box, 982
  - Insert Model Items, 670–671
  - inserted from model, automatically place, 937
  - layers, 716
  - leaders, 987
  - methods, debate over, 669
  - names, showing, 933
  - offset distances, 983
  - ordinates, automatically jog, 983
  - Outside, Inside, and Smart options, 984
  - precision, 987
  - PropertyManager options
    - break lines, 679
    - described, 676–677
    - Dimension Text, 677–678
    - Display options, 678–679
    - More Properties, 679–680
    - Primary Value Override, 678
    - witness/leader display, 679
  - radial leader snap angle, 986
  - reference dimensions
    - annotation views, 673
    - autodimensioning, 675–676
    - described, 672–673
    - driven dimension color, 673–674
    - ordinate and baseline, 674–675
    - reference sketch entities, 676
  - Snap Text to Grid, 981
  - standard, detailing, 975
  - symbols
    - accessing, 663
    - custom, 664

- dimensions (*continued*)
  - system separator for, 935
  - text alignment, 983
  - 3D weldments sketching, 870
  - tolerances
    - available types, 681
    - document type, 987–988
    - geometric, 682
    - precision, 682
  - tutorial, 666–668, 683–685
  - type, named views, 620
- Dimensions/Relations toolbar
  - Add Relations, 134
  - Auto Dimension, 134
  - Automatic Relations, 134–135
  - Baseline Dimensions, 132
  - Chamfer Dimension, 134
  - Horizontal and Vertical Ordinate Dimensions, 133
  - Horizontal Dimension, 132
  - Horizontal Ordinate Dimensions, 133
  - Ordinate Dimensions, 133
  - Smart Dimension, 132
  - Vertical Dimension, 132
- DimXpert
  - Chamfer Dimension Scheme, 981
  - described, 981
  - Fillet and Chamfer Options, 981
  - Slot Dimension Scheme, 981
- Direction 1 and Direction 2 extrude options, 154–156
- Direction Vector end constraint, 217
- disc installation
  - attention, paying, 922
  - customizing components, 922
  - described, 922
  - installation folders, 922–923
  - level to install, 922
  - new installation or upgrade, 922
  - other software, 924
  - performance feedback, 924
  - serial number and license server, 923
  - SolidWorks Search, 923–924
- disjoint sketches
  - multibody modeling, 745
  - Structural Member feature, 873
- display
  - assembly process
    - individual steps, 403–404
    - item numbering, 403
  - component and config names and descriptions, 407–409
  - contents while dragging, 937
  - datums per 1982, detailing, 976
  - Delete Relations, 15
  - Design Tables, 339–340
  - dimensions options, 678–679
  - Items Only In The View In Which They Are Created, 994
  - modes
    - Component Line Font, 639–640
    - layers, 640
  - performance assembly configurations
    - described, 447
    - lightweight parts, 447–448
    - resolved versus unsuppressed, 448
  - plane when shaded, 946
  - 2nd Outside Arrow (Radial), 984
  - table-based BOM, 693–694
  - text size, maintaining, 994
  - visualization tools, 102
- Display Filter Annotations Display, 993
- Display States
  - configurations and, 440–442
  - described, 439
  - drawings and, 442
  - views, 638–639
- Display Style
  - named views, 620
  - page, 940–941
- Display/Delete Relations
  - Sketch toolbar, 121
  - sketches, 184–186
- Display/Selection
  - anti-alias edges/sketches, 951
  - assembly transparency for in context edit, 951
  - described, 949
  - dynamic highlight from graphics view, 951
  - edge display in shaded with edges mode, 951
  - flat to screen, display dimensions, 952
  - four view viewport, projection type for, 952–953
  - hidden edges display, 950

- highlight all edges of features selected in graphics view, 951
- HLR and shaded modes, 950
- open edges of surfaces, show in different color, 951
- Part/Assembly tangent edge display, 950
- reference triad, 952
- shaded planes, display, 952
- transparency, enable selection through, 952
- wireframe and HLV modes, 950
- dissolve
  - pattern, RMB menu, 471
  - subassembly, 400
- document. *See also* System Options
  - file references, 87, 89
  - file sizes, reducing, 88–89
  - maximize on open, 934
  - open last used at startup, 932
  - opening existing
    - described, 85–86
    - looking inside, 86–87
    - Microsoft Shadow Data, 87
  - saving setup, 80–81
  - templates
    - default, 84–85
    - described, 81
    - locating, 83–84
    - multiple, 81–83
    - sharing, 85
  - types, 79–80
- Document Properties
  - Annotations Display
    - Always Display Text At The Same Size, 994
    - Display Filter, 993
    - Display Items Only In The View In Which They Are Created, 994
    - Hide Dangling Dimensions And Annotations, 994
    - JIS Surface Finish Size, 994
    - Text Scale, 994
    - Use Assembly's Setting For All Components, 994
  - Annotations Font, 994
  - arrows
    - Attachments, 992
    - Foreshortened Diameter, 992
    - Section View Size, 992
    - size, 991
  - balloons
    - auto layout, 991
    - bent leaders, 991
    - quantity, 991
    - sizes, 990
    - styles, 990
    - text, 990–991
    - uses, 989–990
  - BOM tables
    - Don't Add "QTY" Next To Configuration Name, 997
    - Don't copy QTY column name from template, 997
    - missing component, 997
    - Restrict Top Level Only BOMs To One Configuration, 997
    - zero quantity, 997
  - Colors, 1002–1003
  - described, 974
  - Detailing
    - alternate section display, 977
    - area hatch display, show halo around annotations, 979
    - auto insert on view creation, 978
    - beyond dimension line, 978
    - BOM (Bill of Materials), automatic update of, 978–979
    - break lines, gap, 980
    - center marks, size, 979
    - centerline extension, 977
    - centerline font, 980
    - cosmetic thread display, high quality, 979
    - datum feature display type, 978
    - dimensioning standard, 975
    - display datums per 1982, 976
    - dual dimensions display, 976
    - extended lines, 980
    - extension, 980
    - extension line gap, 977
    - fixed size weld symbols, 976
    - leading zeroes, 976
    - next label, 978
    - surface finish symbols, display symbols per 2002, 978
    - trailing zeroes, 976

Document Properties (*continued*)

## Dimensions

- Add Parentheses by Default, 981
- angled/linear-angled display, 985
- arrow style, 984
- Arrows Follow Position Of Text (Radial), 985
- bent leader length, 986
- break dimension extension/leader lines, 985–986
- broken dimension lines in broken views, 983
- Center Between Extension Lines, 982
- display 2nd Outside Arrow (Radial), 984
- fractional display, 986
- include prefix inside basic tolerance box, 982
- leaders, 987
- offset distances, 983
- ordinates, automatically jog, 983
- Outside, Inside, and Smart options, 984
- precision, 987
- radial leader snap angle, 986
- Snap Text to Grid, 981
- text alignment, 983
- tolerance, 987–988

## DimXpert

- Chamfer Dimension Scheme, 981
- described, 981
- Fillet and Chamfer Options, 981
- Slot Dimension Scheme, 981

## Grid/Snap

- automatic scaling, 999
- dash, 999
- Display Grid, 999

## Image Quality, 1003–1005

## Line Font

- edges described, 1001
- End Cap Style, 1001

## Line Style, 1002

## Notes

- border, 989
- leader anchor, 988
- leader justification snapping, 989
- leader style, 989
- text alignment, 988

## Plane Display, 1005

## Tables

- BOM (Bills of Materials), 997
- Hole Table, 995–996
- Revision Table, 996–997

## Units option

- decimal places or denominator, 1000
- described, 999–1000
- fractions, 1000

## View Labels

- described, 998
- Display Label Above View, 998

## Virtual Sharps, 992

## Dome and Shape features, 254–256

## dongle hardware key, 910

## double hold line, face filleting, 248–249

## Draft Analysis tool

- basic mode, 360–361
- Face Classification mode, 362–363
- Find Steep Faces, 363–364
- Gradual Transition mode, 361–362

## drag between windows, SmartMates, 419

## dragging, move components by, 957

## Drag/Move, overriding dimensions, 946

## drawing

- assembly layout, 394–395
- blocks, 138–139, 143–145
- colors
  - Color Display mode, 195
  - Edit color, 195
  - Line color, 195

## creating simple, 174–180

## described, 111–112

## Dimensions/Relations toolbar

- Add Relations, 134
- Auto Dimension, 134
- Automatic Relations, 134–135
- Baseline Dimensions, 132
- Chamfer Dimension, 134
- Horizontal and Vertical Ordinate Dimensions, 133
- Horizontal Dimension, 132
- Horizontal Ordinate Dimensions, 133
- Ordinate Dimensions, 133
- Smart Dimension, 132
- Vertical Dimension, 132

## Display States, 442

- editing and copying tutorial, 196–200
- entities
  - Copy, 188
  - Copy and paste, 190
  - derived sketch, 190–191
  - Modify Sketch, 188–190
  - Move, 187
  - Rotate, 187–188
  - Scale, 188
  - simple drag, 190
- extruded features
  - Sketch Contour, 208–209
  - 3D sketch, 209–210
- groove on back, 160–162
- hiding, 958
- identifying entities, 113
- inferencing, 135–137
- Line Thickness and Line Style tools, 195–196
- opening, 112
- page
  - arc centerpoints, displaying, 944
  - creating on new part, 945
  - display plane when shaded, 946
  - Drag/Move, overriding dimensions, 946
  - driven by default, 947
  - driven state, prompt to set, 947
  - entity points, displaying, 944
  - fully defined sketches, 944
  - ghost image on drag, 947
  - line length measured between visual sharps in 3D, 947
  - prompt to close sketch, 945, 946
  - Relations/Snaps, 947–949
  - spline control polygon, showing by default, 947
  - Spline Tangency and Curvature handles, enabling, 947
  - virtual sharps, displaying, 946
- pictures
  - bringing into, 191
  - perspective, 192–193
  - sharp edges, 193
  - size, changing, 191–192
  - three views, 192
  - tutorial, 200–203
- planes, controlling, 329–330
- positions with, 450–451
- relations
  - described, 183
  - Display/Delete Relations, 184–186
  - SketchXpert, 186–187
  - tutorial, 140–142
- settings, 137–138
- Sketch toolbar
  - Add Relation, 121
  - Circle, 117–118
  - Circular Sketch Pattern, 129
  - Construction Geometry, 125
  - Convert Entities, 121
  - Copy Entities, 129
  - Display/Delete Relations, 121
  - Dynamic Mirror, 129
  - Ellipse, 126
  - Extend, 128
  - Face Curves, 128, 129
  - Grid/Snap, 126
  - Intersection Curve, 128
  - Line, 116
  - Linear Sketch Pattern, 129, 130
  - Make Path, 129
  - Mirror Entities, 121
  - Modify Sketch, 130–131
  - Move Entities, 125–126
  - No Solve Move, 131
  - Offset Entities, 122–123
  - Parabola, 127
  - Parallelogram, 126
  - Partial Ellipse, 127
  - Perimeter Circle, 126
  - Point, 121
  - Polygon, 126
  - Quick Snaps flyout, 121
  - Rectangle, 116
  - Rotate Entities, 129
  - Scale Entities, 129
  - Select, 126
  - Sketch Fillet tool, 119
  - Sketch, opening and closing with, 113
  - Sketch Picture, 131
  - Sketch Text, 127–128
  - Smart Dimension, 113–115

- drawing, Sketch toolbar (*continued*)
    - Spline, 120–121
    - Spline on Surface, 127
    - Split Entities, 128
    - 3D Sketch, opening and closing with, 113
    - 3D Sketch Plane, 121
    - Trim Entities, 123–125
  - Split process, multibody modeling, 749–750
  - text
    - curve, following, 193–195
    - TrueType fonts, 193
    - weldments, 884–885
  - drawing display tools tutorial, 720–723
  - drawing templates. *See* templates
  - Drawing toolbar, 34
  - drawing views. *See* views
  - Drawings page
    - arc centerpoints, display sketch, 939
    - Area Hatch/Fill page, 941
    - auto-update, allowing when opening drawings, 938
    - components, automatically hide on view creation, 938
    - detail circles, display new as circles, 937
    - detail view scaling, 940
    - dimension inserted from model, automatically place, 937
    - Display Style page, 940–941
    - duplicate model dimensions, eliminating on insert, 938
    - entity points, display, 939
    - hidden entities, selecting, 937
    - keyboard movement increment, 940
    - out-of-date drawing views, printing with crosshatch, 940
    - out-of-sync water mark, printing, 938
    - reference geometry names in drawings, show, 938
    - revision, custom property used as, 940
    - scale new drawing views, automatically, 937
    - show contents while dragging drawing view, 937
    - smooth dynamic motion of drawing views, 937
    - tessellated data, save for drawings with shaded and draft quality views, 939
    - view palette, show, 939
  - drive, hard
    - RAID configuration, 920
    - speed, 920
  - drive speed, 920
  - driven dimensions, 308–310
  - dual dimensions display, 976
  - duplicate model dimensions, eliminating on insert, 938
  - duplicating
    - existing settings tutorial, 64–65
    - sketches tutorial, 196–200
  - DWG or DXF file, creating from imported, 602–604
  - Dynamic Assembly Motion
    - Degree-of-Freedom analysis, 420–421
    - single degree of freedom, advantages of, 421–423
  - dynamic highlight from graphics view, 951
  - Dynamic Mirror, 129, 281
  - dynamic view mode, 954
- ## E
- edge display
    - blocking in shaded mode, 958
    - hiding and showing, 720
    - open, show in different color, 951
    - Part/Assembly tangent edge display, 950
    - in shaded with edges mode, 951
  - Edge Flange feature, Base Flange method
    - Angle panel, 826–827
    - Curved Edges, 828–829
    - default radius, 826
    - described, 824–825
    - Edit Flange Profile, 825–826
    - Flange length, 827
    - gap distance, 826
    - Trim Side Bends flange position, 827–828
  - Edit Component button, 480–481
  - Edit Control panel, Design Tables, 340
  - Edit Flange Profile, 825–826
  - editing
    - blocks
      - Add/Remove Entities button, 662
      - Explode button, 663
      - options, accessing, 662
      - Rebuild button, 662
    - Broken-out Section view, 631
    - color, 195
    - design intent
      - Display, Delete Relations, 15
      - Suppressed Sketch Relations, 16
      - View, Sketch Relations, 15

- Design Tables, 335–336, 341–342
  - Detail view, 623
  - existing formats, 596–597
  - Flyout FeatureManager, 355–356
  - macro after recording, 936
  - mates, 428–429
  - parts in assemblies, 944
  - reordering features, 353–355
  - reordering folders, 355
  - Rollback bar
    - consumed features, 349
    - described, 348
    - enhancement requests, 353
    - multiple parents, features with, 350–351
    - original color, viewing consumed features in, 351–352
    - parent-child relationship, 349–350
  - rollback methods, 347–348, 353
  - Section view, 627
  - Smart Components, 586–587
  - tutorial, 196–200, 380–386
- elements, assembly
- identifying, 391–392
  - standard reference geometry items, 393
- elements, favorite
- dimensions, 682–683
  - Hole Wizard
    - administering, 511
    - creating, 511
    - described, 510
    - quirks, 511–512
    - storing custom holes, 511
  - notes, 656–657
  - templates, 610–611
- Ellipse, 126
- Emboss option, Wrap feature, 258
- Emboss Wrap feature, 258
- empty view, 635
- End Cap
- Line Format, 718
  - weldments, 879
- end conditions revolve features, 211
- end constraints loft features
- Curvature to Face, 216
  - Default, 215
  - Direction Vector, 217
  - none, 215
  - Tangent to Face, 215–216
- endpoint, dragging, 11–12
- English language feature and filenames, 935
- enhancement requests, Rollback bar, 353
- entities
- colors, visualization tools, 101
  - display points, 939
  - loft features, 212–213
  - points, displaying, 939, 944
  - sketches
    - Copy, 188
    - Copy and paste, 190
    - derived sketch, 190–191
    - identifying, 113
    - Modify Sketch, 188–190
    - Move, 187
    - Rotate, 187–188
    - Scale, 188
    - simple drag, 190
- equations
- assembly
    - external references, 393
    - link values and global variables, 393
    - renaming, 393–394
  - creating
    - comments, 307
    - naming dimensions, 304–305
    - writing out on paper, 305–307
  - described, 303–304
  - driven dimensions, 308–310
  - expressions, 313–314
  - global variables, 313
  - IIF statement, 310–311
  - link values, 311–312
  - recommendations, 394
  - SWITCH statement, 311
  - tutorial, 314
  - writing out on paper, 305–307
- errors
- link variables and, 599–600
  - mates, distinguishing from warnings, 430–431
  - show every rebuild, 933–934

- evaluation techniques
  - Check tool, 369–370
  - COSMOSXpress
    - analyze, 375–376
    - described, 374
    - loads, 375
    - materials selection, 374
    - optimization, 377
    - restraints, 374–375
    - results, 376
  - Draft Analysis tool
    - basic mode, 360–361
    - Face Classification mode, 362–363
    - Find Steep Faces, 363–364
    - Gradual Transition mode, 361–362
  - listed, 359
  - MoldflowXpress
    - analyze and results, 379
    - conditions, 378–379
    - described, 377
    - injection location, 377–378
    - material, 378
  - reflective
    - curvature display, 372
    - Deviation Analysis, 372–373
    - lights with specularly turned up, 372
    - RealView graphics display, 372
    - Tangent Edges as Phantom setting, 373
    - Zebra Stripes, 370–371
  - Thickness Analysis tool
    - Show Thick Regions option, 366–367
    - Show Thin Regions option, 365
  - tutorial, 386–387
  - Undercut Detection tool, 367–368
  - Verification on Rebuild tool, 368–369
- Excel-based BOM (Bill of Materials), 695–696
- Explode Line Sketch, 458–460
- exploded views, assembly configurations
  - Base and Tower, 454–455
  - collapsing, 458
  - Explode Line Sketch, 458–459, 458–460
  - grippers, 456
  - illustrated, 457
  - initiating, 453–454
  - Twist Arm subassembly, 455–456
- expressions, equation, 313–314
- Extend Sketch toolbar, 128
- Extend Surface modeling, 773
- extended lines, 980
- extension, 980
- extension line gap, 977
- external reference symbol, 481–483
- external references
  - assembly equations, 393
  - component names, updating when documents are replaced, 960
  - described, 958
  - don't prompt to save read-only referenced documents (discard changes), 959
  - in-context design
    - inserted parts, 493–494
    - mirror parts, 494
    - split parts, 494
  - load referenced documents, 959
  - multiple contexts for parts when editing in assembly, allow, 959
  - read-only access, open referenced documents with, 959
  - referenced geometry, automatically generate names for, 960
  - references external to the model, do not create, 960
  - search file locations for external references, 959
  - update out-of-date linked design tables, 960
  - warn about saving referenced documents, 959
- external references settings in Tools, Options, 484
- extruded options
  - part, creating simple
    - Contour Selection, 157
    - described, 152–153
    - Direction 1 and Direction 2, 154–156
    - From panel, 153–154
    - Thin Feature, 157
  - simple features, 5
  - Sketch types
    - Sketch Contour, 208–209
    - 3D sketch, 209–210
  - solid feature, 206, 207
  - Thin Feature, 206–208
  - when to use, 206
- Extruded Surface modeling, 766–767

**F**

## face

## filletting

- Constant Width option, 250
- continuous curvature, 245–246
- described, 243–244
- double hold line, 248–249
- with Help point, 246–247
- single hold line, 247–248

## patterning, 284–285

Face Classification mode, 362–363

Face Curves Sketch toolbar, 128, 129

Faces to Extend, Closed Corner feature, 834

## favorites

dimensions, 682–683

## Hole Wizard

administering, 511

creating, 511

described, 510

quirks, 511–512

storing custom holes, 511

notes, 656–657

templates, 610–611

Feature Driven component patterns, 535

feature names, tree display options, 407

Feature Scope multibody modeling, 746–747

## feature-based modeling

described, 4

feature types, 4

FeatureManager design trees, 8

sample part, 7

simple extruded and revolved features, 5

surfacing and hybrid features, 5–6

## FeatureManager

arrow key navigation, 964

assembly, creating, 411

described, 962–963

design trees, 8

display warnings, 965

Dynamic Highlight, 964

folders, creating, 404–405

interface, 52, 557

library features, creating, 557

name feature on creation, 963

scroll selected item into view, 963

transparent flyout FeatureManager in parts/assemblies,  
964–965

tutorials, creating, 411

## features

assembly, 396

mirroring in 3D Sketch mode, 296

reordering, 353–355

suppressing in assembly configurations, 443–444

tree display options, 409–410

Features toolbar, 34

FeatureXpert settings, 936

file document references, 87, 89

File Explorer, 969–971

File Locations, 961–962

## file management

in-context design, 490

Smart Components, 585–586

## file size

configurations, 324–325

documents, 88–89

## filenames

data management, 925

English language, 935

hybrid naming system, 927–928

intelligent numbering systems, 927

revision control, 928

rules, 926–927

Fill Pattern, 295

## Fill Surface

blend modeling tutorial, 792–795

modeling, 774–776, 784–785

Fillet and Chamfer Options, 981

Fillet Bead weldments, 880–881

## filletting

constant radius

entities, selecting, 233

tangent propagation, 233–235

## face

Constant Width option, 250

continuous curvature, 245–246

described, 243–244

double hold line, 248–249

with Help point, 246–247

single hold line, 247–248

- filleting (*continued*)
  - full round, 250–251
  - Keep Edge/Keep Surface toggle, 238–239
  - Keep Feature option, 239–240
  - large number, handling
    - entities, selecting, 236
    - folders, 237
    - preview, 236–237
  - multiple radius, 237–238
  - options listed, 231–232
  - part, creating simple, 167–169
  - patterning, 285
  - PropertyManager, 232
  - Round Corners option, 238
  - setback, 251–254
  - variable radius, creating
    - described, 240
    - reasons to use, 243
    - straight versus smooth transitions, 243
    - values, applying, 241–242
- Find Steep Faces Draft Analysis tool, 363–364
- finding words
  - index now, 973
  - installing, 971
  - maximum results per data source, 973
  - results per page, 972
  - SolidWorks Online Users Guide, 1008
  - while typing option, 971–972
- Fix Projected Length Jog feature, 833
- Fixed Face Jog feature, 832
- Fixed Face or Edge Sheet Metal feature, 818
- fixed size weld symbols, 976
- Flange length, 827
- Flat Pattern feature
  - Base Flange method, 822–824
  - Insert Bends Method, 857
- flat surface
  - configurations, 329–330
  - display, 1005
  - hiding, 958
  - Split process, multibody modeling, 750
  - 3D sketching, weldments, 868–870
- flat to screen, display dimensions, 952
- Flatten Bends feature, 855–856
- Flatten command, Base Flange method, 843–844
- Flex feature, 260–263, 737–738
- flexible subassembly, 400–401
- FLEXlm End Users Guide, 1010
- Flyout FeatureManager, 355–356
- flyout toolbars, 41–42
- folders
  - assembly
    - creating in FeatureManager, 404–405
    - described, 396
    - existing, adding items to, 405–406
    - reordering items in tree, 406
  - bodies, managing, 752–754
  - Design Library location, 555
  - disc installation, 922–923
  - library features, 564
  - reordering, 355
  - RMB menu component patterns, 471
  - Toolbox, adding, 527
- font, line
  - edges described, 1001
  - End Cap Style, 1001
- Foreshortened Diameter arrows, 992
- form, building with macro, 903–905
- formats
  - blank screen, creating from, 601–602
  - DWG or DXF file, creating from imported, 602–604
  - existing, customizing
    - custom properties, 598–601
    - editing, 596–597
    - sample, 595–596
    - text, managing, 598
  - need for, 594
  - saving, 605
  - second sheet
    - adding new sheets, 605
    - updating drawing to new format, 605–606
  - templates versus, 593–594
- Forming tool, Base Flange method
  - creating, 838–839
  - described, 838
  - library, 839
  - placing, 840
  - special techniques, 840–841
- four line sketch parametrics, 11
- four view viewport, projection type for, 952–953
- fractional display, 986
- From panel extrude options, 153–154
- full round filleting, 250–251

Full Screen command, Standard toolbar, 32

Full Screen mode, toolbars, 42–43

fully defined sketches, 944

## G

gap

- distance, Edge Flange feature, 826
- setting, Closed Corner feature, 834

Gauge Tables

- Sheet Metal feature, 817–818
- weldment, 703

Gaussian curvature surface modeling, 766

Gear mate, 426

General Settings Options

- Confirmation Corner, 935–936
- custom property used as component description, 936
- edit macro after recording, 936
- English language feature and filenames, 935
- FeatureXpert, 936
- input dimension value, 932
- maximize document on open, 934
- open last used document(s) at startup, 932
- performance feedback, enabling, 936
- PropertyManager, auto-show, 936
- shaded face highlighting, 934
- show dimension names, 933
- show errors every rebuild, 933–934
- single command per pick, 933
- system separator for dimensions, 935

General Tables, 704

geometric tolerances, 682

Geometry Pattern, 282–283

geometry, standard reference items, 393

Getting Started section, online documentation, 77

ghost image on drag, 947

global variables in equations, 313

glossary, SolidWorks Online Users Guide, 1008

goal, surface modeling, 761–762

Gradual Transition mode, Draft Analysis tool, 361–362

graphics cards, SolidWorks Web site, 1009

Grid/Snap

- automatic scaling, 999
- dash, 999
- Display Grid, 999
- Sketch toolbar, 126

grippers exploded view, 456

groove on back

- Hole Wizard, 163–167
- part, creating simple
  - described, 158
  - offset, 159–160
  - relative size or direction dimensions, 158–159
  - sketch techniques, 160–162

grouping subassembly by relative motion, 402–403

guide curves

- loft features, 217–218
- Sweep feature
  - described, 221–222
  - Pierce relation, 222–224

Gusset weldments, 879–880

## H

halo, show around annotations, 979

hard copy documentation

- importance of, 78–79
- Quick Reference Guide, 79
- Quick Start pamphlet, 79

hard drive

- drive speed, 920
- RAID configuration, 920

hardware

- CPU
  - AMD versus Intel, 918–919
  - multi-processor or multi-core, 918
  - 32x versus 64x systems, 919
  - Vista compatibility, 919
- dongle hardware key, 910
- hard drive
  - drive speed, 920
  - RAID (Redundant Array of Independent Disks)
    - configuration, 920
- memory (RAM), 920
- motherboard, 920
- network card, 920
- video card, 919

hatch display, show halo around annotations, 979

Helix

- described, 225
- spiral, 226
- Tapered Helix, 225–226
- Variable Pitch Helix, 226

- help
  - macro, finding, 906
  - non-commercial Web sites, 1012–1013
  - online forums, 1011–1012
  - SolidWorks Online Users Guide
    - described, 1007
    - fundamentals, 1008
    - glossary, 1008
    - index, 1008
    - Search function, 1008
  - SolidWorks Web site
    - Customer Portal, 1009–1010
    - Discussion Forum, 1010
    - graphics cards, 1009
    - Tech Tips, 1011
  - user groups, 1011
- Help command, Standard toolbar, 33
- Help point, face filleting, 246–247
- Hem feature, Base Flange method, 831
- hidden elements
  - all planes, axes, sketches, curves, annotations, etc., 958
  - bodies, managing, 754–755
  - edges display, 720, 950
  - entities, selecting, 937
  - Hide Dangling Dimensions And Annotations, 994
- highlighting
  - all edges of features selected in graphics view, 951
  - dynamic from graphics view, 951
  - shaded face, 934
- history-based and non-history-based portions of assembly tree, 395
- history-based modeling, 6, 8
- HLR and shaded modes, 950
- HLV display, 950
- hole positions tutorial, 543–544
- Hole Series
  - assembly, 397–398
  - Hole Wizard
    - basic steps, 512–514
    - interface, 512
  - Smart Fasteners, 535
- hole sketch, 505
- Hole Table
  - Alpha/Numerical Control, 996
  - BOMs, 708–710
  - Design Tables, 698–701
  - Location Precision, 996
  - Origin Indicator, 995
  - Scheme, 996
  - Tag Angle/Offset From Profile Center, 995
- Hole Wizard
  - described, 503–504
  - Favorites
    - administering, 511
    - creating, 511
    - described, 510
    - quirks, 511–512
    - storing custom holes, 511
- Hole Series
  - basic steps, 512–514
  - interface, 512
  - size and type of hole
    - Custom Sizing panel, 506
    - design tree, 505
    - hole sketch, 505
    - placement sketch, 505
  - 2D versus 3D placement sketches, 163, 506–510
- Hole Wizard/Toolbox, 969
- holes, populating
  - drag-and-drop, 533–534
  - Feature Driven component patterns, 535
  - multiple at once, 534
- home license, 909
- horizontal and parallel relations, 12–13
- Horizontal and Vertical Ordinate Dimensions, 133
- Horizontal Dimension, 132
- Horizontal Ordinate Dimensions, 133
- hotkeys
  - macros, combining with, 71
  - organizing, 57–58
  - rectangle-sketching macro, connecting to, 901–902
  - tutorial, 70–71
  - usefulness, 57
- huge screws
  - Toolbox, 517–518
  - tutorial, 546
- hybrid features, 5–6
- hybrid modeling, 764
- hybrid naming system, 927–928
- hyperlinking text notes, 657–658

## I

## icon

- library features, 560–562
- reducing, 59

## identifying assembly elements, 391–392

## IIF statement equations, 310–311

## illustrated exploded views, 457

## illustrating

- assembly process
  - individual steps, 403–404
  - item numbering, 403
- component and config names and descriptions, 407–409
- contents while dragging, 937
- datums per 1982, detailing, 976
- Delete Relations, 15
- Design Tables, 339–340
- dimensions options, 678–679
- Items Only In The View In Which They Are Created, 994
- modes
  - Component Line Font, 639–640
  - layers, 640
- performance assembly configurations
  - described, 447
  - lightweight parts, 447–448
  - resolved versus unsuppressed, 448
- plane when shaded, 946
- 2nd Outside Arrow (Radial), 984
- table-based BOM, 693–694
- text size, maintaining, 994
- visualization tools, 102

## Image Quality, 1003–1005

## images

- bringing into sketches, 191
- perspective, 192–193
- sharp edges, 193
- size, changing, 191–192
- three views, 192

## imaging tools

- changing view
  - Annotation views, 100
  - arrow keys, 90
  - described, 89–90
  - MMB (middle mouse button), 90
  - Standard Views toolbar, 98–99

## View Orientation dialog box, 97–98

## View toolbar, 90–96

- color and optical properties
  - automatic colors, 102
  - color hierarchy, 100–101
  - Display pane, 102
  - entity colors, 101
- in-context design, 478
- tutorials, 105–109

## implementation schemes

- Cold Turkey switchover, 917
- described, 915–916
- phased approach, 916–917
- pilot project, 916
- planning, 916

## imported 2D data, layers, 714–715

## imported geometry, Insert Bends Method, 858

## importing pictures into sketches, 191

## include prefix inside basic tolerance box, 982

## in-context design

- advantages, 476
- best practice suggestions
  - circular references, 490–491
  - communicating design intent, 493
  - with configurations, 488–489
  - and file management, 490
  - libraries, 491–492
  - and mates, 490
  - mating or in-context, 492–493
  - with motion, 489–490
  - multiple contexts, 485–488
  - with multiple instances, 490
  - skeletons and layouts, 491

## described, 475–476

## external references

- inserted parts, 493–494
- mirror parts, 494
- split parts, 494

## potential problems, 476

## reference update holders, 397

## starting

- alternative technique, 478
- described, 477
- InPlace* mate, 477–478
- valid relations, 478

## tutorial, 494–500

- in-context design (*continued*)
  - working
    - Edit Component button, 480–481
    - external reference symbol, 481–483
    - external references settings in Tools, Options, 484
    - list external references, 483–484
    - part color and transparency, 479–480
    - text color, 479
    - visual cues, 478
- increments, spin box
  - described, 965–966
  - length, 966
- Indent feature
  - documents, 266–267
  - tool bodies and Boolean operations, 733–735
- index now, Search, 973
- index, SolidWorks Online Users Guide, 1008
- injection location, MoldflowXpress analysis tool, 377–378
- InPlace* mate, 477–478
- input dimension value, 932
- Insert Bends method
  - Base Flange method versus, 813, 852
  - Flat Pattern feature, 853, 857
  - Flatten Bends feature, 855–856
  - imported geometry, 858
  - mixing methods, 860
  - No Bends tool, 857
  - Normal Cut, 853–854
  - Process Bends feature, 856–857
  - reasons for using, 851
  - Rip feature, 854–855
  - rolled conical parts, 858–859
  - Sheet Metal feature, 855
  - tutorial, 860–863
- Insert Into New Part
  - pull function, 801
  - tutorial, 806–807
- Insert menu, 47
- Insert Model Items, 670–671
- Insert Part
  - multibody modeling, 751–752
  - pull function, 798–800
  - tutorial master model techniques, 804–806
- inserted parts
  - configurations, 330–331
  - in-context design, 493–494
- inserting
  - blocks
    - definition, 660–661
    - described, 659
    - existing relations, 660
    - layer, 661
    - leader, 661
    - parameters, 661
    - PropertyManager, 660
    - text/dimension display, 661
  - new subassembly, 400
- installation
  - Administrative Director, 924
  - configuration and standardization, 925
  - from discs
    - attention, paying, 922
    - customizing components, 922
    - described, 922
    - installation folders, 922–923
    - level to install, 922
    - new installation or upgrade, 922
    - other software, 924
    - performance feedback, 924
    - serial number and license server, 923
    - SolidWorks Search, 923–924
  - guides, 1010
  - Installation Manager, 921
  - preparations, 921
  - Search, 971
- Installation Manager, 921
- Instances to Skip option, component patterns, 469
- intelligent numbering systems, 927
- intent, design
  - described, 14
  - editing
    - Display, Delete Relations, 15
    - Suppressed Sketch Relations, 16
    - View, Sketch Relations, 15
  - in-context design, communicating, 493

## interface

- Alt-key method to invoke keyboard items, 58–59
- Annotation toolbar, 33
- Assembly toolbar, 33
- color customization, 56
- CommandManager
  - adding toolbars, 45
  - described, 44
  - minimizing size, 45
  - using, 45
- cursors, 50
- customization options, 56–57
- Dimensions/Relations toolbar, 34
- Drawing toolbar, 34
- elements illustrated, 20
- FeatureManager, 52
- Features toolbar, 34
- Hole Wizard, 512
- hotkeys
  - organizing, 57–58
  - usefulness, 57
- icons, reducing, 59
- library features
  - Design Library, 551–554
  - Task pane, 550–551
- macros, 60
- managing toolbars
  - adding or removing, 40–41
  - flyout toolbars, 41–42
  - Full Screen mode, 42–43
  - moving, 39–40
  - setting up, 39
- menus
  - Customize Menu option, 48–50
  - described, 46
  - Insert, 47
  - Tools, 47–48
  - View, 46
- multiple-document windows
  - changing, 63
  - managing, 61–63
- PropertyManager, 52–53
- Reference Geometry toolbar, 34–35
- saving custom settings, 60–61

- Selection Filter toolbar, 35
- settings, 19
- Sheet Metal toolbar, 35
- Sketch toolbar, 35
- SolidWorks Office toolbar, 36
- Spaceball and other view-manipulation devices, 59
- Standard toolbar
  - Check Read-Only Files command, 28
  - Close command, 27
  - Color button, 32
  - Copy command, 30
  - Cut command, 30
  - Delete command, 30–31
  - described, 21
  - Full Screen command, 32
  - Help command, 33
  - illustrated, 36–37
  - Make Assembly from Part/Assembly command, 28–29
  - Make Drawing from Part/Assembly command, 28
  - Materials icon, 32
  - New command, 21–22
  - New Window command, 33
  - Open command, 22–25
  - Options icon, 31
  - Paste command, 30
  - Print command, 29
  - Print Preview command, 29
  - Print3D command, 30
  - Properties button, 31
  - Rebuild command, 31
  - Redo command, 31
  - Reload command, 27–28
  - Save All command, 27
  - Save command, 25–27
  - Screen Capture command, 32
  - Select Color Scheme command, 32
  - Select command, 32
  - Selection Filter command, 32
  - Textures icon, 32
  - Tile Horizontally command, 33
  - Tile Vertically command, 33
  - Undo command, 31
  - Web Toolbar button, 32

interface (*continued*)

- Standard Views toolbar, 37
- status bar, 54
- Surfaces toolbar, 37
- Task pane, 53–54
- Tools toolbar, 37
- tooltips, 38–39
- tutorial
  - colors, changing, 69–70
  - CommandManager, customizing, 66–68
  - copying existing settings, 64–65
  - default settings, setting all interface items to, 65
  - described, 63
  - goals, 64
  - hotkeys, adding, 70–71
  - macros, combining with hotkeys, 71
  - menus, customizing, 68–69
- 2D Command Line Emulator, 55
- View toolbar, 37–38
- Weldments toolbar, 38
- workflow customization, 43–44

## Internet documentation

- Getting Started section, 77
- Making My First Part and Making My First Drawing
  - tutorials, 78
- Moving from AutoCAD, 78
- Online Tutorials, 78
- Online User's Guide, 78
- Tip of the Day, 78
- What's New document, 78

## Intersection Curve, Sketch toolbar, 128

## irregularities, rectangle-sketching macro, 900

## isoparameter U-V lines, 217

## item numbering assembly process, 403

## item numbers, table-based BOM, 692

**J**

## JIS Surface Finish Size, Annotations Display, 994

## Jog Angle selection, 833

## Jog feature, Base Flange method

- described, 831–832
- Fix Projected Length, 833
- Fixed Face, 832
- Jog Angle selection, 833

## Jog Position selection, 833

## offset, 833

## Jog Position selection, 833

## jogged leaders, 655–656

**K**

## Keep Edge/Keep Surface toggle filleting, 238–239

## Keep Feature option filleting, 239–240

## Keep Missing Items, table-based BOM, 691

## keyboard movement increment, 940

## keys

## arrow

## changing view, 90

## rotating view, 967

## macros, combining with, 71

## organizing, 57–58

## rectangle-sketching macro, connecting to, 901–902

## tutorial, 70–71

## usefulness, 57

## K-Factor Bend Allowance, 820

## Knit Surface modeling, 762–763, 771–772

**L**

## labels

## described, 998

## Display Label Above View, 998

## LAM (Large Assembly Mode), 957

## layers

## components, 716–717

## dimensions and notes, 716

## display modes, 640

## imported 2D data, 714–715

## on sheet format, 715

## layout sketch, assembly, 394–395

## leader anchor, 988

## leader justification snapping, 989

## leader style, 989

## leaders

## adding, 654

## described, 653–654

## dimensions, 987

## jogged, 655–656

## multiple, 655

- leader/witness display, 679
- legacy data subassembly, 401
- library
  - annotations, storing, 554–555
  - assemblies, 556
  - configurations, 331–332
  - creating
    - described, 557, 558–559
    - from existing part, 562–563
    - FeatureManager, 557
    - icon, displaying, 560–562
    - limitations, 557
    - saving, 560
  - described, 549–550
  - folder location, 555
  - folders, adding, 564
  - Forming tool, Base Flange method, 839
  - in-context design, 491–492
  - interface
    - Design Library, 551–554
    - Task pane, 550–551
  - parts, 555–556
  - routing, 556
  - setting up, 550
  - sheet metal forming tools, 556
  - Smart Components, 556
  - Smart Components feature, 572
  - Toolbox
    - merging, 527
    - sharing existing, 523–525
  - tutorial, 564–570
- licensing
  - agreement, 74
  - dongle hardware key, 910
  - home license, 909
  - levels, functions available at different, 910–911
  - network license, 910
  - standalone, 910
- lights with specularly turned up, 372
- lightweight components
  - assembly configurations, 447–448
  - automatically load, 955, 957
  - out-of-date, checking, 955
  - resolving, 956
- Limit mates, 426–427
- Line color, sketches, 195
- Line Font
  - edges described, 1001
  - End Cap Style, 1001
- Line Format
  - Color Display mode, 720
  - End Cap Style, 718
  - Line Style setting, 719
  - Line Thickness settings (thin, normal, thick, and thick (2) to (6)), 718–719
  - settings, 718
  - toolbar and interface, 717–718
- line length measured between visual sharps in 3D, 947
- Line, Sketch toolbar, 116
- Line Style, 195–196, 719, 1002
- Line Thickness settings (thin, normal, thick, and thick (2) to (6)), 195–196, 718–719
- Linear Pattern Sketch mode, 286–288
- Linear Sketch Pattern, 129, 130, 279–280
- lines, break
  - dimensions, 679
  - gap, 980
- link values and global variables, 393
- link values equations, 311–312
- linked design table, 340
- linked properties, 600–601
- linking notes to custom properties, 657
- list external references, 483–484
- loads, COSMOSXpress analysis tool, 375
- local colleges, 915
- local operations, multibody modeling
  - Flex feature, 737–738
  - Shell feature, 738–739
- local pattern references, component patterns
  - described, 466–467
  - Instances to Skip option, 469
  - Pattern Seed Only option, 467–468
- locating document templates, 83–84
- Location Precision, 996
- loft features
  - Centerline, 218
  - Close Loft option, 220
  - described, 211–212

- loft features (*continued*)
    - end constraints
      - Curvature to Face, 216
      - Default, 215
      - Direction Vector, 217
      - none, 215
      - Tangent to Face, 215–216
    - entities, 212–213
    - guide curves, 217–218
    - isoparameter U-V lines, 217
    - Merge Result option, 220
    - Merge Tangent Faces option, 219–220
    - SelectionManager, 219
    - Show Preview option, 220
    - splines, similarities to, 213–214
    - surfaces, need for, 214–215
  - Lofted Bends feature, Base Flange method, 842–843
  - Lofted Surface modeling, 767
  - looking inside existing documents, 86–87
- ## M
- macros
    - combining with hotkeys, 71
    - described, 60, 895–896
    - edit after recording, 936
    - form, building, 903–905
    - help, finding, 906
    - rectangle-sketching macro
      - custom toolbar button, connecting to, 902
      - hotkey, connecting to, 901–902
      - irregularities, removing, 900
      - recording, 896–899
      - replaying, 899–900
      - storing, 901
    - user form, creating with, 902–903
  - Make Assembly from Part/Assembly command, 28–29
  - Make Drawing from Part/Assembly command, 28
  - Make Path, Sketch toolbar, 129
  - Make Weld Bead, 884
  - Making My First Part and Making My First Drawing tutorials,
    - online documentation, 78
  - managing toolbars
    - adding or removing, 40–41
    - flyout toolbars, 41–42
    - Full Screen mode, 42–43
    - moving, 39–40
    - setting up, 39
  - manufacturing methods
    - multibody modeling, 744–745
    - questions, asking, 149
  - marks, center
    - custom symbols, 664–666
    - size, 979
  - mass properties, update when saving document, 956
  - master model techniques
    - described, 797–798
    - pull functions
      - Insert Into New Part, 801
      - Insert Part, 798–800
    - push functions, 801–802
    - Save Bodies, 803–804
    - Split feature
      - Create Assembly, 803
      - Save All Bodies, 803
      - Split, 802
    - tutorial
      - Insert Into New Part, 806–807
      - Insert Part, 804–806
      - Save Bodies, 808–809
      - Split, 807–808
  - Mate PropertyManager
    - described, 414
    - Multiple Mate mode, 417
    - Select Other command, 416
    - view and model positioning, 415–416
    - workflow, 415
  - material
    - COSMOSXpress analysis tool, 374
    - MoldflowXpress analysis tool, 378
    - Standard toolbar icon, 32
    - Toolbox, 521–522
  - materials, bill of (BOM)
    - automatic update of, 978–979
    - described, 687–688
    - Excel-based, 695–696
    - subassembly, organizing for, 401–402
    - tables
      - appearance, controlling, 693–694
      - BOM Contents, 692–693
      - BOM type, 690–691

- Configurations panel, 691
  - Don't Add "QTY" Next To Configuration Name, 997
  - Don't copy QTY column name from template, 997
  - Hole Tables, 708–710
  - item numbers, 692
  - Keep Missing Items, 691
  - missing component, 997
  - Restrict Top Level Only BOMs To One Configuration, 997
  - rows or columns, adding, 694–695
  - table anchor, 690
  - table format, 693
  - templates, 688–689
  - tutorials, 704–708
  - zero quantity, 997
  - Zero Quantity Display, 692
- mates
- advanced types
    - Belt/Chain, 428
    - Cam mate, 424–425
    - described, 423
    - Gear mate, 426
    - Limit mates, 426–427
    - Rack and Pinion mate, 426, 427
    - Symmetric mate, 424
    - Width mate, 425
  - animation speed, 956
  - assembly, 396
  - best practices, 432–433
  - described, 413
  - Dynamic Assembly Motion
    - Degree-of-Freedom analysis, 420–421
    - single degree of freedom, advantages of, 421–423
  - editing, 428–429
  - examining options, 432
  - in-context design, 490, 492–493
  - Mate PropertyManager
    - described, 414
    - Multiple Mate mode, 417
    - Select Other command, 416
    - view and model positioning, 415–416
    - workflow, 415
  - positions with
    - driving directly, 449–450
    - driving indirectly, 450
  - SmartMates
    - Alt-dragging, 417–419
    - drag between windows, 419
    - references, 420
    - subassembly, 400
    - tree display options, 409–410
    - troubleshooting, 430
    - tutorial, 433–437
    - warnings, distinguishing from errors, 430–431
- mathematical equations
- assembly
    - external references, 393
    - link values and global variables, 393
    - renaming, 393–394
  - creating
    - comments, 307
    - naming dimensions, 304–305
    - writing out on paper, 305–307
  - described, 303–304
  - driven dimensions, 308–310
  - expressions, 313–314
  - global variables, 313
  - IIF statement, 310–311
  - link values, 311–312
  - recommendations, 394
  - SWITCH statement, 311
  - tutorial, 314
  - writing out on paper, 305–307
- maximum results per data source, Search, 973
- memory surface modeling, 785–786
- menus
- Customize Menu option, 48–50
  - described, 46
  - Insert, 47
  - Tools, 47–48
  - tutorial, customizing, 68–69
  - View, 46
- Merge Result option
- loft features, 220
  - multibody modeling, 745–746
- Merge Tangent Faces option, 219–220
- methods, manufacturing
- multibody modeling, 744–745
  - questions, asking, 149
- Microsoft Shadow Data, 87

- Mid-surface modeling, 776–777
- minimizing size, CommandManager, 45
- Mirror Entities
  - Sketch Mode, 281
  - Sketch toolbar, 121
- mirror parts, in-context design, 494
- mirroring
  - Sketch mode
    - Dynamic Mirror, 281
    - tutorial, 299–300
  - 3D Sketch mode
    - bodies, 296
    - entire parts, 297
    - features, 296
- Mirroring function, 190
- Miter Flange feature, 829–830
- mixing methods, Insert Bends Method, 860
- MMB (middle mouse button) visualization tool, 90
- model techniques, master
  - described, 797–798
  - pull functions
    - Insert Into New Part, 801
    - Insert Part, 798–800
  - push functions, 801–802
  - Save Bodies, 803–804
  - Split feature
    - Create Assembly, 803
    - Save All Bodies, 803
    - Split, 802
  - tutorial
    - Insert Into New Part, 806–807
    - Insert Part, 804–806
    - Save Bodies, 808–809
    - Split, 807–808
- modeling, multibody
  - appropriate uses, 729–730
  - assembly modeling versus, 728–729
  - bridge between solids, 743
  - creating
    - Cut feature, 748
    - disjoint sketches, 745
    - Feature Scope, 746–747
    - Insert Part feature, 751–752
    - Merge Result option, 745–746
    - Split feature, 748–750
  - described, 727–728
  - local operations
    - Flex feature, 737–738
    - Shell feature, 738–739
  - patterning, 739–740
  - simplifying very complex parts, 741–742
  - techniques
    - complex shapes across bodies, 731–733
    - described, 730
  - tool bodies and Boolean operations
    - Indent feature, 733–735
    - Move/Copy Bodies and Combine features, 735–737
  - tutorial
    - merging and local operations, 756–757
    - splitting and patterning bodies, 757–759
  - undetermined manufacturing methods, 744–745
- Modify Sketch
  - Sketch toolbar, 130–131
  - sketches, 188–190
- modifying
  - blocks
    - Add/Remove Entities button, 662
    - Explode button, 663
    - options, accessing, 662
    - Rebuild button, 662
  - Broken-out Section view, 631
  - color, 195
  - design intent
    - Display, Delete Relations, 15
    - Suppressed Sketch Relations, 16
    - View, Sketch Relations, 15
  - Design Tables, 335–336, 341–342
  - Detail view, 623
  - existing formats, 596–597
  - Flyout FeatureManager, 355–356
  - macro after recording, 936
  - mates, 428–429
  - parts in assemblies, 944
  - reordering features, 353–355
  - reordering folders, 355
  - Rollback bar
    - consumed features, 349
    - described, 348
    - enhancement requests, 353
    - multiple parents, features with, 350–351
    - original color, viewing consumed features in, 351–352
    - parent-child relationship, 349–350

- rollback methods, 347–348, 353
- Section view, 627
- Smart Components, 586–587
- tutorial, 196–200, 380–386

Mold Tools functionality, surface modeling, 786–788

MoldflowXpress analysis tool

- analyze and results, 379
- conditions, 378–379
- described, 377
- injection location, 377–378
- material, 378

More Properties PropertyManager options, 679–680

motion

- grouping subassembly by relative, 402–403
- in-context design, 489–490

mouse

- middle button visualization tool, 90
- speed View Rotation, 967

Move Entities Sketch toolbar, 125–126

Move/Copy Bodies and Combine features, tool bodies and Boolean operations, 735–737

moving

- components by dragging, 957
- sketches, 187
- toolbars, 39–40

Moving from AutoCAD, online documentation, 78

multibody modeling

- appropriate uses, 729–730
- assembly modeling versus, 728–729
- bridge between solids, 743
- creating
  - Cut feature, 748
  - disjoint sketches, 745
  - Feature Scope, 746–747
  - Insert Part feature, 751–752
  - Merge Result option, 745–746
  - Split feature, 748–750
- described, 727–728
- local operations
  - Flex feature, 737–738
  - Shell feature, 738–739
- patterning, 739–740
- simplifying very complex parts, 741–742
- techniques
  - complex shapes across bodies, 731–733
  - described, 730

- tool bodies and Boolean operations
  - Indent feature, 733–735
  - Move/Copy Bodies and Combine features, 735–737
- tutorial
  - merging and local operations, 756–757
  - splitting and patterning bodies, 757–759
  - undetermined manufacturing methods, 744–745
- multiple contexts, 485–488
- multiple instances, 490
- multiple leaders, 655
- Multiple Mate mode, 417
- multiple parents, features with, 350–351
- multiple templates, 81–83
- multiple-document windows
  - changing, 63
  - managing, 61–63
- multi-processor or multi-core CPU, 918
- multi-user environment
  - Collaboration, 973
  - Toolbox
    - library, sharing existing, 523–525
    - sharing Toolbox, 523

## N

named views

- cosmetic thread display, 619, 620
- described, 617
- dimension type, 620
- Display Style, 620
- number of views and orientation, 619
- open documents, 617
- option, 618, 619
- scale, 620
- thumbnail preview, 617–618

naming

- configurations, 319–320
- Design Tables, 336–338
- dimensions in equations, 304–305
- file
  - data management, 925
  - English language, 935
  - hybrid naming system, 927–928
  - intelligent numbering systems, 927
  - revision control, 928
  - rules, 926–927

- navigating in space, 3D weldment sketching, 866–867
  - network files, 928–929
  - network license, 910
  - New command, Standard toolbar, 21–22
  - new installation or upgrade, 922
  - New Window command, Standard toolbar, 33
  - next label, 978
  - No Bends tool, 857
  - no preview during open (faster open), 956
  - No Solve Move, Sketch toolbar, 131
  - Non Uniform Rational B Spline (NURBS) surface modeling, 764–765
  - non-commercial Web sites, 1012–1013
  - none end constraint, 215
  - non-structural weldment components, 881–882
  - Normal Cut, Insert Bends Method, 853–854
  - normal view mode, high quality for, 954
  - notch on back
    - Hole Wizard, 163–167
    - part, creating simple
      - described, 158
      - offset, 159–160
      - relative size or direction dimensions, 158–159
      - sketch techniques, 160–162
  - notes
    - border, 989
    - favorites, 656–657
    - hyperlinking text, 657–658
    - layers, 716
    - leader
      - adding, 654
      - anchor, 988
      - described, 653–654
      - jogged, 655–656
      - justification snapping, 989
      - multiple, 655
      - style, 989
    - linking to custom properties, 657
    - symbols and, 658
    - text alignment, 988
    - text boxes and wrapping, 652–653
    - workflow for placing, 651–652
  - number of views and orientation, 619
  - numbers
    - items in assembly process, 403
    - part, 521–522
    - table-based BOM, 692
  - NURBS (Non Uniform Rational B Spline) surface modeling, 764–765
  - nut and washer, applying, 539–543
- ## O
- object colors, 942
  - Obround, auto relief, 821
  - offset
    - distances, 983
    - entities, 122–123
    - groove on back, 159–160
    - Jog feature, 833
  - Offset Surface modeling
    - described, 769–770
    - tutorial, 789–791
  - online documentation
    - Getting Started section, 77
    - Making My First Part and Making My First Drawing tutorials, 78
    - Moving from AutoCAD, 78
    - Online Tutorials, 78
    - Online User's Guide, 78
    - Tip of the Day, 78
    - What's New document, 78
  - online forums, 1011–1012
  - on-line or CD-based training, 914
  - Online Tutorials, 78
  - Online User's Guide, 78
  - on-site training, 914
  - Open Bend Region option, Closed Corner feature, 835–836
  - Open command, Standard toolbar, 22–25
  - open degrees of freedom, parametrics, 13–14
  - open documents, named views, 617
  - open edges of surfaces, show in different color, 951
  - opening
    - auto-update, allowing, 938
    - existing documents
      - described, 85–86
      - looking inside, 86–87
      - Microsoft Shadow Data, 87

- last used document(s) at startup, 932
- no preview during (faster open), 956
- sketches, 112
- 3D Sketch with Sketch toolbar, 113
- Toolbox, 532–533
- operations, multibody modeling
  - Flex feature, 737–738
  - Shell feature, 738–739
- optical properties
  - automatic colors, 102
  - color hierarchy, 100–101
  - Display pane, 102
  - entity colors, 101
- Options icon, Standard toolbar, 31
- Ordinate Dimensions, 133
- ordinates, automatically jog, 983
- orientation and alignment, 637–638
- Origin Indicator, 995
- original color, viewing consumed features in, 351–352
- out-of-date drawing views, printing with crosshatch, 940
- out-of-sync water mark, printing, 938
- Outside, Inside, and Smart options, 984
- outside references
  - assembly equations, 393
  - component names, updating when documents are replaced, 960
  - described, 958
  - don't prompt to save read-only referenced documents (discard changes), 959
  - in-context design
    - inserted parts, 493–494
    - mirror parts, 494
    - split parts, 494
  - load referenced documents, 959
  - multiple contexts for parts when editing in assembly, allow, 959
  - read-only access, open referenced documents with, 959
  - referenced geometry, automatically generate names for, 960
  - references external to the model, do not create, 960
  - search file locations for external references, 959
  - update out-of-date linked design tables, 960
  - warn about saving referenced documents, 959
- Overlap/Underlap ratio setting, 834–835

## P

- pairs
  - advanced types
    - Belt/Chain, 428
    - Cam mate, 424–425
    - described, 423
    - Gear mate, 426
    - Limit mates, 426–427
    - Rack and Pinion mate, 426, 427
    - Symmetric mate, 424
    - Width mate, 425
  - animation speed, 956
  - assembly, 396
  - best practices, 432–433
  - described, 413
  - Dynamic Assembly Motion
    - Degree-of-Freedom analysis, 420–421
    - single degree of freedom, advantages of, 421–423
  - editing, 428–429
  - examining options, 432
  - in-context design, 490, 492–493
  - Mate PropertyManager
    - described, 414
    - Multiple Mate mode, 417
    - Select Other command, 416
    - view and model positioning, 415–416
    - workflow, 415
  - positions with
    - driving directly, 449–450
    - driving indirectly, 450
  - SmartMates
    - Alt-dragging, 417–419
    - drag between windows, 419
    - references, 420
  - subassembly, 400
  - tree display options, 409–410
  - troubleshooting, 430
  - tutorial, 433–437
  - warnings, distinguishing from errors, 430–431
- paper documentation
  - importance of, 78–79
  - Quick Reference Guide, 79
  - Quick Start pamphlet, 79
- Parabola, 127

- Parallelogram, 126
- parametrics
  - constraining sketch motion, 13
  - described, 9
  - endpoint, dragging, 11–12
  - four line sketch, 11
  - fully defined sketch, 14
  - horizontal and parallel relations, adding, 12–13
  - open degrees of freedom, 13–14
  - 2D and 3D sketching, 9–11
- parent-child relationship, Rollback bar, 349–350
- part
  - color and transparency, working, 479–480
  - Design Library, 555–556
  - extrude options
    - Contour Selection, 157
    - described, 152–153
    - Direction 1 and Direction 2, 154–156
    - From panel, 153–154
    - Thin Feature, 157
  - fillets and chamfers, 167–169
  - groove on back
    - described, 158
    - Hole Wizard, 163–167
    - offset, 159–160
    - relative size or direction dimensions, 158–159
    - sketch techniques, 160–162
  - library features, creating from existing, 562–563
  - modeling best practice, 356–357
  - numbers, 521–522
  - organization, 519
  - questions, asking
    - changes, likely, 148
    - importance, 147–148
    - manufacturing method, 149
    - primary or functional features, 148
    - secondary operations, 149
    - symmetry of part, 148
    - versions, 150
  - sketch, creating on new, 945
  - starting point, 150–151
  - symmetry, 151–152
  - template, 102–104
  - Toolbox, 520–521
  - part configurations. *See* configurations; Design Tables
    - activating, 320–321
    - assembly configurations for speed, 444
    - colors, controlling, 328
    - ConfigurationManager
      - deleting, 318–319
      - sorting, 319–320
    - creating
      - advanced options, 323
      - making new, 322
      - properties and options, 322–323
    - custom properties, controlling, 327–328
    - derived, 324
    - dimensions, controlling, 325–326
    - Display States, 440–442
    - file size considerations, 324–325
    - in-context design, 488–489
    - of inserted parts, 330–331
    - installation, 925
    - library features, 331–332
    - sketch planes, controlling, 329–330
    - sketch relations, controlling, 328–329
    - Structural Member feature, 877
    - suppression, controlling, 326–327
    - Toolbox, 317, 520–521
    - unconfigurable items, 332
  - Part/Assembly tangent edge display, 950
  - Partial Ellipse, 127
  - Partial Section view, 625–626
  - Parting Surface modeling, 779
  - parts assembly
    - auto recover info, do not save, 957
    - component patterns, 396
    - creating in FeatureManager, 411
    - depicting process
      - individual steps, 403–404
      - item numbering, 403
    - described, 396
    - Design Library, 556
    - edges, do not display in shaded mode, 958
    - elements
      - identifying, 391–392
      - standard reference geometry items, 393

- equations
  - external references, 393
  - link values and global variables, 393
  - recommendations, 394
  - renaming, 393–394
- features, 396
- folders
  - creating in FeatureManager, 404–405
  - described, 396
  - existing, adding items to, 405–406
  - reordering items in tree, 406
- hide all planes, axes, sketches, curves, annotations, etc., 958
- Hole Series, 397–398
- in-context reference update holders, 397
- LAM, 957
- layout sketch, 394–395
- lightweight components, automatically load, 957
- Mates area, 396
- modeling, multibody modeling versus, 728–729
- move components by dragging, 957
- parts and subassemblies, 396
- patterning considerations, 404
- rebuild on load, 956
- reference geometry, 395
- Smart Fasteners, 397
- subassembly
  - BOM (Bill of Materials), organizing for, 401–402
  - criteria, 398–399
  - dissolving, 400
  - from existing parts, 399–400
  - flexible, 400–401
  - grouping by relative motion, 402–403
  - inserting new, 400
  - legacy data, 401
  - organizing for performance, 400–401
  - purchased components, organizing groups of, 403
  - solving mates, 400
- suspend automatic rebuild, 958
- Toolbox, organizing parts in, 537
- tree display options
  - options, 406–407
  - show component and config names and descriptions, 407–409
  - show feature names and descriptions, 407
  - viewing features, mates, and dependencies, 409–410
- tutorial, 169–174
- parts assembly configurations
  - design tables, 452
  - display performance
    - described, 447
    - lightweight parts, 447–448
    - resolved versus unsuppressed, 448
  - dos and don'ts, 453
  - exploded views
    - Base and Tower, 454–455
    - collapsing, 458
    - Explode Line Sketch, 458–460
    - grippers, 456
    - illustrated, 457
    - initiating, 453–454
    - Twist Arm subassembly, 455–456
  - for performance
    - Advanced Show/Hide Components, 444–446
    - part configurations for speed, 444
    - SolidWorks Utilities Simplify Assembly, 446–447
    - suppressing components and features, 443–444
  - for positions
    - described, 448–449
    - with mates, driving directly, 449–450
    - with mates, driving indirectly, 450
    - with sketches, 450–451
  - for product variations, 451–452
  - tutorial, 460–464
- Paste command, 30
- pattern references, component patterns
  - described, 466–467
  - Instances to Skip option, 469
  - Pattern Seed Only option, 467–468
- Pattern Seed Only option, component patterns, 467–468
- patterning
  - assembly, 404
  - mirroring versus, 280
  - multibody modeling, 739–740, 757–759
  - Sketch Driven, 292–293
  - Sketch mode
    - bodies, 283–284
    - Circular Pattern, 288–289

- patterning (*continued*)
  - Circular Sketch Pattern, 280
  - Curve Driven Pattern, 289–292
  - faces, 284–285
  - Fill Pattern, 295
  - fillets, 285
  - Geometry Pattern, 282–283
  - Linear Pattern, 286–288
  - Linear Sketch Pattern, 279–280
  - selecting one by one, 278–279
  - Sketch Driven Pattern, 292–293
  - Table Driven Pattern, 294
  - test, 277–278
  - symmetry and, 877
- patterns, component
  - assembly, 396
  - derived, 469–470
  - described, 465
  - local pattern references
    - described, 466–467
    - Instances to Skip option, 469
    - Pattern Seed Only option, 467–468
  - RMB menu
    - add to new folder, 471
    - component pattern display options, 471
    - component patterns and configurations, 471
    - Dissolve Pattern, 471
    - illustrated, 470
    - tutorial, 472–473
- PDM application
  - administration, Toolbox, 527–528
  - data management, 929
- PDMWorks Workgroup Vault Debug Guide, 1010
- performance
  - assembly configurations
    - Advanced Show/Hide Components, 444–446
    - part configurations for speed, 444
    - SolidWorks Utilities Simplify Assembly, 446–447
    - suppressing components and features, 443–444
  - feedback
    - in disc installation, 924
    - enabling, 936
  - subassembly, organizing for, 400–401
- System Options
  - curvature generation, 954
  - dynamic view mode, high quality for, 954
  - level of detail, 955
  - lightweight, automatically load components, 955
  - lightweight components, resolving, 956
  - mate animation speed, 956
  - no preview during open (faster open), 956
  - normal view mode, high quality for, 954
  - out-of-date lightweight components, checking, 955
  - rebuild assembly on load, 956
  - self-intersection check for some sheet metal features, ignoring, 954
  - shaded preview, 956
  - Software OpenGL, 956
  - sub-assemblies, always resolve, 955
  - update mass properties when saving document, 956
  - verification on rebuild, 953
- Perimeter Circle, Sketch toolbar, 126
- perspective, pictures, 192–193
- phased approach implementation schemes, 916–917
- pictures
  - bringing into sketches, 191
  - perspective, 192–193
  - sharp edges, 193
  - size, changing, 191–192
  - three views, 192
- Pierce relation guide curve, 222–224
- pilot project implementation schemes, 916
- placement sketch, Hole Wizard, 505
- planar path segments, weldments, 870
- Planar Surface modeling, 772–773
- plane
  - configurations, 329–330
  - display, 1005
  - hiding, 958
  - Split process, multibody modeling, 750
  - 3D sketching, weldments, 868–870
- Point Deform feature, 264–265
- Point, Sketch toolbar, 121
- Polygon, Sketch toolbar, 126
- Populate All Smart Fasteners, 535–536
- positions, assembly configurations
  - described, 448–449
  - with mates
    - driving directly, 449–450
    - driving indirectly, 450
  - with sketches, 450–451

- practice, best
  - in-context design
    - circular references, 490–491
    - communicating design intent, 493
    - with configurations, 488–489
    - and file management, 490
    - libraries, 491–492
    - and mates, 490
    - mating or in-context, 492–493
    - with motion, 489–490
    - multiple contexts, 485–488
    - with multiple instances, 490
    - skeletons and layouts, 491
  - mates, 432–433
- precision
  - dimensions, 987
  - tolerances, 682
- predefined views
  - aligning, 609
  - described, 606–608, 635
  - limitations, 610
  - populating drawing, 609
  - sheet scale, 610
- preparations, installation, 921
- previous versions, going back to
  - consumed features, 349
  - described, 348
  - enhancement requests, 353
  - multiple parents, features with, 350–351
  - original color, viewing consumed features in, 351–352
  - parent-child relationship, 349–350
- primary or functional features, 148
- Primary Value Override, dimensions, 678
- Print command, Standard toolbar, 29
- Print Preview command, Standard toolbar, 29
- Print3D command, Standard toolbar, 30
- printed documentation
  - importance of, 78–79
  - Quick Reference Guide, 79
  - Quick Start pamphlet, 79
- problems
  - link variables and, 599–600
  - mates, distinguishing from warnings, 430–431
  - show every rebuild, 933–934
- Process Bends feature, Insert Bends Method, 856–857
- processor, computer
  - AMD versus Intel, 918–919
  - multi-processor or multi-core, 918
  - 32x versus 64x systems, 919
  - Vista compatibility, 919
- product variations, 451–452
- profile, Structural Member feature, 872–873
- program installation
  - Administrative Director, 924
  - configuration and standardization, 925
  - from discs
    - attention, paying, 922
    - customizing components, 922
    - described, 922
    - installation folders, 922–923
    - level to install, 922
    - new installation or upgrade, 922
    - other software, 924
    - performance feedback, 924
    - serial number and license server, 923
    - SolidWorks Search, 923–924
  - guides, 1010
  - Installation Manager, 921
  - preparations, 921
  - Search, 971
- programs, small (macros)
  - combining with hotkeys, 71
  - described, 60, 895–896
  - edit after recording, 936
  - form, building, 903–905
  - help, finding, 906
  - rectangle-sketching macro
    - custom toolbar button, connecting to, 902
    - hotkey, connecting to, 901–902
    - irregularities, removing, 900
    - recording, 896–899
    - replaying, 899–900
    - storing, 901
  - user form, creating with, 902–903
- projected
  - curve features
    - described, 226–227
    - Sketch Onto Face, 227
    - Sketch Onto Sketch, 227–228
  - views, 620–621

prompt to close sketch, 945, 946  
 Properties button, Standard toolbar, 31  
 property link display, 599  
 PropertyManager  
   auto-show, 936  
   color, 942–943  
   Deform feature, 264  
   dimensions  
     break lines, 679  
     described, 676–677  
     Dimension Text, 677–678  
     Display options, 678–679  
     More Properties, 679–680  
     Primary Value Override, 678  
     witness/leader display, 679  
   filleting, 232  
   interface described, 52–53  
   skin, 943  
   Wrap feature, 257  
 pull functions, master model techniques  
   Insert Into New Part, 801  
   Insert Part, 798–800  
 purchased components, organizing groups of, 403  
 push functions, master model techniques, 801–802

## Q

quality settings, 641  
 quantity, balloons, 991  
 questions, creating simple part  
   changes, likely, 148  
   importance, 147–148  
   manufacturing method, 149  
   primary or functional features, 148  
   secondary operations, 149  
   symmetry of part, 148  
   versions, 150  
 Quick Reference Guide, 79  
 Quick Snaps flyout, Sketch toolbar, 121  
 Quick Start pamphlet, 79  
 Quick Tips feature, 75–77

## R

Rack and Pinion mate, 426, 427  
 radial leader snap angle, 986  
 Radiate Surface modeling, 770–771

radius, filleting variable  
   described, 240  
   reasons to use, 243  
   straight versus smooth transitions, 243  
   values, applying, 241–242  
 RAID (Redundant Array of Independent Disks) configuration, 920  
 read-only files  
   administration, Toolbox, 525  
   check command, 28  
   collaboration, checking if modified by other users, 973  
 RealView graphics display, 372  
 rebuild assembly  
   on load, 956  
   Standard toolbar command, 31  
   suspend automatic, 958  
 recording macro, 896–899  
 recovery  
   backup copies, number per document, 968–969  
   save auto-recover info every, 968  
   save notification, 969  
 rectangle  
   Auto relief, 821  
   macro sketching  
     custom toolbar button, connecting to, 902  
     hotkey, connecting to, 901–902  
     irregularities, removing, 900  
     recording, 896–899  
     replaying, 899–900  
     storing, 901  
     Sketch toolbar, 116  
 Redo command, 31  
 Redundant Array of Independent Disks (RAID) configuration, 920  
 reference dimensions  
   annotation views, 673  
   autodimensioning, 675–676  
   described, 672–673  
   driven dimension color, 673–674  
   ordinate and baseline, 674–675  
   reference sketch entities, 676  
 reference geometry names in drawings, show, 938  
 Reference Geometry toolbar, 34–35  
 reference triad, 952  
 references, component patterns  
   described, 466–467  
   Instances to Skip option, 469  
   Pattern Seed Only option, 467–468

- references, external
  - assembly equations, 393
  - component names, updating when documents are replaced, 960
  - described, 958
  - don't prompt to save read-only referenced documents (discard changes), 959
  - in-context design
    - inserted parts, 493–494
    - mirror parts, 494
    - split parts, 494
  - load referenced documents, 959
  - multiple contexts for parts when editing in assembly, allow, 959
  - read-only access, open referenced documents with, 959
  - referenced geometry, automatically generate names for, 960
  - references external to the model, do not create, 960
  - search file locations for external references, 959
  - update out-of-date linked design tables, 960
  - warn about saving referenced documents, 959
- references, SmartMates, 420
- reflective analysis tool
  - curvature display, 372
  - Deviation Analysis, 372–373
  - lights with specularly turned up, 372
  - RealView graphics display, 372
  - Tangent Edges as Phantom setting, 373
  - Zebra Stripes, 370–371
- regularly used elements
  - dimensions, 682–683
  - Hole Wizard
    - administering, 511
    - creating, 511
    - described, 510
    - quirks, 511–512
    - storing custom holes, 511
  - notes, 656–657
  - templates, 610–611
- relations, sketch
  - configurations, controlling, 328–329
  - described, 183
  - Display/Delete Relations, 184–186
  - Sketch page, 947–949
  - SketchXpert, 186–187
  - tutorial, 140–142
- relative size or direction dimensions, groove on back, 158–159
- relative view, 636
- Release Notes, 1010
- Reload command, Standard toolbar, 27–28
- removing toolbars, 40–41
- renaming
  - assembly equations, 393–394
  - bodies, 755
- reordering
  - features, 353–355
  - folders, 355
  - items in tree, 406
- Replace Face
  - feature modeling, 777–778
  - surface modeling, 783
- replaying rectangle-sketching macro, 899–900
- reseller training
  - described, 912
  - quality of trainers, 912–913
  - SolidWorks training materials, 913
  - training as evaluation, 912
- Reset All To Defaults, 944
- resolved assembly configurations, 448
- restraints, COSMOSXpress analysis tool, 374–375
- results
  - COSMOSXpress analysis tool, 376
  - per page, Search, 972
- revision
  - control, 928
  - custom property used as, 940
- Revision Table
  - alpha/numerical control, 997
  - described, 701–703, 996
  - independent, 997
  - linked, 997
  - multiple sheet style, 997
  - note, “See Sheet 1”, 997
  - symbol shapes, 997
  - tables, 710–711
- revolve features
  - contour selection, 211
  - end conditions, 211
  - rules, 210–211
  - simple, 5
- Revolved Surface modeling, 767

- Rib feature
    - Insert Bends Method, 854–855
    - multibody modeling, 747
  - RMB menu component patterns
    - add to new folder, 471
    - configurations, 471
    - display options, 471
    - Dissolve Pattern, 471
    - illustrated, 470
  - Rollback bar
    - consumed features, 349
    - described, 348
    - enhancement requests, 353
    - multiple parents, features with, 350–351
    - original color, viewing consumed features in, 351–352
    - parent-child relationship, 349–350
  - rollback methods, editing, 347–348
  - rolled conical parts, Insert Bends Method, 858–859
  - Rotate Entities, 129
  - Rotate function, 190
  - Rotate sketches, 187–188
  - rotating view
    - arrow keys, 967
    - mouse speed, 967
    - view animation speed, 967
  - Round Corners option, filleting, 238
  - routing Design Library, 556
  - rows or columns, table-based BOM, 694–695
  - ruled surface modeling, 766, 779–780
  - rules, revolve features, 210–211
- S**
- Save All Bodies Split feature, 803
  - Save All command, Standard toolbar, 27
  - Save As Scheme, 944
  - save auto-recover info, 968
  - Save Bodies master model techniques
    - described, 803–804
    - tutorial, 808–809
  - Save command, Standard toolbar, 25–27
  - save notification, Backup/Recover, 969
  - saving
    - custom settings, 60–61
    - document setup, 80–81
    - formats, 605
    - library features, 560
    - templates, 612
  - scale
    - named views, 620
    - new drawing views, automatically, 937
    - sheet in predefined views, 610
    - sketches, 188
  - Scale About function, 189
  - Scale Entities, Sketch toolbar, 129
  - scheme, Hole Table, 996
  - schemes, implementation
    - Cold Turkey switchover, 917
    - described, 915–916
    - phased approach, 916–917
    - pilot project, 916
    - planning, 916
  - Screen Capture command, Standard toolbar, 32
  - screws, huge
    - Toolbox, 517–518
    - tutorial, 546
  - Scribe, Wrap feature, 258
  - Search function
    - index now, 973
    - installing, 971
    - maximum results per data source, 973
    - results per page, 972
    - SolidWorks Online Users Guide, 1008
    - while typing option, 971–972
  - second sheet, adding, 605
  - secondary operations, 149
  - Section view
    - Aligned Section, 626–627
    - default, 623–625
    - editing, 627
    - Partial Section, 625–626
  - Section View Size arrows, 992
  - Select Color Scheme command, Standard toolbar, 32
  - Select command
    - Sketch toolbar, 126
    - Standard toolbar, 32
  - Select Other command, Mate PropertyManager, 416
  - selecting
    - anti-alias edges/sketches, 951
    - assembly transparency for in context edit, 951
    - described, 949
    - dynamic highlight from graphics view, 951
    - edge display in shaded with edges mode, 951
    - flat to screen, display dimensions, 952
    - four view viewport, projection type for, 952–953
    - hidden edges display, 950

- highlight all edges of features selected in graphics view, 951
- HLR and shaded modes, 950
- open edges of surfaces, show in different color, 951
- Part/Assembly tangent edge display, 950
- reference triad, 952
- shaded planes, display, 952
- transparency, enable selection through, 952
- wireframe and HLV modes, 950
- selecting patterning one by one, 278–279
- Selection Filter command, Standard toolbar, 32
- Selection Filter toolbar, 35
- SelectionManager, 219
- self-intersection, sheet metal features, 954
- serial number and license server, 923
- setback filleting, 251–254
- Settings tab, Toolbox, 530
- shaded face, highlighting, 934
- shaded mode edge display, 958
- shaded planes, display, 952
- shaded preview, 956
- Shaded With Edges mode, 944
- sharing document templates, 85
- sharp edges, pictures, 193
- sharps, displaying virtual, 946
- sheet format, layers, 715
- sheet metal
  - forming tools in Design Library, 556
  - Insert Bends method
    - Base Flange method versus, 813, 852
    - Flat Pattern feature, 853, 857
    - Flatten Bends feature, 855–856
    - imported geometry, 858
    - mixing methods, 860
    - No Bends tool, 857
    - Normal Cut, 853–854
    - Process Bends feature, 856–857
    - reasons for using, 851
    - Rip feature, 854–855
    - rolled conical parts, 858–859
    - Sheet Metal feature, 855
    - tutorial, 860–863
  - self-intersection check for some features, ignoring, 954
- sheet metal, Base Flange method
  - Auto relief
    - Rectangular and Obround, 821
    - Tear, 821
  - Base Flange and Tab tool, 815–816
- Bend Allowance
  - Bend Deduction and, 820–821
  - Bend Table, 819–820
  - K-Factor, 820
  - options, 819
- Closed Corner feature
  - Faces to Extend, 834
  - Gap setting, 834
  - Open Bend Region option, 835–836
  - Overlap/Underlap ratio setting, 834–835
- Corner Trim and Break Corner features, 836–837
- described, 814
- Edge Flange feature
  - Angle panel, 826–827
  - Curved Edges, 828–829
  - default radius, 826
  - described, 824–825
  - Edit Flange Profile, 825–826
  - Flange length, 827
  - gap distance, 826
  - Trim Side Bends flange position, 827–828
- Flat Pattern feature, 822–824
- Flatten command, 843–844
- Forming tool
  - creating, 838–839
  - described, 838
  - library, 839
  - placing, 840
  - special techniques, 840–841
- Hem feature, 831
- Insert Bends method versus, 813, 852
- Jog feature
  - described, 831–832
  - Fix Projected Length, 833
  - Fixed Face, 832
  - Jog Angle selection, 833
  - Jog Position selection, 833
  - offset, 833
- Lofted Bends feature, 842–843
- Miter Flange feature, 829–830
- Sheet Metal feature
  - Bend Radius, 818
  - described, 816–817
  - Fixed Face or Edge, 818
  - Gauge Table, 817–818
  - thickness, 818–819
- Sketched Bend feature, 833–834
- tutorial, 844–849
- Unfold and Fold features, 843

- Sheet Metal toolbar, 35
- sheet scale, predefined views, 610
- Shell feature, 738–739
- shortcut menu items, adding, 973
- Show Edge toolbar button, 720
- Show Preview option, 220
- Show Thick Regions option, 366–367
- Show Thin Regions option, 365
- showing
  - assembly process
    - individual steps, 403–404
    - item numbering, 403
  - component and config names and descriptions, 407–409
  - contents while dragging, 937
  - datums per 1982, detailing, 976
  - Delete Relations, 15
  - Design Tables, 339–340
  - dimensions options, 678–679
  - Items Only In The View In Which They Are Created, 994
  - modes
    - Component Line Font, 639–640
    - layers, 640
  - performance assembly configurations
    - described, 447
    - lightweight parts, 447–448
    - resolved versus unsuppressed, 448
  - plane when shaded, 946
  - 2nd Outside Arrow (Radial), 984
  - table-based BOM, 693–694
  - text size, maintaining, 994
  - visualization tools, 102
- side
  - filleting
    - Constant Width option, 250
    - continuous curvature, 245–246
    - described, 243–244
    - double hold line, 248–249
    - with Help point, 246–247
    - single hold line, 247–248
  - patterning, 284–285
  - simple drag sketches, 190
  - simplifying very complex parts, 741–742
  - single degree of freedom, advantages of, 421–423
  - single hold line, face filleting, 247–248
  - 64x versus 32x systems, 919
  - size
    - arrows, 991
    - balloons, 990
  - of hole
    - Custom Sizing panel, 506
    - design tree, 505
    - hole sketch, 505
    - placement sketch, 505
  - pictures, changing, 191–192
  - relative, groove on back, 158–159
  - Smart Components
    - creating, 580–585
    - using, 575–577
  - text, always display at same, 994
- skeleton
  - and layouts, in-context design, 491
  - or wide tree approach, 358–359
- sketch
  - assembly layout, 394–395
  - blocks, 138–139, 143–145
  - colors
    - Color Display mode, 195
    - Edit color, 195
    - Line color, 195
  - described, 111–112
  - Dimensions/Relations toolbar
    - Add Relations, 134
    - Auto Dimension, 134
    - Automatic Relations, 134–135
    - Baseline Dimensions, 132
    - Chamfer Dimension, 134
    - Horizontal and Vertical Ordinate Dimensions, 133
    - Horizontal Dimension, 132
    - Horizontal Ordinate Dimensions, 133
    - Ordinate Dimensions, 133
    - Smart Dimension, 132
    - Vertical Dimension, 132
  - editing and copying tutorial, 196–200
  - entities
    - Copy, 188
    - Copy and paste, 190
    - derived sketch, 190–191
    - Modify Sketch, 188–190
    - Move, 187
    - Rotate, 187–188
    - Scale, 188
    - simple drag, 190
  - extruded features
    - Sketch Contour, 208–209
    - 3D sketch, 209–210
  - groove on back, 160–162

- hiding, 958
- identifying entities, 113
- inferencing, 135–137
- Line Thickness and Line Style tools, 195–196
- opening, 112
- page
  - arc centerpoints, displaying, 944
  - creating on new part, 945
  - display plane when shaded, 946
  - Drag/Move, overriding dimensions, 946
  - driven by default, 947
  - driven state, prompt to set, 947
  - entity points, displaying, 944
  - fully defined sketches, 944
  - ghost image on drag, 947
  - line length measured between visual sharps in 3D, 947
  - prompt to close sketch, 945, 946
  - Relations/Snaps, 947–949
  - spline control polygon, showing by default, 947
  - Spline Tangency and Curvature handles, enabling, 947
  - virtual sharps, displaying, 946
- pictures
  - bringing into, 191
  - perspective, 192–193
  - sharp edges, 193
  - size, changing, 191–192
  - three views, 192
  - tutorial, 200–203
- planes, controlling, 329–330
- positions with, 450–451
- relations
  - described, 183
  - Display/Delete Relations, 184–186
  - SketchXpert, 186–187
  - tutorial, 140–142
- settings, 137–138
- Sketch toolbar
  - Add Relation, 121
  - Circle, 117–118
  - Circular Sketch Pattern, 129
  - Construction Geometry, 125
  - Convert Entities, 121
  - Copy Entities, 129
  - Display/Delete Relations, 121
  - Dynamic Mirror, 129
  - Ellipse, 126
  - Extend, 128
  - Face Curves, 128, 129
  - Grid/Snap, 126
  - Intersection Curve, 128
  - Line, 116
  - Linear Sketch Pattern, 129, 130
  - Make Path, 129
  - Mirror Entities, 121
  - Modify Sketch, 130–131
  - Move Entities, 125–126
  - No Solve Move, 131
  - Offset Entities, 122–123
  - Parabola, 127
  - Parallelogram, 126
  - Partial Ellipse, 127
  - Perimeter Circle, 126
  - Point, 121
  - Polygon, 126
  - Quick Snaps flyout, 121
  - Rectangle, 116
  - Rotate Entities, 129
  - Scale Entities, 129
  - Select, 126
  - Sketch Fillet tool, 119
  - Sketch, opening and closing with, 113
  - Sketch Picture, 131
  - Sketch Text, 127–128
  - Smart Dimension, 113–115
  - Spline, 120–121
  - Spline on Surface, 127
  - Split Entities, 128
  - 3D Sketch, opening and closing with, 113
  - 3D Sketch Plane, 121
  - Trim Entities, 123–125
- Split process, multibody modeling, 749–750
- text
  - curve, following, 193–195
  - TrueType fonts, 193
- Sketch Driven Pattern, 292–293
- Sketch Fillet tool, 119
- Sketch mode
  - mirroring
    - Dynamic Mirror, 281
    - Mirror Entities, 281
    - patterning versus, 280
    - Symmetry sketch relation, 282
    - tutorial, 299–300

- Sketch mode (*continued*)
  - patterning
    - bodies, 283–284
    - Circular Pattern, 288–289
    - Circular Sketch Pattern, 280
    - Curve Driven Pattern, 289–292
    - faces, 284–285
    - Fill Pattern, 295
    - fillets, 285
    - Geometry Pattern, 282–283
    - Linear Pattern, 286–288
    - Linear Sketch Pattern, 279–280
    - selecting one by one, 278–279
    - Sketch Driven Pattern, 292–293
    - Table Driven Pattern, 294
    - test, 277–278
  - 3D mirroring
    - bodies, 296
    - entire parts, 297
    - features, 296
- Sketch Onto Face projected curve feature, 227
- Sketch Onto Sketch projected curve feature, 227–228
- Sketch Picture, 131
- sketch relations
  - configurations, controlling, 328–329
  - 3D weldments sketching, 867–868
- Sketch Text, 127–128
- Sketch toolbar
  - Add Relation, 121
  - Circle, 117–118
  - Circular Sketch Pattern, 129
  - Construction Geometry, 125
  - Convert Entities, 121
  - Copy Entities, 129
  - described, 35
  - Display/Delete Relations, 121
  - Dynamic Mirror, 129
  - Ellipse, 126
  - Extend, 128
  - Face Curves, 128, 129
  - Grid/Snap, 126
  - Intersection Curve, 128
  - Line, 116
  - Linear Sketch Pattern, 129, 130
  - Make Path, 129
  - Mirror Entities, 121
  - Modify Sketch, 130–131
  - Move Entities, 125–126
  - No Solve Move, 131
  - Offset Entities, 122–123
  - Parabola, 127
  - Parallelogram, 126
  - Partial Ellipse, 127
  - Perimeter Circle, 126
  - Point, 121
  - Polygon, 126
  - Quick Snaps flyout, 121
  - Rectangle, 116
  - Rotate Entities, 129
  - Scale Entities, 129
  - Select, 126
  - Sketch Fillet tool, 119
  - Sketch, opening and closing with, 113
  - Sketch Picture, 131
  - Sketch Text, 127–128
  - Smart Dimension, 113–115
  - Spline, 120–121
  - Spline on Surface, 127
  - Split Entities, 128
  - 3D Sketch, opening and closing with, 113
  - 3D Sketch Plane, 121
  - Trim Entities, 123–125
- Sketched Bend feature, 833–834
- SketchXpert, 186–187
- slicing elements
  - constant radius
    - entities, selecting, 233
    - tangent propagation, 233–235
  - face
    - Constant Width option, 250
    - continuous curvature, 245–246
    - described, 243–244
    - double hold line, 248–249
    - with Help point, 246–247
    - single hold line, 247–248
  - full round, 250–251
  - Keep Edge/Keep Surface toggle, 238–239
  - Keep Feature option, 239–240
  - large number, handling
    - entities, selecting, 236
    - folders, 237
    - preview, 236–237

- multiple radius, 237–238
- options listed, 231–232
- part, creating simple, 167–169
- patterning, 285
- PropertyManager, 232
- Round Corners option, 238
- setback, 251–254
- variable radius, creating
  - described, 240
  - reasons to use, 243
  - straight versus smooth transitions, 243
  - values, applying, 241–242
- Slot Dimension Scheme, 981
- slot on back
  - Hole Wizard, 163–167
  - part, creating simple
    - described, 158
    - offset, 159–160
    - relative size or direction dimensions, 158–159
    - sketch techniques, 160–162
- Smart Components
  - Design Library, 556
  - editing, 586–587
  - elements, 571
  - file management, 585–586
  - library feature, 572
  - limitations, 571
  - making
    - auto-sizing, creating, 580–585
    - starting with simple, 577–580
  - tutorial, working with, 587–590
  - using
    - auto-sizing, 575–577
    - starting, 572–575
- Smart Dimension, 113–115, 132
- Smart Fasteners
  - assembly, 397
  - Toolbox
    - with Hole Series, 535
    - limitations, 536
    - Populate All, 535–536
  - tutorial, 545–546
- SmartMates
  - Alt-dragging, 417–419
  - drag between windows, 419
  - references, 420
  - smooth dynamic motion of drawing views, 937
- Snap Text to Grid, 981
- Snap/Grid
  - automatic scaling, 999
  - dash, 999
  - Display Grid, 999
  - Sketch toolbar, 126
- snaps, Sketch page, 947–949
- software installation
  - Administrative Director, 924
  - configuration and standardization, 925
  - from discs
    - attention, paying, 922
    - customizing components, 922
    - described, 922
    - installation folders, 922–923
    - level to install, 922
    - new installation or upgrade, 922
    - other software, 924
    - performance feedback, 924
    - serial number and license server, 923
    - SolidWorks Search, 923–924
  - guides, 1010
  - Installation Manager, 921
  - preparations, 921
  - Search, 971
- Software OpenGL, 956
- solid feature, extruding, 206, 207
- SolidWorks Office toolbar, 36
- SolidWorks Online Users Guide
  - described, 1007
  - fundamentals, 1008
  - glossary, 1008
  - index, 1008
  - Search function, 1008
- SolidWorks Search, 923–924
- SolidWorks training materials, 913
- SolidWorks Utilities Simplify Assembly, 446–447
- SolidWorks Web site
  - Customer Portal, 1009–1010
  - graphics cards, 1009
  - Tech Tips, 1011
- sorting configurations, 319–320
- Spaceball and other view-manipulation devices, 59

- speed
  - animation
    - mate, 956
    - View Rotation, 967
  - assembly configurations
    - Advanced Show/Hide Components, 444–446
    - part configurations for speed, 444
    - SolidWorks Utilities Simplify Assembly, 446–447
    - suppressing components and features, 443–444
  - feedback
    - in disc installation, 924
    - enabling, 936
  - subassembly, organizing for, 400–401
  - System Options
    - curvature generation, 954
    - dynamic view mode, high quality for, 954
    - level of detail, 955
    - lightweight, automatically load components, 955
    - lightweight components, resolving, 956
    - mate animation speed, 956
    - no preview during open (faster open), 956
    - normal view mode, high quality for, 954
    - out-of-date lightweight components, checking, 955
    - rebuild assembly on load, 956
    - self-intersection check for some sheet metal features, ignoring, 954
    - shaded preview, 956
    - Software OpenGL, 956
    - sub-assemblies, always resolve, 955
    - update mass properties when saving document, 956
    - verification on rebuild, 953
- spin box increments
  - described, 965–966
  - length, 966
- spiral Helix, 226
- spline
  - control polygon, showing by default, 947
  - loft features, similarities to, 213–214
  - Sketch toolbar, 120–121
- Spline on Surface, Sketch toolbar, 127
- Spline Tangency and Curvature handles, enabling, 947
- Split Entities, Sketch toolbar, 128
- Split feature
  - in-context design, 494
  - master model techniques
    - Create Assembly, 803
    - Save All Bodies, 803
    - Split, 802
  - multibody modeling
    - creating, 748–750
    - tutorial, 757–759, 807–808
- split line curve features, 230–231
- standalone license, 910
- Standard 3 View, 621
- standard reference geometry items, assembly, 393
- Standard toolbar
  - Check Read-Only Files command, 28
  - Close command, 27
  - Color button, 32
  - Copy command, 30
  - Cut command, 30
  - Delete command, 30–31
  - described, 21
  - Full Screen command, 32
  - Help command, 33
  - illustrated, 36–37
  - Make Assembly from Part/Assembly command, 28–29
  - Make Drawing from Part/Assembly command, 28
  - Materials icon, 32
  - New command, 21–22
  - New Window command, 33
  - Open command, 22–25
  - Options icon, 31
  - Paste command, 30
  - Print command, 29
  - Print Preview command, 29
  - Print3D command, 30
  - Properties button, 31
  - Rebuild command, 31
  - Redo command, 31
  - Reload command, 27–28
  - Save All command, 27
  - Save command, 25–27
  - Screen Capture command, 32
  - Select Color Scheme command, 32
  - Select command, 32
  - Selection Filter command, 32
  - Textures icon, 32
  - Tile Horizontally command, 33
  - Tile Vertically command, 33
  - Undo command, 31
  - Web Toolbar button, 32
- Standard Views toolbar, 37, 98–99
- standardization, installation, 925
- starting point, creating simple part, 150–151
- status bar, 54

- steps, assembly process, 403–404
- storing rectangle-sketching macro, 901
- straight versus smooth transitions, filleting, 243
- Structural Member feature
  - arc segments, 876–877
  - configurations, 877
  - corner treatments, 875
  - custom profiles, 874–875
  - described, 871–872
  - disjoint sketch segments, 873
  - patterning and symmetry, 877
  - profile, locating and orienting, 872–873
- styles
  - balloons, 990
  - tutorial, 200–203
- subassembly
  - always resolve, 955
  - assembly
    - criteria, 398–399
    - described, 396
    - dissolving, 400
    - from existing parts, 399–400
    - inserting new, 400
    - solving mates, 400
  - BOM, organizing for, 401–402
  - flexible, 400–401
  - grouping by relative motion, 402–403
  - legacy data, 401
  - organizing for performance, 400–401
  - purchased components, organizing groups of, 403
- sub-weldments, 882
- Suppressed Sketch Relations, 16
- suppression, configurations, 326–327
- surface body, 750
- surface, cut with modeling
  - described, 782–783
  - tutorial, 788–789
- surface finish symbols, display symbols per 2002, 978
- surface modeling
  - developable surface, 765
  - feature-based, 5–6
  - Gaussian curvature, 766
  - goal, 761–762
  - hybrid modeling, 764
  - Knit, 762–763
  - loft features, need for, 214–215
  - NURBS, 764–765
  - ruled surface, 766
- techniques
  - breadth of, 780–781
  - Cut With Surface, 782–783
  - Fill Surface, 784–785
  - memory surface, 785–786
  - Mold Tools functionality, 786–788
  - Replace Face, 783
  - Up to Surface/Up to Body, 781–782
- tools
  - Boundary Surface, 767–769
  - Extend Surface, 773
  - Extruded Surface, 766–767
  - Fill Surface, 774–776
  - Knit Surface, 771–772
  - Lofted Surface, 767
  - Mid-surface, 776–777
  - Offset Surface, 769–770
  - Parting Surface, 779
  - Planar Surface, 772–773
  - Radiate Surface, 770–771
  - Replace Face feature, 777–778
  - Revolved Surface, 767
  - Ruled Surface, 779–780
  - Swept Surface, 767
  - Trim Surface, 774
  - Untrim Surface, 778
- Trim, 763
- tutorial
  - Cut With Surface, 788–789
  - Fill Surface blend, 792–795
  - Offset Surface, 789–791
- Untrim, 763
- Surface Push Deform option, 265–266
- Surfaces toolbar, 37
- Sweep feature
  - criteria for using, 221
  - with guide curves
    - described, 221–222
    - Pierce relation, 222–224
  - simple sweep, 221
- Swept Surface modeling, 767
- SWITCH statement, 311
- symbols, blocks, 663
- Symmetric mate, 424
- symmetry of part, 148, 151–152
- Symmetry sketch relation, 282

- system maintenance, 929–930
- System Options
  - Assemblies
    - auto recover info, do not save, 957
    - edges, do not display in shaded mode, 958
    - hide all planes, axes, sketches, curves, annotations, etc., 958
    - LAM (Large Assembly Mode), 957
    - lightweight components, automatically load, 957
    - move components by dragging, 957
    - suspend automatic rebuild, 958
  - Backup/Recover
    - backup copies, number per document, 968–969
    - save auto-recover info every, 968
    - save notification, 969
  - Collaboration
    - multi-user environment, 973
    - page illustrated, 974
    - read-only files, checking if modified by other users, 973
    - shortcut menu items, adding, 973
  - Colors page
    - background appearance, 943
    - backgrounds, match graphics area and FeatureManager, 944
    - current color scheme, 942
    - editing parts in assemblies, 944
    - object colors, 942
    - PropertyManager color, 942–943
    - PropertyManager skin, 943
    - Reset All To Defaults, 944
    - Save As Scheme, 944
    - Shaded With Edges mode, 944
  - Default Templates
    - always use and prompt user to select, 960
    - paths, 960
  - described, 931
  - Display/Selection
    - anti-alias edges/sketches, 951
    - assembly transparency for in context edit, 951
    - described, 949
    - dynamic highlight from graphics view, 951
    - edge display in shaded with edges mode, 951
    - flat to screen, display dimensions, 952
    - four view viewport, projection type for, 952–953
    - hidden edges display, 950
    - highlight all edges of features selected in graphics view, 951
    - HLR and shaded modes, 950
    - open edges of surfaces, show in different color, 951
    - Part/Assembly tangent edge display, 950
    - reference triad, 952
    - shaded planes, display, 952
    - transparency, enable selection through, 952
    - wireframe and HLV modes, 950
- Drawings page
  - arc centerpoints, display sketch, 939
  - Area Hatch/Fill page, 941
  - auto-update, allowing when opening drawings, 938
  - components, automatically hide on view creation, 938
  - detail circles, display new as circles, 937
  - detail view scaling, 940
  - dimension inserted from model, automatically place, 937
  - Display Style page, 940–941
  - duplicate model dimensions, eliminating on insert, 938
  - entity points, display, 939
  - hidden entities, selecting, 937
  - keyboard movement increment, 940
  - out-of-date drawing views, printing with crosshatch, 940
  - out-of-sync water mark, printing, 938
  - reference geometry names in drawings, show, 938
  - revision, custom property used as, 940
  - scale new drawing views, automatically, 937
  - show contents while dragging drawing view, 937
  - smooth dynamic motion of drawing views, 937
  - tessellated data, save for drawings with shaded and draft quality views, 939
  - view palette, show, 939
- External References
  - component names, updating when documents are replaced, 960
  - described, 958
  - don't prompt to save read-only referenced documents (discard changes), 959
  - load referenced documents, 959
  - multiple contexts for parts when editing in assembly, allow, 959
  - read-only access, open referenced documents with, 959
  - referenced geometry, automatically generate names for, 960
  - references external to the model, do not create, 960

- search file locations for external references, 959
  - update out-of-date linked design tables, 960
  - warn about saving referenced documents, 959
  - FeatureManager
    - arrow key navigation, 964
    - described, 962–963
    - display warnings, 965
    - Dynamic Highlight, 964
    - name feature on creation, 963
    - scroll selected item into view, 963
    - transparent flyout FeatureManager in parts/assemblies, 964–965
  - File Explorer, 969–971
  - File Locations, 961–962
  - General Settings Options
    - Confirmation Corner, 935–936
    - custom property used as component description, 936
    - edit macro after recording, 936
    - English language feature and filenames, 935
    - English language menus, 935
    - FeatureXpert, 936
    - input dimension value, 932
    - maximize document on open, 934
    - open last used document(s) at startup, 932
    - performance feedback, enabling, 936
    - PropertyManager, auto-show, 936
    - shaded face highlighting, 934
    - show dimension names, 933
    - show errors every rebuild, 933–934
    - single command per pick, 933
    - system separator for dimensions, 935
  - Hole Wizard/Toolbox, 969
  - Performance
    - curvature generation, 954
    - dynamic view mode, high quality for, 954
    - level of detail, 955
    - lightweight, automatically load components, 955
    - lightweight components, resolving, 956
    - mate animation speed, 956
    - no preview during open (faster open), 956
    - normal view mode, high quality for, 954
    - out-of-date lightweight components, checking, 955
    - rebuild assembly on load, 956
    - self-intersection check for some sheet metal features, ignoring, 954
    - shaded preview, 956
    - Software OpenGL, 956
    - sub-assemblies, always resolve, 955
    - update mass properties when saving document, 956
    - verification on rebuild, 953
  - Search
    - index now, 973
    - installing, 971
    - maximum results per data source, 973
    - results per page, 972
    - while typing option, 971–972
  - Sketch page
    - arc centerpoints, displaying, 944
    - creating on new part, 945
    - display plane when shaded, 946
    - Drag/Move, overriding dimensions, 946
    - driven by default, 947
    - driven state, prompt to set, 947
    - entity points, displaying, 944
    - fully defined sketches, 944
    - ghost image on drag, 947
    - line length measured between visual sharps in 3D, 947
    - prompt to close sketch, 945, 946
    - Relations/Snaps, 947–949
    - spline control polygon, showing by default, 947
    - Spline Tangency and Curvature handles, enabling, 947
    - virtual sharps, displaying, 946
  - spin box increments
    - described, 965–966
    - length, 966
  - View Rotation
    - arrow keys, 967
    - mouse speed, 967
    - view animation speed, 967
  - system requirements, 1015
  - system separator for dimensions, 935
- ## T
- Tab tool, Base Flange method, 815–816
  - Table Driven Pattern, Sketch mode, 294
  - tables
    - anchor, table-based BOM, 690
    - BOM
      - appearance, controlling, 693–694
      - BOM Contents, 692–693
      - BOM type, 690–691
      - Configurations panel, 691
      - format, 693
      - Hole Tables, 708–710

- tables, BOM (*continued*)
  - item numbers, 692
  - Keep Missing Items, 691
  - rows or columns, adding, 694–695
  - table anchor, 690
  - table format, 693
  - templates, 688–689
  - tutorials, 704–708
  - Zero Quantity Display, 692
- Document Properties, 996–997
- Revision Tables, 710–711
- Tag Angle/Offset From Profile Center, 995
- tangent edge display options, 640
- Tangent Edges as Phantom setting, reflective analysis tool, 373
- Tangent to Face end constraint, 215–216
- Tapered Helix, 225–226
- Task pane, 53–54
- Tear, Auto relief, 821
- Tech Tips, SolidWorks Web site, 1011
- templates
  - changing, 594
  - custom properties, 611–612
  - documents
    - default, 84–85
    - described, 81
    - locating, 83–84
    - multiple, 81–83
    - sharing, 85
  - favorites and blocks, 610–611
  - formats versus, 593–594
  - need for, 594
  - part tutorial, 102–104
  - predefined views
    - aligning, 609
    - described, 606–608
    - limitations, 610
    - populating drawing, 609
    - sheet scale, 610
  - saving, 612
  - table-based BOM, 688–689
- tessellated data, save for drawings with shaded and draft
  - quality views, 939
- test patterning, 277–278
- text
  - alignment, 983, 988
  - always display at same size, 994
  - balloons, 990–991
  - boxes and wrapping, 652–653
  - color, working, 479
  - Dimension Text, 677–678
  - existing, managing, 598
  - scale in annotations, 994
  - sketches
    - curve, following, 193–195
    - TrueType fonts, 193
  - tutorial, 200–203
- Textures icon, Standard toolbar, 32
- Thickness Analysis tool
  - Show Thick Regions option, 366–367
  - Show Thin Regions option, 365
- thickness, Sheet Metal feature, 818–819
- Thin Feature
  - extrude options, 157
  - extruded features, 206–208
- 32x versus 64x systems, 919
- thread display, cosmetic
  - high quality, 979
  - named views, 619, 620
- three views, pictures, 192
- 3D sketches
  - Drawing View mode, 636–637
  - extruded features, 209–210
  - Hole Wizard, 163
  - line length between visual sharps, 947
  - mirroring
    - bodies, 296
    - entire parts, 297
    - features, 296
  - opening and closing with Sketch toolbar, 113
  - Sketch Plane, Sketch toolbar, 121
  - sketching parametrics, 9–11
  - weldments
    - described, 865–866
    - dimensions, 870
    - navigating in space, 866–867
    - planar path segments, 870
    - planes in space, 868–870
    - sketch relations, 867–868
- thumbnail preview, named views, 617–618
- Tile Horizontally command, Standard toolbar, 33
- Tile Vertically command, Standard toolbar, 33
- Tip of the Day online documentation, 78
- tolerances
  - available types, 681
  - document type, 987–988
  - geometric, 682
  - precision, 682

- tool bodies and Boolean operations
  - Indent feature, 733–735
  - Move/Copy Bodies and Combine features, 735–737
- toolbar and interface, Line Format, 717–718
- toolbars
  - Assembly, 33
  - Dimensions/Relations
    - Add Relations, 134
    - Auto Dimension, 134
    - Automatic Relations, 134–135
    - Baseline Dimensions, 132
    - Chamfer Dimension, 134
    - Horizontal and Vertical Ordinate Dimensions, 133
    - Horizontal Dimension, 132
    - Horizontal Ordinate Dimensions, 133
    - Ordinate Dimensions, 133
    - Smart Dimension, 132
    - Vertical Dimension, 132
  - Drawing, 34
  - Extend Sketch, 128
  - Face Curves Sketch, 128, 129
  - Features, 34
  - managing
    - adding or removing, 40–41
    - flyout toolbars, 41–42
    - Full Screen mode, 42–43
    - moving, 39–40
    - setting up, 39
  - Reference Geometry, 34–35
  - Selection Filter, 35
  - Sheet Metal, 35
  - Sketch
    - Add Relation, 121
    - Circle, 117–118
    - Circular Sketch Pattern, 129
    - Construction Geometry, 125
    - Convert Entities, 121
    - Copy Entities, 129
    - described, 35
    - Display/Delete Relations, 121
    - Dynamic Mirror, 129
    - Ellipse, 126
    - Extend, 128
    - Face Curves, 128, 129
    - Grid/Snap, 126
    - Intersection Curve, 128
    - Line, 116
    - Linear Sketch Pattern, 129, 130
    - Make Path, 129
    - Mirror Entities, 121
    - Modify Sketch, 130–131
    - Move Entities, 125–126
    - No Solve Move, 131
    - Offset Entities, 122–123
    - Parabola, 127
    - Parallelogram, 126
    - Partial Ellipse, 127
    - Perimeter Circle, 126
    - Point, 121
    - Polygon, 126
    - Quick Snaps flyout, 121
    - Rectangle, 116
    - Rotate Entities, 129
    - Scale Entities, 129
    - Select, 126
    - Sketch Fillet tool, 119
    - Sketch, opening and closing with, 113
    - Sketch Picture, 131
    - Sketch Text, 127–128
    - Smart Dimension, 113–115
    - Spline, 120–121
    - Spline on Surface, 127
    - Split Entities, 128
    - 3D Sketch, opening and closing with, 113
    - 3D Sketch Plane, 121
    - Trim Entities, 123–125
- Standard
  - Check Read-Only Files command, 28
  - Close command, 27
  - Color button, 32
  - Copy command, 30
  - Cut command, 30
  - Delete command, 30–31
  - described, 21
  - Full Screen command, 32
  - Help command, 33
  - illustrated, 36–37
  - Make Assembly from Part/Assembly command, 28–29
  - Make Drawing from Part/Assembly command, 28
  - Materials icon, 32
  - New command, 21–22
  - New Window command, 33
  - Open command, 22–25
  - Options icon, 31
  - Paste command, 30
  - Print command, 29
  - Print Preview command, 29
  - Print3D command, 30

- toolbars, Standard (*continued*)
  - Properties button, 31
  - Rebuild command, 31
  - Redo command, 31
  - Reload command, 27–28
  - Save All command, 27
  - Save command, 25–27
  - Screen Capture command, 32
  - Select Color Scheme command, 32
  - Select command, 32
  - Selection Filter command, 32
  - Textures icon, 32
  - Tile Horizontally command, 33
  - Tile Vertically command, 33
  - Undo command, 31
  - Web Toolbar button, 32
- Weldments, 38
- Toolbox
  - administration
    - custom parts, adding, 526
    - folders, adding, 527
    - libraries, merging, 527
    - PDM product, 527–528
    - read-only setting, 525
    - upgrading SolidWorks, 525–526
  - assembly, organizing parts in, 537
  - Browser, turning on, 532–533
  - configurations, 317, 520–521
  - Configurator application
    - described, 516–517
    - huge screws, 517–518
    - problems, 518–519
  - Configure option settings
    - Content tab, 528–529
    - Properties tab, 530, 531
    - Settings tab, 530
    - Smart Fasteners tab, 530–531
  - database, 516
  - described, 515
  - holes, populating
    - drag-and-drop, 533–534
    - Feature Driven component patterns, 535
    - multiple at once, 534
  - material or custom part numbers, 521–522
  - multi-user environment
    - library, sharing existing, 523–525
    - sharing Toolbox, 523
  - parts, 520–521
  - parts organization, 519
  - recommendations
    - complete setup, 538
    - simplest setup, 537–538
  - Smart Fasteners
    - with Hole Series, 535
    - limitations, 536
    - Populate All, 535–536
  - turning on, 532–533
  - tutorial
    - Assembly FeatureManager interface, 547
    - hole positions, 543–544
    - Huge Screws, 546
    - opening, 539
    - Smart Fasteners, 545–546
    - washer and nut, applying, 539–543
- Tools menu, 47–48
- tools, surface modeling
  - Boundary Surface, 767–769
  - Extend Surface, 773
  - Extruded Surface, 766–767
  - Fill Surface, 774–776
  - Knit Surface, 771–772
  - Lofted Surface, 767
  - Mid-surface, 776–777
  - Offset Surface, 769–770
  - Parting Surface, 779
  - Planar Surface, 772–773
  - Radiate Surface, 770–771
  - Replace Face feature, 777–778
  - Revolved Surface, 767
  - Ruled Surface, 779–780
  - Swept Surface, 767
  - Trim Surface, 774
  - Untrim Surface, 778
- Tools toolbar, 37
- tooltips, 38–39
- train the trainer method, 914
- training
  - consultant
    - described, 913
    - on-site training, 914
    - specialty topics, 914
  - described, 911
  - local colleges, 915
  - on-line or CD-based training, 914

- reseller
  - described, 912
  - quality of trainers, 912–913
  - SolidWorks training materials, 913
  - training as evaluation, 912
- train the trainer method, 914
- user groups, 915
- Translate function, 189
- transparency
  - enable selection through, 952
  - part, 479–480
- tree display options
  - assembly
    - options, 406–407
    - show component and config names and descriptions, 407–409
    - show feature names and descriptions, 407
    - viewing features, mates, and dependencies, 409–410
  - reordering items, 406
- Trim Entities, Sketch toolbar, 123–125
- Trim Side Bends flange position, 827–828
- Trim surface modeling, 763, 774
- Trim/Extend weldments, 877–878
- troubleshooting
  - CD, back-of-the-book, 1016
  - errors
    - link variables and, 599–600
    - mates, distinguishing from warnings, 430–431
    - show every rebuild, 933–934
  - mates, 430
- TrueType fonts, 193
- tutorials
  - annotations, 666–668
  - assembly
    - configurations, 460–464
    - creating simple, 169–174
  - Base Flange method, 844–849
  - BOMs, 704–708
  - bracket casting, 267–271
  - circular pattern, 297–298
  - colors, changing, 69–70
  - CommandManager, customizing, 66–68
  - component patterns, 472–473
  - copying existing settings, 64–65
  - creating in FeatureManager, 411
  - default settings, setting all interface items to, 65
  - described, 63
  - Design Tables, 342–346
  - dimensions, 683–685
  - drawing, creating simple, 174–180
  - drawing display tools, 720–723
  - editing techniques, 380–386
  - equations, 314
  - evaluation techniques, 386–387
  - goals, 64
  - hotkeys, adding, 70–71
  - in-context design, 494–500
  - Insert Bends Method, 860–863
  - library features, 564–570
  - macros, combining with hotkeys, 71
  - master model techniques
    - Insert Into New Part, 806–807
    - Insert Part, 804–806
    - Save Bodies, 808–809
    - Split, 807–808
  - mates, 433–437
  - menus, customizing, 68–69
  - mirroring, 299–300
  - multibody modeling
    - merging and local operations, 756–757
    - splitting and patterning bodies, 757–759
  - part template, 102–104
  - pictures, text, colors, and styles, 200–203
  - sketches
    - blocks and belts, 143–145
    - editing and copying, 196–200
    - relations, 140–142
  - Smart Components, 587–590
  - surface modeling
    - Cut With Surface, 788–789
    - Fill Surface blend, 792–795
    - Offset Surface, 789–791
- Toolbox
  - Assembly FeatureManager interface, 547
  - hole positions, 543–544
  - Huge Screws, 546
  - opening, 539
  - Smart Fasteners, 545–546
  - washer and nut, applying, 539–543
- views, 642–648
- visualization techniques, 105–109
- weldments, 886–893
- wire-formed part, 272–274

- twinning
    - Sketch mode
      - Dynamic Mirror, 281
      - tutorial, 299–300
    - 3D Sketch mode
      - bodies, 296
      - entire parts, 297
      - features, 296
  - Twist Arm subassembly exploded view, 455–456
  - 2D
    - Command Line Emulator, 55
    - Hole Wizard, 163, 506–510
    - sketching parametrics, 9–11
  - types, advanced
    - Belt/Chain, 428
    - Cam mate, 424–425
    - described, 423
    - Gear mate, 426
    - Limit mates, 426–427
    - Rack and Pinion mate, 426, 427
    - Symmetric mate, 424
    - Width mate, 425
  - typing, searching while, 971–972
- U**
- unconfigurable items, 332
  - Undercut Detection tool, 367–368
  - Undo command, Standard toolbar, 31
  - Undo (Rollback bar)
    - consumed features, 349
    - described, 348
    - enhancement requests, 353
    - multiple parents, features with, 350–351
    - original color, viewing consumed features in, 351–352
    - parent-child relationship, 349–350
  - Unfold and Fold features, Base Flange method, 843
  - Units option
    - decimal places or denominator, 1000
    - described, 999–1000
    - fractions, 1000
  - unseen elements
    - all planes, axes, sketches, curves, annotations, etc., 958
    - bodies, managing, 754–755
    - edges display, 720, 950
    - entities, selecting, 937
    - Hide Dangling Dimensions And Annotations, 994
    - unsuppressed assembly configurations, 448
    - Untrim surface modeling, 763, 778
    - Up to Surface/Up to Body surface modeling, 781–782
    - update, allowing when opening drawings, 938
    - upgrading SolidWorks, 525–526
    - Use Assembly's Setting For All Components, 994
    - user form, creating with macro, 902–903
    - user groups, 915
    - users, multiple
      - Collaboration, 973
      - Toolbox
        - library, sharing existing, 523–525
        - sharing Toolbox, 523
- V**
- Variable Pitch Helix, 226
  - variable radius, filleting
    - described, 240
    - reasons to use, 243
    - straight versus smooth transitions, 243
    - values, applying, 241–242
  - verification on rebuild, 368–369, 953
  - versions, 150
  - Vertical Dimension, 132
  - View Labels
    - described, 998
    - Display Label Above View, 998
  - View menu, 46
  - View Orientation dialog box, 97–98
  - view palette, show, 939
  - View Rotation
    - arrow keys, 967
    - mouse speed, 967
    - view animation speed, 967
  - View, Sketch Relations, 15
  - View toolbar, 37–38, 90–96
  - views
    - advantages of using, 615
    - Alternate Position view, 634–635
    - Auxiliary view, 633–634
    - Break view, 632–633
    - Broken-out Section view
      - closed loop, drawing, 629–630
      - depth, selecting, 630–631
      - described, 628–629
      - editing, 631

- Crop view, 627–628
  - custom view, 635
  - Detail view
    - detail circle drawn in-line, 623
    - editing, 623
    - pre-drawn detail circle, 621–623
  - display modes
    - Component Line Font, 639–640
    - layers, 640
  - Display States, 638–639
  - empty view, 635
  - Mate PropertyManager, 415–416
  - named
    - cosmetic thread display, 619, 620
    - described, 617
    - dimension type, 620
    - Display Style, 620
    - number of views and orientation, 619
    - open documents, 617
    - option, 618, 619
    - scale, 620
    - thumbnail preview, 617–618
  - orientation and alignment, 637–638
  - predefined view, 635
  - projected, 620–621
  - quality settings, 641
  - relative view, 636
  - Section view
    - Aligned Section, 626–627
    - default, 623–625
    - editing, 627
    - Partial Section, 625–626
  - sheets versus, 642
  - Standard 3 View, 621
  - tangent edge display options, 640
  - 3D Drawing View mode, 636–637
  - tutorial, 642–648
  - View palette, creating with, 616–617
  - visualization tools
    - Annotation views, 100
    - arrow keys, 90
    - described, 89–90
    - MMB (middle mouse button), 90
    - Standard Views toolbar, 98–99
    - View Orientation dialog box, 97–98
    - View toolbar, 90–96
  - Virtual Sharps, 992
  - virtual sharps, displaying, 946
  - Vista CPU compatibility, 919
  - visualization tools
    - changing view
      - Annotation views, 100
      - arrow keys, 90
      - described, 89–90
      - MMB (middle mouse button), 90
      - Standard Views toolbar, 98–99
      - View Orientation dialog box, 97–98
      - View toolbar, 90–96
    - color and optical properties
      - automatic colors, 102
      - color hierarchy, 100–101
      - Display pane, 102
      - entity colors, 101
    - in-context design, 478
    - tutorials, 105–109
- ## W
- warnings, mates, 430–431
  - washer and nut, applying, 539–543
  - Web-based documentation
    - Getting Started section, 77
    - Making My First Part and Making My First Drawing tutorials, 78
    - Moving from AutoCAD, 78
    - Online Tutorials, 78
    - Online User's Guide, 78
    - Tip of the Day, 78
    - What's New document, 78
  - Welcome to SolidWorks screen, 74
  - Weldment button, 871
  - Weldment Cut List tables, 703
  - weldments
    - Cut Lists
      - custom properties, 883
      - described, 882–883
      - Make Weld Bead, 884
    - drawings, 884–885
    - End Cap, 879
    - Fillet Bead, 880–881
    - Gusset, 879–880
    - non-structural components, 881–882

weldments (*continued*)

- Structural Member feature
    - arc segments, 876–877
    - configurations, 877
    - corner treatments, 875
    - custom profiles, 874–875
    - described, 871–872
    - disjoint sketch segments, 873
    - patterning and symmetry, 877
    - profile, locating and orienting, 872–873
  - sub-weldments, 882
  - 3D sketching
    - described, 865–866
    - dimensions, 870
    - navigating in space, 866–867
    - planar path segments, 870
    - planes in space, 868–870
    - sketch relations, 867–868
  - tools, 870–871
  - Trim/Extend, 877–878
  - tutorial, 886–893
  - Weldment button, 871
- Weldments toolbar, 38
- What's New document, 78, 1010

wide tree approach, 358–359

Width mate, 425

wire-formed part tutorial, 272–274

wireframe display, 950

witness/leader display, 679

## workflow

- customization, 43–44

- Mate PropertyManager, 415

- notes, placing, 651–652

## Wrap feature

- Deboss option, 258–260

- described, 257

- Emboss option, 258

- PropertyManager interface, 257

- Scribe option, 258

writing equations out on paper, 305–307

**Z**

Zebra Stripes reflective analysis tool, 370–371

## zeroes

- leading, 976

- quantity display, BOM, 692

- trailing, 976