
Index

- Air filter/silencer, 130
 - maintenance, 130
 - pre-heating air, 28
- Air supply, restrictions, 37
- Air system, 127
 - engine cooling, 77, 84, 94, 108, 112, 257, 239
 - air cooling, 77
 - maintenance, 239
 - normally aspirated, 14, 122
 - turbo-charged, see Turbo-charging, 13, 37
 - winterization, 257
- Alternator, 143, 144, 146, 147, 150, 156, 157, 164, 165, 166, 179, 180, 181, 236, 237
 - belt drive, 142
 - short life, 181
 - tension adjustment, 179
 - tension measurement, 180
 - engine-driven 12-volt DC, 139
 - brushes, 143
 - brushes, replacing, 144
 - output, 165
 - output, higher, 139, 142
 - second unit, 138
 - size required, 141
 - starting load, 142
 - voltage regulation, 143
 - warning light, 138, 143
- Anodes, 102–104, 105, 218
 - cooling system, 80, 104
 - changing, 105
 - checking, 105
 - electrical contact with carrier, 105
 - freshwater-cooled engines, 104
 - heat exchanger, 95, 105
 - location, 104
 - raw-water-cooled engines, 103
 - engine, 104, 105
 - when laying up out of the water, 260
 - propeller, 260, 7
- Antifouling, 260
- Antifreeze, 109, 110, 112, 113, 235, 239, 258
 - changing, 112
 - protection, 109, 110
 - types, 109
- Archimedes, 204
- Batteries, 141–144, 146, 150, 157, 159, 160–162,
 - absorbed glass mat (AGM), 160
 - ageing, 162
 - Checking, 163
 - charge, measuring state of, 161
 - ammeter and voltmeter, 161
 - amp hour meter, 162
 - hydrometer, 161
 - charging, 8, 42, 140–143, 159, 164, 167, 179
 - from mains charger, 159, 167
 - deep cycle, 159, 160, 162
 - gel, 160, 162

- Batteries (*continued*)
 general purpose, 157
 lead acid, 157, 158, 162, 164
 engine start, 157–159
 service, 158, 163
 topping up, 164
 maintenance-free, 153
 nickel-cadmium (Ni-Cd), 160
 self-discharge, 160, 162, 167
 sulphation, 162, 163, 166
- Battery, 134, 139, 137, 167
 chargers, 167
 fuse, 137
 switch, 134, 139
- Boeshield T.9, 260
- Brunel, Isambard Kingdom, 204
- Brunton Propellers Autoprop, 216, 221
- Calorifiers, 113
- Cam-belts, rubber, 31
- Camshaft, 30, 31, 248
 overhead, valves operated by, 30
- CAV, 57
- Charge regulators, 162, 166
 'smart', 143, 166, 167
 fitting, 146
- Cold start relay, 136
- Combustion ('swirl') chamber, 25
- Compression ignition, 9
- Consumables, 274
- Cooling system, 77–80, 82, 86, 92, 94, 95, 97, 99,
 102, 104, 105, 109–112
 air cooling, 77
 cooling, 77, 78, 80, 82, 86, 92, 94, 95, 97, 99,
 102, 104, 105, 109–112
 anodes, *see* anodes: cooling system, 104
 antifreeze, *see* antifreeze, 109, 110, 112, 113,
 235, 239
 anti-syphon valve, *see* syphon break, 97
 coolant, 110, 239
 draining, 112
 freshwater systems, 114
 raw water systems, 113
 dry riser, 109, 110
 freshwater circulating pump, 91
 heat exchangers, *see* heat exchangers, 92
 maintenance, 239
 refilling, 112
 bleed points, 113
 freshwater systems, 114
 raw water systems, 113
 seacock, 'Blake' type (Kingston Valve), 241
 seawater pump, *see* seawater (raw water) pump, 82
 syphon break, *see* syphon break, 96
 thermostat, *see* thermostats, 99
 water cooling, 77, 79
 direct (raw water), 77
 exhaust, 78
 indirect (fresh water), 78
 keel, 78, 82
 troubleshooting, 235
 water flow failure, 82
 water injection bend, 79, 108
 water-logged engine, 110
 starting, 111
 water strainers, *see* water strainers, 105
 winterization, 115, 257
- Corrosion, electrolytic, 6, 7, 137, 239
- Cylinder bore glazing, 39, 40
 bore polishing, 41
 prevention, 42
 compression, 40
 grooves (honing), 40
 oil, 40
 pressure, insufficient, 41
 prevention, 42
 re-honing, 43
- DB Marine, 177
- Decompressors, 31, 32
- Dehumidifier for winterization, 260
- Detroit Diesels, 19, 21
- Diesel, Rudolf, 1
- Diesel engine, 1, 2, 9, 10, 13, 19, 25, 30, 32, 36, 40,
 42, 49, 50, 70, 122, 123, 127, 133, 150
 modern, 2
 type required, 10
 two-stroke diesel engine, 19
 small marine, development of, 2, 26
- Drive, 4–8, 105
 sail, *see* sail drive, 6
 shaft, *see* shaft drive, 4

- stern, *see* stern drive, 5
- 'V', 5
- 'Z', 5, 174–176
- Drive belts, 179, 275
 - short life, 181
 - tension adjustment, 179
 - tension measurement, 180
- Dynamo, 134, 138, 156, 179, 237
- Dynastart, 156, 157, 237
- Electrics, engine, 137
 - batteries; starter motor, 136, 151, 229
 - battery, 137, 139, 159
 - chargers, 159
 - fuse, 137
 - switch, 139
 - block diagrams, 133
 - start circuit, 133
 - cold start, 136, 231
 - relay, 136
 - system, 231
 - dynamo, 139
 - dynastart, 157
 - engine 'fuse', 141, 231
 - 'ignition' key, 139
 - 'ignition' switch, 137
 - isolation solenoid, 'negative', 137
 - maintenance, 248
 - starter relay, 136
 - starter solenoid, 136
 - stop control, 163, 230
 - stop solenoid, 136
 - tachometer, 138
 - troubleshooting, *see* troubleshooting: engine
 - won't start – electrics, 134, 137
 - warning 'buzzer', 139
 - warning lights, 138, 225, 229
 - winterization, 257
- Electronic engine management, 197, 200
 - control system, 187
 - function, 198
 - instruments, digital, 199
 - troubleshooting, 200
 - Volvo Penta IPS engines, 199
- Engine and prop shaft alignment, 261–263
 - recommissioning: engine alignment, 261
- Engine fine filter, 63
 - bowl type, 64
 - 'spin off' type, 63, 65
- Engine 'fuse', 225
- Engine management, electronic, *see* Electronic engine management, 4, 136, 197, 198, 200
- Engine mounts, maintenance, 254, 255
 - sail drives, 255
 - shaft drive, 255
- Engine mounts, recommissioning, 264
- Engine operation, correct, 49
- Engine power, 43
 - fuel consumption, curves, specific, 44
 - manufacturer's figures, meaning, 45
 - motor cruisers, 46
 - performance curves, 48
 - propeller law power curves, 44
 - sailing yachts, 47
 - torque curves, 44
- Engine servicing, *see* Maintenance: engine servicing, 239
- Engine won't start, *see* Troubleshooting: engine fails to start, 137
- Exhaust, 96, 197, 248, 258
 - emissions, control of, 197
 - injection bend, 96, 248, 258
 - pipe hose, 258
- Exhaust smoke, *see* Smoke in the exhaust, 35
- Exhaust system, 39, 82, 96, 108, 110, 127
 - blockages, 110
 - dry riser, 109, 110
 - no water from, 82
 - sailing yachts, 110
 - water injection bend, 108
- Exhaust valves, 10, 20, 29
 - adjusting clearance, 30
- Fault prevention, 223
- Feeler gauge, 252, 264, 274
- Fire detection, 267
 - warning device, 271
- Fire extinguishers, engine compartment, 267
 - automatic operation, 276
 - electrical system, shutting off, 270
 - systems, 261, 268–271

- Fire extinguishers (*continued*)
 - types, 268
 - dry powder, 268
 - fine solid particulate, 269
 - halocarbon gas systems, 269
- Fire in engine compartments, causes, 267
- Ford 1.5/1.8-derived engines, 31
- Ford Escort engine, 31
- Four stroke cycle, 10
 - compression stroke, 10
 - exhaust stroke, 11
 - ignition, 10, 13
 - induction stroke, 10
 - multi-cylinder engines, 13
 - power stroke, 11, 13
- Freshwater circulating pump, 91, 92
- Fuel, biological contamination, 72–74
 - filter, primary: draining water, 55–56
 - biocides, 73
 - enzyme fuel additives, 73–74
 - magnetic fuel conditioners, 73
 - water removers, 73
- Fuel consumption, specific (SFC), 48, 49
- Fuel cut-off, 70–72
- Fuel filter, primary, 68–70
 - CAV, 57
 - draining water, 55–57
 - contamination, 72–74
 - Lucas, 144–146
 - position and purpose, 159
 - servicing, 158
 - transparent bowl, 55–56, 73
- Fuel gauges, 55
- Fuel injectors, 57, 62, 65–68
 - common rail injection, 25, 26
 - direct injection, 24, 25
 - indirect injection, 25
 - pre-heating engine, 29
- Fuel injection pump, 33–35, 38, 65, 66
 - bleed point, 68–70
 - combined with fuel injector, 25, 26
 - fuel rack, 22
 - stopping the engine, 70–72
 - governor, 21, 33–35
 - location, 35
 - plunger (piston), 22, 69
 - servicing, 56, 57
 - timing, incorrect, 38, 65
- Fuel injectors, 66
 - combined with fuel injection pump, 26
 - servicing, 56, 65
 - worn, 38
- Fuel lift pump, 57–62
 - attached to injection pump, 57
 - diaphragm, changing, 57
 - filter, cleaning, 57–58
 - later types, 58
 - location, 58
 - priming lever, 62
 - removing, 65, 66
 - separate pumps, 66
 - valves, 61
- Fuel system, 66–68
 - air removal (bleeding, priming, venting), 68–70
 - troubleshooting, 225
 - winterization, 74–75
- Fuel tank, 51–54
 - baffles, 53
 - cleaning, 54
 - construction, 52
 - drain cock, 52
 - draining, 54
 - filter/strainer, 54
 - isolation valve (fuel cock), 54–55
 - sight gauge, 55
 - sludge/dirt trap, 51
 - winterization, 257–260
- Gear selection, see Throttle and gear selection, 183
 - gearbox, 169
 - astern drive, 170
 - clutches, 170
 - drive, loss of, 176–177
 - forward drive, 170
 - gearwheels, 170
 - maintenance, 175–176
 - neutral, 174, 184, 186
 - oil, 175
 - oil change, 126, 175
 - speed reduction, 169
 - troubleshooting, 176

- types, 170
 - bevel gears, 174
- epicyclic, 173–174
 - layshaft, 172
 - two-shaft, 170–171
 - Volvo Penta MS2, 177
- Glow (pre-heater) plugs, 27
- Great Britain*, SS, 204

- Heat exchangers, 78
 - anodes, 96, 103
 - blockage, 107
 - multiple seawater-cooled, 86
 - problems, 86–89
 - tube stack, 92–94
- Heating for winterization, 260
- Hitachi, 146
- Hull types, engines for, 3–4
- Hydrometer, 160–163

- Ignition, compression, 9–10
- 'Ignition' key, 71, 139, 197
- 'Ignition' switch, 54, 137
- Inlet valves, 10, 29, 61, 251
 - adjusting clearance, 248–253
- Instruction books, 49–50
- Isolation solenoid, 'negative', 137

- Lombardini, 26
- Lubrication system, 117–126
 - lubricating, 117
 - crankcase breather, 120
 - gearbox, *see* oil, gearbox, 126
 - low oil pressure alarm, 236–242
 - maintenance, 239
 - oil filter, 119
 - oil pump, 117–119
 - pressure relief valve, 119, 236
 - sump (oil pan), 117–118
 - strainer, 118
 - system, 118
- Lucas, 57, 144

- Maintenance, 239–256
 - anodes, 239
 - antifreeze, 239
 - engine and prop shaft alignment, 256
 - recommissioning: engine alignment, 261
 - engine mounts, 261–264
 - air system, 247–248
 - cooling system, 257–258
 - electrical system, 248
 - engine servicing, 239–256
 - fuel system, 244–247
 - lubrication/oil changing, 242–244
 - sail drive, 234
 - shaft drive, 233
 - valve clearance, adjusting, 248–252
- Moody boats, 54

- Newton's laws of motion, 204

- Oil, engine lubricating, 121–126
 - lubrication system, 117
 - changing, 123–126
 - frequency, 121
 - cooling, 122
 - corrosion, inhibiting, 122
 - cylinder bore glazing, 39
 - functions, 121–122
 - lubrication requirements, 121
 - specification, 122–123
 - type required, 123
- Oil, 118–120, 126, 244,
 - filter, 119–120
 - gearbox, 169
 - changing, 126, 244
 - pressure pump, 118, 119
 - pressure relief valve, 119
- Optima batteries, 159
- Outdrive, *see* Stern drive, 5–6

- Perkins engines, 28
 - bleed points, 70–71
- Petter engines, 1, 27
 - Anodes, 103
 - mini 6 and mini twin, 27, 103
- Piston rings, 10, 40, 42
- Plugs, pre-heater (glow), 27
- Propeller Handbook*, 221
- Propeller shaft, *see* Shaft drive, 4

- Propeller(s), 4, 209–227
- anodes, 218
 - blade lift and drag, 204
 - calculations, 211–212
 - choice of, 212, 218–220
 - for displacement motor boats, 212
 - for planing motor boats, 214
 - for sailing yachts, 218, 220, 225–226, 227
 - clearance, 213
 - diameter, 209, 213
 - efficiency, 205, 211–212
 - fixed pitch, 210
 - function, 210
 - gear ratio, 218
 - how they work, 204
 - mounting, 4
 - pitch, 207–221
 - power curve, 212
 - rotation, direction of, 214
 - sailing drag, 214–216, 219
 - sized for max speed, power & rpm, 212
 - slip, 204, 207, 211
 - when laying up out of the water, 266
 - thrust, 204–210, 213–221
 - aeration, 208
 - blade area, 206, 208–209
 - blade area ratio, 209, 214
 - blade twist, 209, 211, 217
 - cavitation, 207–210, 214–216
 - diameter, 203, 206, 207, 209, 213–214
 - pitch, 203, 205, 210, 212, 215, 216, 218
 - reverse, 214, 216, 220
 - types, 209, 217–219
 - autoprop, 216, 217, 219, 221
 - feathering, 213–216, 218–220
 - fixed blade, 209, 214, 217, 221, 223, 225–227
 - folding, 209–210, 213–214, 218–220
 - for planing motor boats, 214
 - self-pitching, 216, 217, 219
 - variable pitch, 216, 217
 - water flow past, 215, 219–220
- Push-rod-operated valves, 30
- Recommissioning, 261–265
- engine alignment, *see also* engine and prop shaft alignment, 261–265
 - adjusting, 264–265
 - checking, 262–265
 - horizontal, 261–262
- Rocker box cover, 250–253
- Sabb engines, 27, 28, 91
- Sail drive, 6–8, 105, 126, 138, 143, 174–176, 218
- engine mount maintenance, 253–264
 - external water temperature, 8
 - oil change, 7, 126, 244
 - rubber diaphragm, 7
 - troubleshooting, 234
- Volvo Penta, 7, 105, 109–110, 175, 218, 224, 230, 244, 250
- Yanmar, 7, 138, 143, 244
- Screw, *see* Propellers, 203–205
- Seacock, ‘Blake’ type (Kingston Valve), 241
- Seawater (raw water) pump, 82–91
- belt-driven, 91
 - failure causes, 86–89
 - impeller, 85–90
 - changing, 84
 - location, 85–86
 - principle, 83
 - Sabb engines, 91
 - servicing, 89–91
 - Volvo Penta MD2000 series engines, 90
- Shaft drive 4–5, *see also* Engine and prop shaft
- alignment, 256
 - couplings, 233–234, 256, 262–265
 - engine mount maintenance, 253–255
 - thrust angle/line, 5, 6
 - thrust bearings, 5
 - troubleshooting, 233–234
- Smoke in the exhaust, 35–39
- black, 35–37
 - acceleration, 36
 - other, 37
 - overload, 37
 - blue, 37–39
 - white, 39
- Soltron, 73–74
- Spares, 274–275
- Speed control, 32–35
- accelerating the engine, 34

- governor, 33–35, 40–41
 - electronic, 35
 - hydraulic, 35
 - location, 35
 - weights, 33–34
- slowing the engine, 34–35
- speed control lever, *see* 'throttle', 33
- too much load, 35
- Starter motor, 136, 150–156
 - Bendix drive, 150–151
 - brushes, replacing, 154–156
 - checking engagement mechanism, 153–154
 - checking operation, 154
 - maintenance, 152–153
 - pre-engaged, 150, 151–152
- Starter relay, 136
- Starter solenoid, 136
- Starting, cold, 26
 - compression ratio, raising, 27
 - fuel, extra, 26
 - pre-heating, 27
 - chemical igniters, 28
 - electric heater in air intake, 29
 - Thermostart, 28
- Starting, requirements for, 13, 15
- Starting fluid, 232
- Starting water-logged engine, 111
- Stern drive (outride), 5, 6, 8, 234
 - changing gearbox oil, 244
 - troubleshooting, 234
- Stern gear, when laying up out of the water, 260
- Stern glands, recommissioning, 261
- Stop control, 72, 120, 125, 163, 201, 230, 243
- Stop solenoid, 136, 137, 230
- Stopping the engine, 70, 120
 - electrically, 71
 - mechanically, 71
- Sump (oil pan), 117
 - strainer, 117, 118
- Super-charging, 18
- Syphon break, 96, 97, 241
 - anti-syphon valve, 97, 98
 - cleaning, 98
 - Volvo Penta, 98
 - maintenance, 241
 - seawater in working parts of engine, 96
 - system, 96–98
- Tachometer, 138
- Thermostat, 99–101
 - changing, 101
 - failure, 101
 - location, 101
 - operation, 99
 - running while removed, 102
 - testing, 102
- 'Throttle' (speed control lever), 33
 - accelerating and slowing the engine, 34
 - smoke in the exhaust, 35
- Throttle and gear selection, 183
 - dual-station systems, 186
 - gear, 186
 - throttle, 186
 - electronic systems, 187
 - maintenance of selectors, 190
 - cables, replacing, 196
 - friction adjustment, 190
 - Whitlock unit, changing, 190
 - operating cables, 188
 - single-lever controls, 184
 - disengaging gear linkage, 185
 - forward, 184
 - reverse, 185
 - starting in gear, 'micro-switch' preventing, 186
 - troubleshooting, 225, 226, 231
 - shaft drive systems, 233
 - twin-lever systems, 183
- Tools, 273
- Troubleshooting, 225
 - alternator/generator warning light illuminates, 236
 - engine low oil pressure alarm operates, 236
 - engine overheat alarm sounds, 231
 - engine turns but won't start, 229
 - air, pre-heating, 232
 - engine turns normally, 230
 - engine turns slowly, 229
 - fuel system, 231
 - engine won't start, 225
 - electrics, 227
 - fails to turn, 225
 - 'jump' starting, 229
 - wiring diagrams, 227

- Troubleshooting, (*continued*)
 - exhaust, no water from, 234
 - gear selection, no response to, 232
 - throttle, no response to, 232
- True Marine 'Speed Seal', 85
- Turbo-charging, 13
 - inter-cooler (heat exchanger), 17
 - life of, extending, 18
 - limitations in boat types, 17
 - operation, 14
 - power output, 14, 19
 - principle of, 14
 - smoke, black, 35
 - temperatures, 14
 - waste gate, 17
- Two-stroke diesel engine, 19
 - compression phase, 19
 - exhaust phase, 20
 - ignition phase, 20
 - inlet phase/ports, 19
 - power phase, 20
- 'V' drive, 5
- Valve gear, 29
 - adjusting clearance, 30
 - camshaft, 29, 30
 - exhaust valves, 29
 - inlet valves, 29
 - overhead camshaft-operated valves, 30
 - push-rod-operated valves, 30
- Ventilation for winterization, 258, 260
- Vetus engines, 31
- Volkswagen Golf-derived engine, 31
- Volvo Penta engines, 9, 19
 - Anodes, 103
 - anti-syphon valve, 97, 98
 - electrical circuit, 134
 - emergency stop button, 201
 - IPS, 8
 - electronic engine management, 197
 - MD1, 27
 - MD2, 27
 - MD3, 27
 - MD22, 31
 - MD2000 series, 27
 - oil breather, 120
 - seawater pump, 89
 - MS2 gearbox, 175, 177, 233
 - sail drive, 6, 105, 126, 138, 143, 218, 234, 244, 255
 - seawater pump, older engines, 85
 - stern glands, 261
- 'Warming up' the engine, 42
- Warning 'buzzer', 139
- Warning lights, 138
- Water displacing fluid, 260, 274
- Water injection bend, 79, 108
- Water-logged engine, 110
 - starting, 111
- Water pumps, *see* Cooling system: freshwater, 79, 80
 - circulating pump; seawater pump, 95
- Water strainers, 105
 - blockage, clearing, 107
 - cap replacement, 108
 - checking and cleaning, 106
 - location, 105
 - types, 106
- WD, 260
- Westerly boats, 53
- Winterization, 257
 - air system, 258
 - cleanliness, 259
 - cooling system, 257
 - dehumidifier, 260
 - electrics, 259
 - fuel system, 74
 - fuel tank, 257
 - heating, 260
 - when laying up out of the water, 260
 - servicing, 257
 - ventilation, 260
- Yanmar engines, 26
 - 1GM, 103
 - 1GM10, 103, 143
 - 2GM, 87

2GM20F, 45
3GM, 87
3GM30F, 249
4LH-DTE, 46
alternator, 134, 138, 139, 140, 142
anodes, 103, 104
emergency stop control, 207
sail drive, 6, 105, 126, 138, 143
seawater pump, 82, 85, 89
small, 225
'Z' drive, 5, 174, 176

