

INDEX

Note to the Reader: Throughout this index **boldfaced** page numbers indicate primary discussions of a topic. *Italicized* page numbers indicate illustrations.

Symbols

- & (ampersands), 698
- * (asterisks)
 - in Diesel, 641
 - as wildcard characters, 746
- @ (at signs), 48, 50
- \ (backslashes)
 - in menus, 630–631
 - for spaces, 321
- [] <> (brackets)
 - for default options, 56
 - for line types, 647–648
 - for menu items, 633–635
- ^ (carets), 629–630
- :
- : (colons), 753
- ,
- , (commas)
 - in Cartesian coordinates, 50
 - for constants, 742
 - in Dim statements, 735
 - in hatch patterns, 651
 - in line type patterns, 644–645
 - for parameters, 782
- \$ (dollar signs), 636–638
- " (double quotes), 604
- = (equal signs)
 - in comparison operators, 755
 - in Diesel, 641
 - in expressions, 732
- ! (exclamation points)
 - in Diesel, 641
 - for member references, 761
- > (greater-than symbols)
 - in comparison operators, 753, 755
 - in Diesel, 641
 - in pull-down menus, 631
 - for text, 213–214
- < (less-than symbols)
 - for angles, 48
 - in comparison operators, 753, 755
 - in Diesel, 641
 - in pull-down menus, 631
 - for text, 213–214
- (minus signs)
 - in Diesel, 641
 - in distance formats, 119
 - in line type patterns, 644–645
 - in pull-down menus, 631–632
- # (number signs), 746
- () (parentheses)
 - for arrays, 738
 - in Diesel, 636–637
 - for functions, 604
 - for methods, 774
- . (periods), 50, 853
- + (plus signs)
 - in Diesel, 636, 641
 - in menus, 631
- ? (question marks)
 - for linked files, 532
 - as wildcard characters, 746
- ; (semicolons), 630
- ' (single quotes)
 - in distance formats, 119
 - in VBA, 688
- / (slashes)
 - in Diesel, 636, 641
 - for options, 56
- ~ (tildes), 632
- _ (underscores)
 - for commands, 31
 - in line type patterns, 644–645
 - in names, 775

Numbers

- 0 layer, 252
- 2D drawings and objects, converting
 - from 3D models, **485**
 - from solids, **488–489**
- <2points> option, 410

924 3 Point UCS tool—addition in Diesel

3 Point UCS tool, 390, 390
 3D Adjust Distance tool, 418, 418
 3D Continuous Orbit tool, 427, 427
 3D drawings and models. *See also* solids and solid modeling
 2D drawings from, **485**
 aligning objects in, **408–409**, 409
 hidden lines in, 443–444, 444
 importing, **477–479**, 478
 perspective views for, **411–427**
 rendering. *See* rendering 3D models
 rotating objects in, **410**, 452–453, 453
 viewports for, **371–376**, 373–375, 377
 3D Faces, 378–379
 3D forms
 extruded, **401–405**, 402–404
 laying out, **385–388**, 386–387
 3D Meshes
 editing, **405–408**, 406
 settings for, **397–398**, 397
 3D Orbit command, 411
 3D Orbit tool, 411–412, 412, 417
 3D Orbit toolbar, 412, 412
 3D Pan tool, 416, 416
 3D polylines, **388**, 389
 3D Rotate tool, 408
 3D Swivel tool, 422, 423
 3D Mesh command, 398
 3DPoly command, 388
 3points slice option, 456
 19wipe.dwg file, 578

A

a command, 139
 About option, 83
 ac prefix, 743
 Acad.lin file, 642, 644, 646, 648
 Acad.mnc file, 624
 Acad.mnr file, 625
 Acad.mns file, 614, 625
 Acad.mnu file, 624
 Acad.pat file, 649
 Acad.pgp file, 588–590
 AcadDocument object, 684, 684, 825
 accelerator keys, **634–635**
 Access program, extracting data for, 333
 accessing databases, **333–345**, **801–802**
 with ActiveX Automation. *See* ActiveX Automation
 with AutoLISP. *See* AutoLISP language
 with DXF. *See* DXF (Drawing Interchange Format) files
 miscellaneous methods for, **839–841**
 with ObjectARX. *See* ObjectARX environment; ObjectDBX environment
 AcDb tables, 788
 AcDbEntity function, 837
 AcDbLine class, 829
 acdbOpenObject function, 833–834
 acdbWcs2Ecs function, 862
 acedGetVar function, 839
 acedSetVar function, 839
 AcGePoint3d class, 858
 AcGeVector3d class, 859
 ACIS Surface Deviation option, 540
 ACR (AutoCAD Command Reference), 81
 Active Assistance option, 82
 active styles, 160
 ActiveDocument property, 763
 ActiveX Automation, **823–824**
 angles in, 854
 binary data in, 865
 Booleans in, 851
 character sets in, 856
 collections, objects, and interfaces in, **825–826**
 colors in, 850
 custom objects in, **829–830**
 for database access, **824–825**
 dictionaries in, **828–829**
 entities in
 access to, **826–828**
 creating, **828**
 enumerations in, 849
 handles in, 857
 integers in, 845–848
 non-objects in, **830**
 pointers in, 858
 points in, 858
 strings in, 855
 Add File To Startup Suite dialog box, 701, 702
 add function, 835
 Add Layers command, 293
 Add prefix, 762
 Add Zone option, 508
 AddArc method, 828
 AddCircle method, 828
 AddCustomObject method, 830
 addition in Diesel, 636

- AddLine method, 828
- AddObject method, 829
- AddText method, 694, 697, 697
- AddXRecord method, 829
- Adjust Back Clipping tool, 426, 426
- Adjust Clipping Planes dialog box, 423–426, 424–426
- Adjust Front Clipping tool, 424, 424
- Adjust Object Bitmap Placement dialog box, 908, 909
- Adjust Planar Coordinates dialog box, 907–908, 907
- ads_binary type, 865
- Advanced tab, **184–186**, 184
- AEC (Architecture/Engineering/Construction) tools, 540
- Al command, 408
- aliases, editing, **588–590**, 588–589
- Align tool, 408
- Align Lefts tool, 720
- Aligned Dimension tool, 236
- Aligned with Dimension Line option, 201
- aligning
 - code lines, 723–724
 - dimensions, 236–237, 237
 - objects, **408–409**, 409
- All options for selecting objects, 66
- Alphabetic tab, 671, 671
- alt.cad.autocad newsgroup, 607
- alternate dimensions, **232–233**
- alternate units, **204–206**, 205
- Alternate Units tab, 204–206, 205, 232
- Alternate View button, 330
- Always Ask Before Opening Projects With Macros option, 700
- Always Left Justify option, 242
- America Online service, 608
- ampersands (&), 698
- Angle Constraints leader option, 243
- angles
 - for arcs, 56, 57, 139, 146
 - in databases, **854**
 - for dimension lines, 237, 238, 244–245, 245
 - for dimension text, 215, 221–222
 - dimensions for, **237–239**, 238
 - for extrusions, 404
 - for hatch patterns, 175, 651, 652
 - for line types, 648
 - in moving objects, 65
 - for revolving polylines, 452–453
 - for rotating
 - blocks, 258, 272–273
 - doors, 137
 - specifying, **48–49**, 49
 - for sun, 271, **870–874**, 871–874
 - for text, 162–163
- Angular Dimension tool, 237
- animation, **427**
- Annotation tab, **242**
- Anti-Aliasing option, 920–921
- apostrophes (')
 - in distance formats, 119
 - in VBA, 688
- appearance of windows, 271
- Appearance tab, 670
- Application object, **762**
- applications, 658, **782–783**. *See also* VBA (Visual Basic for Applications)
 - running, **678–679**, 679
 - saving, **679–680**, 679–680
 - starting from macros, **703–704**
- Apply to All Active Viewports option, 370
- Apply to Layout Dimensions Only option, 486
- Ar command, 308
- arbitrary axis algorithm, **862–864**
- Arc tool, 38–39, 56
- Arc Rotate tool, 547
- ArcAlignedText tool, 574
- ArcAlignedText Workshop dialog box, 574, 574
- arcballs, **413–415**, 413–415
- arc macro, 605
- Architectural units, 10, 120
- Architecture/Engineering/Construction (AEC) tools, 540
- arcs
 - dimensions for, **237–239**
 - macro for, 605
 - moving, 68–69
 - options for, 55–56, 57, 58–59, **139**
 - properties for, **84–85**, 85
 - smoothness of, **874–875**
 - start points for, 139, 146
 - for swinging doors, 133, 133
 - with UCS, 379
- Area dialog box, 43, 43
- argument lists, 604
- arguments, **782**
 - in Diesel, 636
 - for functions, 604
- Array dialog box, 308, 308

926 Array tool—AutoLISP language

- Array tool, 39, 39, 308
- arrays (objects), 308
- arrays (programming), **738-740**
 - accessing, **739-740**
 - creating, **738-739**
 - declaring, 689-690, 738-739
- Arrowhead leader option, 243
- arrows
 - notes with, **240-244**, 243-244
 - options for, **242-243**, 243
 - styles for, **201-204**, 202-203
- arrows keys in accelerator keys, 635
- ASCII code
 - for integers, 845
 - in strings, 735
- ASCII files, DXF, **806-808**
- Ask Me tab, **80-81**, 81
- assoc function, 815
- Associate New Dimensions with Objects
 - option, 227
- association lists, 814-815, 821
- associative dimensioning, 194, **227-232**, 227-230
- Associative hatch patterns, **179-180**, **189**
- asterisks (*)
 - in Diesel, 641
 - as wildcard characters, 746
- At command, 306
- at signs (@), 48, 50
- Ate command, 317
- Attach by Layer dialog box, 882, 882, 889
- Attach option, **533**
- Attach tab, 529, 529, **535-537**, 536
- Attachment tab, **244**, 244
- Attdisp command, 322
- Attedit command, 320
- Attredf command, 326
- Attribute Definition dialog box, 306-308, 306, 311-312
- Attribute Extraction - Export dialog box, 332-333, 332
- Attribute Extraction - Save Template dialog box, 332
- Attribute Extraction - Select Attributes dialog box, 328-330, 329
- Attribute Extraction - Select Drawing dialog box, 328, 328
- Attribute Extraction - Settings dialog box, 328
- Attribute Extraction - User Template dialog box, 328
- Attribute Extraction - View Output dialog box, 330-331, 330-331
- Attribute tab
 - in Edit Attribute, 324, 324
 - in Enhanced Attribute Editor, 319, 319
- attributes, 797
 - adding to blocks, **304-308**, 305
 - creating, **304-308**
 - definitions for, **305-308**
 - editing, **316-327**, 317-319, 323-325
 - extracting and exporting, **327-333**
 - global changes to, **319-326**, 323-325
 - inserting blocks with, **312-315**, 313, 315-316
 - invisible, **322**, 323
 - prompts for, 304, 306, 310
 - redefining blocks with, **326-327**
 - specifications for, **308-312**, 308-310
 - with UCS, 379
 - uses for, **327**
- AUG (AutoCAD User Guide), 81
- Auto Data Tips option, 713, 713
- Auto Indent option, 714, 714
- Auto List Members feature, 690, 690, 712, 713
- Auto Quick Info option, 713
- Auto selection option, 68
- Auto-smooth option, 537
- Auto Syntax Check option, **711-712**, 711-712
- AutoCAD 2002 Help dialog box
 - Contents tab, **78-83**, 79
 - for context-sensitive help, **82**
 - Search tab, **80-82**, 80-81
- AutoCAD 2002 Today dialog box, 42, 42
- AutoCAD Alias Editor dialog box, 588-589, 588
- AutoCAD Command Reference (ACR), 81
- AutoCAD Text Window, **83-84**, 84
- AutoCAD User Guide (AUG), 81
- AutoDesk Resource Guide, 607
- Autodesk User Group International option, 83
- AutoLISP language, **601-602**, **812-813**
 - angles in, 854
 - binary data in, 865
 - Booleans in, 851
 - character sets in, 856
 - colors in, 850
 - coordinate systems in, 861-862
 - database access from, **813-815**
 - dictionary access in, **818-820**
 - drawing settings in, **822-823**

entities in
 names for, **815-816**
 retrieving, **816-818**
 enumerations in, 849
 handles in, 857
 integers in, 845-848
 keyboard macros in, **602-605, 603**
 objects in, **820-822**
 pointers in, 857
 points in, 858
 real numbers in, 852
 strings in, 855
 for submenus, **632**
 automating
 label updating, **572-574, 573**
 tasks. *See* macros
 automation interface, 826
 Autoselect feature, **69-71**
 AutoView Linked Objects in Drawing tool, 352
 axes
 for 3D rotating, 410
 UCS for, 19

B

b command, 255
 Back Clipping On/Off tool, 426, 426
 Back UCS orientation, 364, 364
 BackColor property, 768
 Background Compile option, 714
 Background dialog box, 886-887, 886, 901
 background grids for icons, 621
 Background Image dialog box, 887, 887
 background scenes and images, **886-887, 886-888**
 backgrounds
 color for, 15, 16, 670, 768
 for text, **566-569, 568**
 backslashes (\)
 in menus, 630-631
 for spaces, 321
 Backspace key, 47
 BackStyle property, 770
 Base Point option, 297
 base points
 in copying, 141
 in inserting blocks, 297
 in selecting, **62-66**
 in stretching, 75
 Baseline tool, 211
 Baseline Dimension tool, 212-213
 baselines, dimensions from, **211-213, 212**
 Batting line type, 647
 Beside the Dimension Line option, 204
 binary data in databases, **864-865**
 binary files, DXF, **806-808**
 Bind option, 533
 bitmap images
 in 3D models, **904-908, 905-907, 909**
 for icons, 621
 saving rendered views as, 916-917
 Blend to Color Above option, 508
 blipmode command, 278-279, 285
 blips, 53
 with point filters, **277-280, 279**
 turning off, 285
 Block Attribute Manager dialog box,
 323-326, 323
 Block Definition dialog box, 254-255, 254, 263
 Block Edit menu, Edit Reference command, 284
 Block Reference option, 242
 block references, 255
 block table, 788
 blocks, **251-252**
 with associative dimensioning, 228
 with attributes, **304-308, 305, 312-315, 313, 315-316, 326-327**
 in AutoLISP, 821
 blips with point filters for, **277-280, 279**
 clipping, 590-591
 combining entities into, **790-791**
 defining, 252
 for doors, **252-263, 253-254, 256-258, 260-261, 263**
 extracting information from, **329-331, 330-331**
 finding, **264-267, 265**
 flipping, **259-260, 260**
 guidelines for, **274-275, 274, 276**
 inserting, **256-258, 256-258, 312-315**
 for leader text, 242
 previewing, 293-294, 294
 revising, **283-285, 284-285**
 rotating, 258, 258, **271-273, 272-273, 283**
 shapes as alternative to, **594-596, 595**
 for sharing information
 Design Center for, **289-295, 291-296**
 dragging and dropping for, **286-289, 287-288**

928 Blocks collection—Change to Current Layer tool

- inserting drawings, **298–299**
- Wblock for, **296–298**, 297
- in Symbol Tables container, 788
- tools for, **575**
- tracking for, **276–277**
- with UCS, 379
- ungrouping, 283
- VIZblocks, **554–558**
- window
 - creating, **267–270**, 268–270
 - inserting, **271–283**, 272–274, 276, 279, 282
- Blocks collection, 826
- BLOCKS sections in DXF files, 809
- bold text, 161
- boolean operations, 80, 430–433, 433
- Booleans as integers, 848, **850–851**
- BORDER linetypes, 643
- borders
 - for active controls, 667
 - for Wipeout objects, 579–580
- Bottom UCS orientation, 364, 364
- Boundary Creation dialog box, 509–514
- boundary edges in extending, 104
- Boundary Hatch dialog box, 174–176, 178, **183–184**
 - advanced options for, **184–186**, 184
 - tips for, **187**
- Boundary Set options, **186**
- BOX command, 435
- Box tool, 435
- boxes, 432, 435–436
 - drawing, **95**
 - coordinates in, **95–97**, 96
 - extending lines in, **104–105**, 105
 - Fillet command for, **100–102**, 101
 - Offset command for, **97–100**, 98–99
 - openings in, **102–103**, 103
 - trimming lines in, **105–109**, 106–109
- bracketing in DXF files, 806, 809
- brackets ([]) (<>)
 - for default options, 56
 - for line types, 647–648
 - for menu items, 633–635
- Break tool, 39, 39
- Break at Point tool, 39, 39
- breakat macro, **603–604**, 603
- breaking, keyboard macro for, **603–604**, 603
- breakpoints, 713, 724–725, 728

- buffers in ObjectDBX, **839**
- building elevations in VIZ, **527–528**
- built-in constants, **742–746**, 742–745
- built-in keywords and types, icons for, 692, 692
- Button Editor dialog box, 620–621, 621
- Button Properties dialog box, 618–619, 619, 622
- buttons, 104
 - creating, **618–620**
 - editing, 624
 - icons for, **620–622**

C

- Cadalyst*, 601, 608
- Cadence*, 601, 608
- calculated properties, **797**, 827
- Camera tool, 411, 411, 414–415
- cameras, 411–415, 412
 - adjusting, **418–423**, 419–423
 - distance to target, **418–419**, 419
- canceling
 - commands, **47**, 99, 132
 - project loading, **703**
- Cap Closed Objects option, 538
- Cap End option, 538
- Cap Start option, 538
- capitalization in VBA, 689–690
- Caption property, 671–672
- captions, **671–673**, 671
- car function, 815
- carets (^), 629–630
- Cartesian coordinate systems, **50–52**, 50–52, **95**, 96, 860
- cascading menus, 12, **631**, **710**
- Case Else clause, 757
- case of VBA names, 689–690
- categories for toolbars, 615
- Categorized tab, 266, 671, 671
- cdr function, 814–815
- cecolor function, 839
- CENTER linetypes, 643
- Center Mark tool, 239
- Center options
 - for arcs, 56, 139–140, 146
 - for Osnaps, 307
- Cha command, 458
- Chamfer tool, 40, 40, 458, 458
- chamfering, **458–459**, 458–459
- Change to Current Layer tool, 565

- changes
 - property values, **767–773**, 768–772
 - in VIZ, **502–504**, 502–504
- character ranges in databases, **856–857**
- character sets in databases, **855–856**
- Character tab, 353
- CheckBox controls, 663
- CheckNumericKey Procedure, 777–779
- chords, 56
- chunks, 865
- Circle tool, 39, 39
- circles
 - smoothness of, **874–875**
 - with UCS, 379
- circular stairs, **543–545**, 544
- circular surfaces, extruding objects along, **403–405**, 404
- circumscribe polygon option, 235
- classes
 - in databases, **794–796**, 795–796
 - icons for, 692, 692
 - of objects, **760–761**
- CLASSES sections, 809
- Clean tool, 474
- cleaning up
 - lines, **121–122**, 121–122
 - screen, **53**
- Clear option for icons, 621
- Click event procedures, 676
- clicking, 30
- climate considerations for windows, 271
- clipping, extended, **590–591**, 591
- clipping planes, **423–426**, 424–426
- Clone Options dialog box, 518–519, 545
- close method, 833–834
- closing
 - lines, 51
 - ObjectARX objects, **832–834**
 - shapes, 95
- code pages, 856
- Code window, 661–662, **673**, 673, 686, 686
 - displaying, **673–674**, 674
 - event procedures in, **674–678**, 675
 - keyword color in, **689**
- coding in VBA, **731–732**
 - aligning, 723–724
 - applications in, **782–783**
 - conditions in, **753–757**
 - constructs in, **775–779**
 - debugging, **724**
 - editing, **723–724**
 - events in, **774–775**
 - functions in, **781**
 - indenting, 714, 723–724
 - loops in, **757–759**
 - methods in, **773–774**
 - objects in, **760–766**, 765
 - parameters and arguments in, **781–782**
 - programs in, **782**
 - properties in, **767–773**, 768–772
 - running, **725**
 - tab order in, **779–781**
 - user-defined types in, **752**
- Collapse All Hidden Text On This Page
 - option, 79
- collections
 - in ActiveX Automation, **825–826**
 - in VBA, 759, **761–762**
- colons (:), 753
- Color by Elevation rollout, **507–508**, 507
- Color Faces tool, 474
- color function, 837
- Color option, 536
- Color Options dialog box, 12, 16, 16
- Color Selector dialog box, 502, 502
- Color, Thickness option, 536
- colors
 - for 3D surfaces, 473, 474–475
 - background, 15, 16, 670, 768
 - of cursor, **32–33**, 32–33
 - for grips, 73
 - as integers, **850**
 - of keywords, **689**
 - for materials, 883–884
 - in ObjectDBX, 837
 - in rendering 3D models, 917
 - for syntax errors, 711
 - for terrains, **507–508**, 507
 - for title bars, 670
 - in Viz, **534–536**, 535
- columns, database, 334
- COM Automation. *See* ActiveX Automation
- combining entities into blocks, **790–791**
- ComboBox controls, 663
- comma delimited format files, 333
- Command AutoLISP function, 604
- command line
 - opening toolbars from, **616–617**
 - for solids editing, **471–472**
- Command: prompt, 94

930 Command window—Copy tool

- Command window, **17–18**, 17–18, 27, 53
- CommandButton controls, 664
- CommandButton1_Click procedure, 676–677
- CommandButton2_Click procedure, 676–677
- commands, **25**, **91–92**, 92
 - aliases for, **588–590**, 588–589
 - canceling, **47**, 99, 132
 - cursor color in, **32–33**, 32–33
 - ending, **33–35**, 34
 - help for, **78–83**, 79–81
 - history of, 83–84, 84
 - keyboard for, **30**
 - in menus, **29–30**, 29, **629–630**, 660
 - prompts for, **30–32**, 31–32
 - restarting, 102
 - toolbar buttons for, **26–27**, 26–27
 - toolbar flyouts for, **28–29**, 28
 - transparent, 143
 - in VBA, 660
- commas (,)
 - in Cartesian coordinates, 50
 - for constants, 742
 - in Dim statements, 735
 - in hatch patterns, 651
 - in line type patterns, 644–645
 - for parameters, 782
- Comment Block button, 717
- comments
 - in DXF files, 808
 - in VBA, 688, 693, 717
- common base extension lines, **211–213**, 212
- comp.cad.autocad newsgroup, 607
- Compass tool, 417, 418
- Compile ACADProject command, 724
- Compile On Demand option, 714
- compiled menus, 625
- compiler and compilation, 714, 732
- Complete Word feature, 690–692, 690–691
- complex line types, **647–648**, 647
- composite solids, 431
- compound trims, 129, 129
- concatenating strings, 698
- conditions
 - for database searches, **342**
 - for If...Then... blocks, **753–754**
 - for If...Then...Else... blocks, **755–756**
 - for Select Case statements, **756–757**
- Cone tool, 438
- cones, 430, 432, 438, 438
- configuring Data Link files, **336–339**, 337–338
- Constant attribute option, 312
- constants, **740–741**
 - built-in, **742–746**, 742–745
 - declaring, **741–742**
 - icons for, 692, 692
 - scope of, **746–752**, 749
- Construction Line tool, 39, 39
- constructors, 831
- containers, 805
 - in databases, **787–789**
 - iterating through, **834–836**
- Contents tab, **78–79**, 79, 765
- context-sensitive help, **82**, 728
- Continue Dimension tool, 210–211
- continuing dimensions, **210–211**, 213
- CONTINUOUS name, 811
- Contour.dwg file, 499–500, 502–503
- contour lines. *See* terrains
- Contour Lines Per Surface option, 445
- control structures
 - If...Then... blocks, **753–754**
 - If...Then...Else... blocks, **755–756**
 - Select Case statements, **756–757**
- controls, **662–665**, 662
 - dimensions and position of, **666–667**
 - placing, **665–667**
 - tab order of, **779–781**
- Controls collection, 761, **766**
- Convert button, 772
- Convert Drawing Layers to Design Layers option, 528, 530, 535, **538**
- Convert to Block option, 263
- converting
 - 2D polylines to 3D solids, **436–440**, 437–440
 - units. *See* Metric-Imperial Converter application
- Cookie Cutter Trim command, 577
- coordinates
 - for 3D meshes, 398
 - in AutoLISP, 813
 - in databases, **858–864**
 - for distances, **48–52**, 49–52
 - in hatch patterns, 651–653, 652–653
 - for points, 92–93, 858–859
 - spherical and cylindrical, **387–388**
 - in status bar, 18
- Copy an Object option, 242
- Copy button, 142
- Copy tool, 289

- Copy Edges tool, 471, 471
 - Copy Faces tool, 470–471, 471
 - Copy Nested Entities tool, 575
 - Copy Object tool, 39, 39
 - copying, 723, 727
 - blocks, 283, 575
 - faces and edges, **470–471**
 - with grips, 72, 76–77, 77
 - leader text, 242
 - Move Copy Rotate tool for, **576–577**
 - objects, **141–143**, 142–143
 - Wipeout objects, 579
 - cords, 56
 - core objects, 799
 - corner macro, 605
 - corners
 - chamfering, **458–459**, 458–459
 - rounding, **100–102**, 101, **456–457**, 457
 - Count property, 825
 - Counter variables in For loops, 757–758
 - cp command, 142
 - Create Attached Labels option, 354
 - Create Defaults option, 501, 501
 - Create Freestanding Label tool, 351, 351, 353
 - Create Icon From Block Geometry option, 255
 - Create Instances of Blocks option, 538
 - Create New Data Source dialog box, 338, 338
 - Create New Drawing dialog box, 93, 476, 476
 - Create or Append Linetype File dialog box, 644
 - Create Slice tool, 426, 426
 - Create tab, 500, 541–542
 - criteria for databases, **342**
 - Crop Window option, 918–919, 919
 - cross sections, **487**, 488
 - crosshair cursor, **20**, 20, 33, 33, 54
 - Crosshair Size setting, 20
 - Crossing Faces option, 912, 912
 - Crossing Polygon selection option, 66
 - Crossing Polygon windows, 226
 - Crossing selection option, 66
 - crossing windows, 66, **69–71**, 70–71
 - for cutting edges, 151–152, 152
 - for stretching, 224–226, 224
 - Ctrl key in accelerator keys, 634–635
 - current drawing database, 832
 - Current Module option, 722
 - current text style, **162**
 - Current Viewport option, 186
 - cursor color, **32–33**, 32–33
 - cursor modes, 53–54, 54
 - curved 3D surfaces, **389–396**, 391, 393–395, 397
 - curved arrows for linked files, 532
 - Curved Steps option, 538
 - curves
 - extrusions on, **447–449**, 448, 450
 - vertices for, 548–550, 549–551
 - Custom Components dialog box, 562
 - custom objects, **829–830**
 - Customize Toolbars dialog box, 614–615, 615, 622
 - customizing AutoCAD
 - hatch patterns, **649–653**
 - line types, **642–648**
 - menus, **625–635**
 - toolbars, **612–625**
 - Customltype.dwg file, 592
 - Cut command, 723
 - cutting edges
 - selecting, 151–152, 152
 - in trimming, 105
 - cutting wall openings, **126–132**, 127–131
 - Cylinder command, 442
 - Cylinder tool, 442
 - cylinders, 430, 432
 - cylindrical coordinate format, **387–388**
- ## D
- D command, 196, 232
 - Dal command, 236
 - Dan command, 237
 - DASHDOT linetypes, 643
 - DASHED linetypes, 643
 - Data Link dialog box, 335
 - Data Link files, 335
 - configuring, **336–339**, 337–338
 - creating, **336**
 - Data Link Properties dialog box, 336–337, 337, 339
 - Data Type Summary Help window, 733, 733
 - data types
 - in databases, **843–844**
 - binary, **864–865**
 - handles, **857**
 - integers, **844–851**
 - pointers, **857–858**
 - points, **858–864**
 - real numbers, **852–855**
 - strings, **855–857**
 - in VBA, **733–735**, 733
 - for arrays, 690, 738–739

932 Data Types Keyword Summary option – Design Center application

- defining, **752**
 - memory for, *734, 737*
- Data Types Keyword Summary option, *734*
- Data View dialog box, *340–341, 341, 345, 347–354*
- database managers, *334*
- databases, **785–786**
 - accessing, **333–345, 801–802**
 - with ActiveX Automation. *See* ActiveX Automation
 - with AutoLISP. *See* AutoLISP language
 - with DXF. *See* DXF (Drawing Interchange Format) files
 - miscellaneous methods for, **839–841**
 - with ObjectARX. *See* ObjectARX environment; ObjectDBX environment
 - adding rows to, **344–345**
 - classes in, **794–796, 795–796**
 - containers in, **787–788**
 - data types in. *See* data types
 - dictionaries in, **789–790**
 - entities and blocks in, **790–791**
 - finding records in, **341–344**
 - linking objects to, **345–355**
 - locating objects in, **349–351, 349–350**
 - non-objects in, **791–792**
 - objects in. *See* objects
 - opening, **340–341**
 - selecting graphics through, **350–351**
 - symbol tables in, **788–789**
- Date function, *698–699*
- dates
 - in databases, **854–855**
 - retrieving, *698–699*
 - for sun angle calculator, *872*
- db-mastersample.mdb file, *335, 335, 339*
- Dba command, *212*
- dbConnect menu
 - Data Sources command, *339*
 - Links command, *355*
- dbConnect tool, *340*
- dbConnect window, *340–341, 340*
- dbConnectManager
 - for accessing external databases, **333–345**
 - for linking external databases, **345–355**
 - setting up for, **335–339, 337–338**
- Dco command, *210*
- Ddi command, *239*
- Debug menu, Toggle Breakpoint command, *728*
- Debug toolbar, **718, 718**
- debugging, **724**
- decimal form for distances, *120*
- decimal points, *50, 853*
- Decimal Separator option, *198*
- Decimal units, *10*
- declaring
 - arrays, *689–690, 738–739*
 - constants, **741–742**
 - procedures, *677*
 - variables, *712, 734–738*
- Ded command, *215, 244*
- Default Settings area, *7*
- defaults, *6*
 - for attributes, *312*
 - icons for, *692, 692*
 - for new drawings, *43*
 - for options and settings, *56*
 - for VBA GUI, **670**
- defined properties, **797**
- defining
 - attributes, **305–308**
 - data types, **752**
 - surfaces, **398–399, 400–401**
 - UCS, **361–365, 362, 364**
- definition points for dimensions, **216**
- Defpoints layer, *216*
- Defun AutoLISP function, *603–604*
- degrees for angles, *854*
- Del key in accelerator keys, *635*
- Delete Faces tool, *463, 463*
- Delete Labels command, *354*
- Delete option for layer states, *564*
- Delete source objects?: prompt, *145*
- Delete Zone option, *508*
- deleting. *See also* erasing
 - alternate dimensions, **232–233**
 - blocks, *263*
 - color zones, *508*
 - icons, *623*
 - layer states, *564*
 - layers, **566**
 - links, *355*
 - sliced objects, *455*
 - surfaces, **463–464, 464**
 - toolbars from list, *613*
- delimiters, *332*
- Description button, *290*
- deselecting objects, *61*
- Design Center application, **289–295, 291–296, 854**

- design time vs. run time, **767**
- Desktop button, 290
- Desmooth option, 407
- Detach option, 533
- detail in rendering 3D models, **900–904**, 902–904
- Developer Help option, 82
- di command, 281
- dialog boxes, **770–772**, 771–772
- Diameter Dimension tool, 239
- diameters, dimensions for, **239**, 240
- dictadd function, 822
- dictionaries
 - in ActiveX Automation, **828–829**
 - in AutoLISP, **818–820**, 822
 - in databases, **789–790**
 - in ObjectDBX, **838**
- Dictionaries collection, 828–829
- dictnext function, 819
- dictremove function, 822
- dictrename function, 822
- dictsearch function, 818–819
- Diesel programming language, 573, **636–637**
 - for menu option labels, **639–641**
 - for menus, **638**
- .dim extension, 599
- Dim statement, 689–690, **735–736**
- Dimension Edit tool, 215, 221, 244
- dimension lines, 194, 194
- Dimension menu
 - Align Text command, 222
 - Aligned command, 236
 - Angular command, 237
 - Continue command, 210
 - Leader command, 240
 - Linear command, 209, 227
 - Oblique command, 244
 - Override command, 222
 - Qdim command, 231
 - Reassociate Dimensions command, 229
 - Style command, 232
 - Styles command, 486
 - Tolerance command, 247
- Dimension Style Export dialog box, 599, 599
- Dimension Style Import dialog box, 600, 600
- Dimension Style Manager dialog box, 196, 196, 220, 486
 - for alternate dimensions, 232
 - for current dimension style, 206
 - for editing dimension style, 206
- dimension style table, 788
- Dimension Text Edit tool, **222–223**
- Dimension toolbar, **208**, 208
- Dimension Update tool, 221
- dimensioned objects, editing, **224–226**, 224
- dimensions, **193–194**
 - aligning, 236–237, 237
 - alternate, **232–233**
 - alternate units for, **204–206**, 205
 - for angles, **237–239**, 238
 - for arrays, 740
 - arrows for, **201–204**, 202–203, **240–244**, 243–244
 - associative, 194, **227–232**, 227–230
 - components of, **194–195**, 194
 - continuing, **210–211**, 213
 - definition points for, **216**
 - editing, **213–234**
 - extension lines for, 194, 194, 209, **211–213**, 212
 - grids in, **207**, 207
 - Grips feature for, **216–218**, 217
 - horizontal and vertical, **209–210**, 210
 - leaders for, 220, **240–244**, 243–244, 247
 - for nonorthogonal objects, **234–239**, 236–238, 240
 - notes for, **240–244**, 243–244
 - ordinate, **245–247**, 246
 - Osnap overrides with, **233–234**
 - in Paper Space, **485–487**
 - for radii, diameters, and arcs, **237–239**, 238, 240
 - rotating, 226, 237, 237
 - skewing, **244–245**, 245
 - string of, **231–232**, 232
 - styles for, **194–207**, **218–223**, **599–600**, 599–600, 788
 - text for, 194, 194
 - appending data to, **213–214**
 - height of, **199–200**, 200
 - location and orientation of, **200–201**, 201
 - moving, **200–201**, 201, **219–221**, 219, 221
 - rotating, **221–222**
 - styles for, **218**
 - tool for, **223**
 - toolbar for, **208**, 208
 - of toolbox controls, **666–667**
 - with UCS, 379
 - units for, **197–199**, **204–206**, 205
- Dimfit dimension variable, 222–223

934 Dimim command — Draw toolbar

- Dimim command, 600
- Dimlinear command, 209
- dimmed menu items, 632, 710
- Dimoverride command, 223
- Dimregen command, 228
- Dimscale dimension variable, 234
- DimStyles collection, 826
- Dimtad dimension variable, 234
- Dimtedit command, 222
- Dimtih dimension variable, 234
- Dimtix dimension variable, 239
- Dimtofl dimension variable, 239
- Direct Distance method, 52
- directions
 - for arcs, 146
 - with extrusions, 405
 - in moving objects, 65
- disguised integers, **848-851**
- displacement maps, 498
- Display All Hidden Text On This Page option, 79
- Display Alternate Units option, 205, 232
- Display at UCS Origin Point option, 370
- display order with overlapping objects, **189-191**, 190
- Display Properties dialog box, 670
- display schemes, 670
- Display Scroll Bars in Drawing Window option, 17
- Display tab
 - for background color, 15, 16
 - for command window, 17-18
 - for crosshair cursor, 20, 20
 - for isolines, 445
 - for scrollbars, 17
 - for smoothness, 875
- Display UCS Dialog UCS tool, 363, 363, 365, 390
- Distance command, 281
- distances. *See also* dimensions
 - in Architectural units, 120
 - camera to target, **418-419**, 419
 - coordinates for, **48-52**, 49-52
 - formats for, 119
 - in moving objects, 65
 - between objects, 281
 - with Offset command, **100**, 119
 - rubber banding for, 52
- DIVIDE linetypes, 643
- divided solids, separating, **474**, 474
- dividing lines on menus, 632
- division in Diesel, 636
- Dli command, 209, 211
- Do loops, 759
- docked items
 - Design Center, 291, 291
 - Properties window, 267
 - toolbars, **13-15**, 14-15, 93, 93, 708, 709
- documentation in VBA, 688, 693
- Documents collection, **763-764**, 824
- dollar signs (\$), 636-638
- done function, 835
- donuts, 430, 432, 439, 439
- door type symbols, 304
- doors, **133**, 133
 - blocks for, **252-263**, 253-254, 256-258, 260-261, 263
 - copying, **141-143**, 142-143
 - finishing, **145-146**, 147
 - mirroring, **143-145**, 144
 - rotating, **137-138**, 138
 - sliding glass doors, **147-155**, 147-154
 - swinging, **133-141**, 135-136, 138, 140
- Dor command, 246
- DOT linetypes, 643
- dotted windows, 69-71, 70-71
- Double hatch pattern option, 175
- double quotes ("), 604
- doughnuts, 430, 432, 439, 439
- Drafting Settings dialog box, 133-134, 134, 233
- dragging and dropping, **286-289**, 287-288
- Draw menu, 12, 13
 - 3D Polyline command, 388
 - Arc command, 139
 - Block menu
 - Base command, 311
 - Define Attributes command, 306
 - Make command, 255
 - Hatch command, 174
 - Line command, 94
 - Rectangle command, 134
 - Solids menu
 - Box command, 435
 - Cylinder command, 442
 - Setup menu, Profile command, 483
 - Setup menu, View command, 478
 - Surfaces menu
 - 3D Face command, 369
 - Ruled Surface command, 399
 - Tabulated Surface command, 401
 - Text command, 162
- Draw toolbar, **38-41**, 93, 93

drawing

- boxes, **95**
 - coordinates in, **95–97**, 96
 - extending lines in, **104–105**, 105
 - Fillet command for, **100–102**, 101
 - Offset command for, **97–100**, 98–99
 - openings in, **102–103**, 103
 - trimming lines in, **105–109**, 106–109
- lines, **44–46**, 45, **92–94**, 92–93
- views, **475–479**
- drawing area, **15–17**, 16
- Drawing Exchange Engine (DXE) libraries, 840
- Drawing Interchange Format. *See* DXF (Drawing Interchange Format) files
- drawing objects, 673, **762**, 763
 - Application object, **762**
 - Documents collection, **763–764**
- drawings
 - AutoLISP settings for, **822–823**
 - components of, **786–787**
 - creating, **42–47**
 - inserting, **298–299**
 - names of, **22**
 - opening, **4–5**, 4–6
 - saving, **21–22**, 21–22
 - starting, 6–11, 6–11
- Draworder command, 191
- DrawText macro
 - code for, **687–694**
 - running, **696–697**, 696–697
 - saving, **694–695**, 695
 - updating, **698–699**
- drop-down lists, 686–687
- .dwb extension, 680, 694, 716
- Dview command, **421–422**
- .dwg files, 115, 694, 840
- DWG Import dialog box, 515, 525
- DWG Linking tab, 528, 529, **538–548**, 538–539
- Dwgname system variable, 574
- Dwgprefix system variable, 574
- DXE (Drawing Exchange Engine) libraries, 840
- DXF (Drawing Interchange Format) files, **802–804**
 - angles in, 854
 - ASCII and binary, **806–808**
 - and AutoLISP. *See* AutoLISP language
 - binary data in, 865
 - Booleans in, 851
 - character sets in, 856
 - colors in, 850

- coordinate systems in, 861
- criticisms of, **804–805**
- enumerations in, 849
- group codes in, 849
- handles in, 857
- for integers, 845–848
- myths about, **804**
- objects in, **810–812**
- pointers in, 857
- points in, 858–859
- real numbers in, 853
- serializing data with, **805–806**
- strings in, 855
- structure of, **808–810**
- Dynamic Reload Group option, 533

E

- ECS (Entity Coordinate System), 861–864
- Edge Surface tool, 389, 396, 396
- edgemode command, 152
- Edgemode variable, 152
- edges
 - boundary, 104
 - copying, **470–471**
 - cutting, 105, 151–152, 152
 - for surfaces, 389–390, **396**
- Edit Attribute dialog box, 324–325, 324
- Edit Attributes dialog box, 313–314, 313, 317
- Edit menu
 - Clone command, 519
 - Complete Word command, 690
 - Indent command, 728
 - Paste command, 727
- Edit option
 - for layer states, 564
 - for vertices, 407
- Edit Polyline tool, 408
- Edit Table tool, 340
- Edit Text dialog box, 165, 165
- Edit toolbar, **717**, 718
- editing
 - 3D Meshes, **405–408**, 406
 - attributes, **316–327**, 317–319, 323–325
 - AutoLISP objects, **820–822**
 - blocks, **283–285**, 284–285
 - buttons, 624
 - code commands for, **723–724**
 - command aliases, **588–590**, 588–589

936 Editor tab—Erase tool

- dimension styles, 206
- dimensioned objects, **224–226**, 224
- dimensions, **213–234**
- with Grips, **72–78**
- hatch patterns, **181–183**, 181, 183
- layer states, 564
- links, **354–355**, 355, **530–532**, 531
- solids, **454**
 - chamfering corners, **458–459**, 458–459
 - command line for, **471–472**
 - copying faces and edges, **470–471**
 - deleting surfaces, **463–464**, 464
 - extruding surfaces, **467–469**, 468
 - moving surfaces, **460–462**, 461–462
 - offsetting surfaces, **462**, 463
 - rotating surfaces, **464–465**, 465
 - rounding corners, **456–457**, 457
 - separating divided solids, **474**, 474
 - splitting solids, **454–456**, 455
 - surface features for, **472–474**, 473
 - tapering surfaces, **466**, 466–467
 - turning solids into shells, **469**, 470
- text, **566–574**
- Editor tab, **711–714**, 738
- Editor Format tab, 689, 689
- EIFs (entity interchange files), 803
- Elevation view, 921, 922
- Ellipse tool, 39, 39
- Ellipse Arc tool, 39, 39
- Ellipse cone option, 438
- ellipses (...), 30, 723
- Else blocks, 677–678
- Elseif clause, 756
- embedded objects, **794**, 810
- empty strings, 678
- Enable Grips within Blocks option, 264
- Enable Macro Virus Protection option, 700
- Enable Macros option, 700
- End Function statement, 781
- End If statement, 753–754
- end-of-file information, 808
- end-section brackets, 809
- End statement, 678
- End Sub statement, 677–678, 688, 776
- End Type statement, 752
- ENDBLK string, 809
- ending commands, **33–35**, 34
- Endpoint button, 135
- Endpoint Object Snap, 135
- EndPoint property, 827
- endpoints
 - for arcs, 56, 139–140
 - for base points, 63–64
 - in copying, 141
- ENDSEC bracket, 809
- ENDTAB string, 809
- Enhanced Attribute Editor dialog box, 317–319, 317–319
- Enter key, **34**, 102
- Enter X scale factor: prompt, 257
- entget function, 813–816
- Entire Drawing option, 298
- entities. *See also* objects
 - in ActiveX Automation
 - accessing, **826–828**
 - creating, **828**
 - in AutoLISP
 - names of, **815–816**
 - retrieving, **816–818**
 - combining into blocks, **790–791**
 - coordinates for, **861–862**
 - in ObjectDBX, **836–837**
- ENTITIES sections, 810
- entity association lists, 814–815, 821
- Entity Coordinate System (ECS), 861–864
- entity interchange files (EIFs), 803
- entity interchange format files, 803
- Entity option with 3D rotating, 410
- entmake function, 821
- entmakex function, 821
- entmod function, 820
- entnext function, 817–818
- entsel function, 813
- Enumerated types, 767, 770, 770
- enumerations
 - icons for, 692, 692
 - as integers, **849**
- environment, VBA, **659–660**, 660
 - IDE. *See* IDE (Integrated Development Environment)
 - toolbox, **662–667**, 662
 - UserForm modules, **661–662**, 661
- EOF string, 808
- eq code, 641
- equal signs (=)
 - in comparison operators, 755
 - in Diesel, 641
 - in expressions, 732
- Erase command, 96
- Erase tool, 39, 39

- erasing. *See also* deleting
 - blips, 53
 - blocks, 283
 - icons, 621
 - lines, **95**
 - Wipeout objects, 579
- Esc (Escape) key, 35, 47, 99, 102, 132, 635
- eval code, 641
- event-driven processing, 774
- event procedures, 662, **674–678**, 675, 774–775
- events, 692, 692, **774–775**
- ex command, 104
- Excel files and programming, extracted data
 - for, 333
- exchanging data. *See also* exporting; importing
 - accessing databases for, **333–345**
 - Design Center for, **289–295**, 291–296
 - dragging and dropping for, **286–289**, 287–288
 - inserting drawings, **298–299**
 - linking databases for, **345–355**
 - Wblock for, **296–298**, 297
- exclamation points (!)
 - in Diesel, 641
 - for member references, 761
- Exclude Objects by Layer option, 539
- Exclude Selection tool, 598
- Existing Set option, 186
- exiting, 109
- Explode Attributes to Text tool, 575
- Explode tool, 40, 40
- Explode Text tool, 574
- exploding
 - attribute blocks, 326
 - blocks, 283
 - regions, 489
- exponents for real numbers, 852–853
- Export dialog box, 493
- Export options for layer states, 565
- exporting
 - attribute information, **327–333**
 - dimension styles, **599–600**, 599
 - layer states, 565
- Express menu, Tools menu
 - Dimstyle Export command, 599
 - Dimstyle Import command, 600
- Express toolbar, **561**
- Express Standard toolbar, **576–587**
- Express tools, **561**
 - for blocks, **575**
 - for command aliases, **588–590**
 - for dimensions, **599–600**
 - for extended clips, **590–591**, 591
 - for external references, **582–584**
 - for filleting polylines, **596–597**, 597
 - for full screen, **590**
 - for hatch patterns, **584–587**, 586–587
 - for labels, **572–574**, 573
 - for layers, **562–566**, 563–564
 - for line types, **592–594**, 592–593
 - for linked text documents, **571–572**
 - loading, **562**
 - for masking areas, **578–580**, 579–581
 - for moving, copying, and rotating objects, **576–577**
 - for polyline properties, **577–578**
 - for revision clouds, **581–582**, 582
 - for selection, **598–600**
 - for shapes, **594–596**, 595
 - for stretching objects, **576**
 - for text, **566–574**
 - for trimming objects, **577**
- expressions, **732–733**
 - in Diesel, 636
 - in Select case, 756–757
- Ext command, 436, 446
- Extend Beyond Dim Lines option, 202
- Extend Beyond Ticks option, 202
- Extend button, 104
- Extend command, **104–105**, 105, 132
- Extend tool, 39, 39
- Extend to Block Entities tool, 575
- Extended Clip tool, **590–591**, 591
- Extended Trim tool, 577, 577
- extending
 - in block objects, 575
 - lines, **104–105**, 105
- extension dictionaries, 820
- extension lines, 194, 194, 209, **211–213**, 212
- extensionDictionary function, 838
- extents, zooming to, 121
- exterior walls
 - lines for, **115–118**, 116–117
 - openings for, **127–132**, 127–131
- external databases
 - accessing, **333–345**
 - linking objects to, **345–355**
- external references
 - with associative dimensioning, 228
 - clipping, 590–591
 - Pack 'n Go feature for, **582–584**, 583–584

938 extracting attributes—Form Image option

extracting attributes, **327-333**

Extrude tool, 436, 436, 446

Extrude Faces tool, 467, 467

extruding

3D forms, **401-405**, 402-404

polylines, **436-437**, **445-449**,
446-448, 450

surfaces, **467-469**, 468

extrusions

on curved paths, **447-449**, 448, 450

tapering, **445-446**, 446-447

F

f command, 100

F1 function key, 82, 635, 728

faces, copying, **470-471**

Facetres system variable, 875

False values, 755

Favorites button, 290

feature control symbols, **247-248**

Fenceline line types, 647, 647

fences for selections, 67

File Link Manager, 503-504, 503, **528-530**, 529

editing in, **530-532**, 531

options in, **532-534**

File Link Settings dialog box, 499, 499, 504,
528, 529, 531, **534**

Attach tab, **535-537**, 536

for color, **534-535**, 535

DWG Linking tab, **538-548**, 538-539

Geometry tab, **537-538**, 537

for layers, **535**

File menu

Close command, 42, 95

Close and Return to AutoCAD command,
680, 704

Exit command, 109

New command, 42, 93, 476

Open command, 115

Print command, 722

Reset command, 528

Save command, 71, 680, 694, 916

Save As command, 44

Save Global1 command, 680

File Output Configuration dialog box, 917, 917

files

in Design Center, 291-293, 292-293

linking, **345-355**

names for, 44

project, **699-703**, 700-702

rendering 3D models to, **917-918**

saving, 71

types of, 917

Files tab, 339

Fillet command, **100-102**, 101, 456

vs. Offset, 118

vs. Trim, 122

Fillet tool, 40, 40, 456

filleting

macro for, 605

polylines, **596-597**, 597

rounding corners with, **456-457**, 457

Find and Replace dialog box, 569-571, 570

Find and Replace Options dialog box, 571, 571

Find and Replace tool, 569, 569

Find button, 290

Find command, 723

Find Whole Word Only option, 745

finding. *See* searching

FindMax function, 753-754

Fit options, 219-220

Fit tab, 203, 203

fixed-length strings, 735

flags, 850-851

flat trusses, 552, 552

flipping blocks, **259-260**, 260

floating items

Design Center, 291

Properties window, 267

toolbars, 14

Flood option, 186

floors with openings, **522-527**, 523-526

Flyout Properties dialog box, 623, 623

flyouts, 40-41, 40, **622-624**

fmBackStyleOpaque value, 770

fmBorders library, 743-744, 744

folders in Design Center, 291-293, 292-293

Font dialog box, 771, 771

Font property, 771

fonts, 160-161

for line types, 647-648

in VBA, 771, 771

foot signs (') in distance formats, 119

For loops, **757-759**

For Each loops, 759

foreach function, 815

Form Image option, 722

Format menu

- Align command, 720
- Dimension Style command, 196
- Make Same Size command, 720
- Text Style command, 160, 162
- Units command, 287
- Vertical Spacing command, 720
- Forms collection, 761
- Forms object model, **764–766**, 765
- fractions
 - for dimensions, 199
 - in distance formats, 119
 - in VBA, 692
- Frame controls, 664
- Frame Text option, 242
- Freeze Object Layer tool, 565
- Front UCS orientation, 364, 364
- front views, drawing, **475–479**
- Full Screen AutoCAD tool, **590**
- function keys in accelerator keys, 635
- functions, **781**
 - in Diesel, 636
 - parameter help for, 713, 713

G

- garage addition, **156–157**, 156
- Gas_line line type, 647, 647
- General Declarations section, 747, 752
- General object, 684, 684
- General properties for text, 167
- General tab
 - options on, **714**, 714
 - for ToolTips, 716
- Generate Mapping Coord. option, 534
- Geographic Location dialog box, 872, 872
- geometric tolerance annotations, 794
- Geometric Tolerance dialog box, 247–248, 247
- Geometry tab, **537–538**, 537
- Get Selection Set tool, 598, 600
- GetAngle method, 774
- getAt function, 834, 836, 838
- getBlockTable function, 833–834
- GetExtensionDictionary method, 829
- getGripPoints function, 837
- getGroupDictionary function, 838
- getIntoAsciiBuffer function, 857
- getNamedObjectsDictionary function, 838
- getRecord function, 835
- getvar function, 637–638, 641, 822–823
- GetVariable method, 830
- ghosting, 96
- .gif files, 917
- glass, mirror attribute for, **901–903**, 902–903
- glass doors, **147–155**, 147–154
- glazing, 269
- Global Attribute Edit tool, 575
- global changes to attributes, **319–326**, 323–325
- global objects, icons for, 692, 692
- Global1 project name, 717
- Graded Solid option, 506
- Graded Surface option, 506
- graphics
 - databases for, **350–351**
 - in line types, 647–648
- grayed menu items, 632, 710
- grayed-out pages, 532
- greater-than symbols (>)
 - in comparison operators, 753, 755
 - in Diesel, 641
 - in pull-down menus, 631
 - for text, 213–214
- grids and gridlines
 - in dimensions, **207**, 207
 - for icons, 621
 - options for, 714
 - in perspective views, 417, 418
- Grips feature, 69
 - for block detection, **264**
 - for copying objects, 76–77, 77
 - for dimensions, **216–218**, 217
 - for editing objects, **72–78**
 - for moving objects, **75–76**
 - in ObjectDBX, 837
 - for rotating objects, **76–77**, 77
 - for stretching objects, **73–75**, 74
 - summary of, **77–78**
 - for text, 166, 170, 170
 - for UCS, **366–367**
- group codes
 - in DXF files, 806–807
 - as integers, **849–850**
- guidelines for blocks, **274–275**, 274, 276
- GUIs
 - creating, **668–670**, 668
 - screen. *See* screen

940 Handle property—IDE (Integrated Development Environment)

H

Handle property, 830

handles

- for active controls, 667, 720
- in databases, **857**
- for objects, 792

hard owners, 793

hard pointers, 793

Hatch Edit dialog box, 182

Hatch Pattern Palette dialog box, 178, 178, 181–182, 181

hatch patterns, **173–174**

- adding, **174–176**, 175
- advanced options for, **184–186**, 184
- creating, **584–587**, 586–587, **649–653**, 650–653
- layers for, 174, 187
- matching, **187–188**
- modifying, **181–183**, 181, 183
- position of, **176–179**, 177–178
- predefined, 178–179
- size of, **179–180**
- and space planning, **188–191**, 190
- standard, 650
- tips for using, **187**

Hatch tool, 40, 40, 174

HEADER sections, 809

height

- of dimension text, **199–200**
- of text, 161, 307
- of UserForms, 767

Height property, 767

help

- for buttons, 619
- for commands, **78–83**, 79–81
- context-sensitive, **82**
- for Diesel, 640–641
- for icons, 621
- sources of, **82–83**
- for toolbars, 613
- for VBA, 712, **725–728**, 726–728

Help menu

- AutoCAD Help Topics command, 82
- Help command, 78
- Microsoft Visual Basic Help command, 726, 734

help messages for menus, **632–634**

Help Topics dialog box, 640

Help window, 726, 726

hexagons, dimensioning, **235–239**, 236–238, 240

hidden lines

- in 3D models, 443–444, 444
- in viewports, **482–484**, 484

HIDDEN linetypes, 643

Hide command, 444

Hide Labels command, 354

Hide Origin Point Helper option, 537

hiding labels, **354**

highlighting, 60, 61, 96

History button, 290

history of commands, 83–84, 84

Home dimension text option, 215

horizontal dimensions, **209–210**, 210

horizontal lines, 46

hot grips, 73–75, 74, 77

Hot_water_supply line type, 647

hotkeys, 30

hyphens (-)

- in Diesel, 641
- in distance formats, 119
- in line type patterns, 644–645
- in pull-down menus, 631–632

I

i command, 257, 313

IACADentity interface, 829

IAcadObject interface, 829

Icon Editor tool, 619

icons, 104

- creating, **620–622**
- deleting, 623
- for UCS, **19**, 19, 360, **370–371**
- in VBA, 692, 692

ID names for menu items, 633–634

IDE (Integrated Development Environment), **659–660**, **707–708**, 709

code commands in

- for debugging, **724**
- for editing, **723–724**
- for running code, **725**

help in, **725–728**, 726–728

menu bar in, **708–710**, 709

options in, **710–711**, 711

Editor, **711–714**

- General, **714**, 714, 716

Print command in, **721–722**, 722

- running macros from, **696**
- toolbars in, **715**
 - Debug, **718, 718**
 - Edit, **717, 718**
 - standard, **715-716, 715**
 - UserForm, **719-721, 719**
- identifiers in symbol tables, 789
- identifying objects, **792-793**
- IEEE Standard 754-1985, 853
- If statements
 - in Diesel, 641
 - in VBA, 677-678
- If...Then... blocks, **753-754**
- If...Then...Else... blocks, **755-756**
- Ignore options, 185
- Image control, 665
- implicit links, **793-794**
- Import AutoCAD DWG File dialog box, 515, 515, 525-526, 525, 537, 553, 554
- Import menu, AutoCAD DWG command, 537
- Import options for layer states, 565
- importing
 - 3D models, **477-479, 478**
 - dimension styles, **600, 600**
 - layer states, 565
 - for VIZ
 - plans, **514-521, 515-522**
 - trusses, **552-555, 552-555**
- Imprint tool, 473
- inches, 119
- Indent command, 723-724
- indenting code lines, 714, 723-724
- index entries in help, 726
- Index tab, 82, 726, 726
- index values
 - for arrays, 739-740
 - for collections, 762
- Inherit Properties option, 184
- input with menus, **630-631**
- Inquiry toolbar, 14-15, 14
- Ins key in accelerator keys, 635
- Insert Block tool, 39, 39, 256, 313
- Insert button, face of, **715-716**
- Insert command, 257
- Insert dialog box, 473, 477
 - for attributes, 313
 - for blocks, 256-257, 256, 259
- Insert menu
 - Block command, 257, 472, 477
 - File Link Manager command, 503, 528
 - Linked DWG command, 499
 - Module command, 685, 727
 - UserForm command, 661, 668
- Insert Units drop-down list, 297
- inserting
 - blocks, **256-258, 256-258, 312-315**
 - drawings, **298-299**
- Insertion cursor, 688
- insertion points for blocks, 253, 258
- instances of classes, 761
- instantiation in ObjectARX, 831
- integers in databases, **844-845**
 - disguised, **848-851**
 - signed, **845-848**
- Integrated Development Environment. *See* IDE (Integrated Development Environment)
- interfaces in ActiveX Automation, **825-826**
- interference with primitives, 431
- interior lighting, **889-892, 890-892**
- interior walls
 - lines for, **118-126, 119-126**
 - openings for, **130-131, 130-131**
- Interpolate Points options, 507
- Intersection Osnap option, 63
- intersections
 - for base points, 63
 - cleaning up, 122
 - of primitives, 430, 433
- intrinsic constants, **742-746, 742-745**
- invisible attributes, 311, **322, 323**
- “is a kind of” relationships, 795
- isConstant function, 851
- isInvisible function, 851
- Island Detection
 - method for, 186
 - styles for, **185**
- isNull function, 838
- ISO format and standards for dimensions, 234-235
- ISO-25 style, 195, 234-235
- Isolate Objects Layer tool, 565
- isolines, **444-445**
- Isolines system variable, 445
- isometric views, **481-482, 482**
- italic text, 161
- Item method, 825
- iterating through containers, **834-836**

942 jams—libraries

J

jams, 126
 joining primitives, **440-444**, 441-444
 Julian dates, 855
 Just_G line type, 647
 Justification option, 164
 justification points, **164-165**, 164-165
 Justify option, 163

K

Keep Dim Line With Text option, 220
 keyboard for commands, **30**
 keyboard macros, **602-605**, 603
 Keycad.LSP file, 604-605, 605
 keys
 in dictionaries, 790
 in symbol tables, 789
 keyword color, **689**

L

L command, 94
 Label controls, 663
 Label Fields tab, 352-353, 352
 Label Template dialog box, 352-353, 352
 labels. *See also* text
 Diesel for, **639-641**
 hiding, **354**
 with links, **351-354**
 updating, **572-574**, 573
 landscape, **910-915**, 911-912, 914-915
 Landscape Edit dialog box, 915
 Landscape New dialog box, 910-911, 910, 913
 Landscape New tool, 910, 910
 large toolbar buttons, 613
 last objects, selecting, 67
 Last options
 with 3D rotating, 410
 in selecting, 67
 Layer, Thickness option, 536
 Layer, Thickness, Color option, 536
 Layer Delete tool, 566
 Layer Manager tool, 563-565, 563
 Layer Merge tool, 566
 Layer option, 536

Layer Properties Manager dialog box, 562
 for hidden lines, 483
 for layer states, 562-563
 Layer property, 830
 Layer State Name dialog box, 563
 layer table, 788
 Layered Solid option, 504, 505-506
 layers
 for blocks, 252
 deleting, **566**
 for hatch patterns, 174, 187
 for materials, 882
 names for, 563
 objects for controlling, **565-566**
 saving and recalling settings for, **562-565**,
 563-564
 with Setup Drawing tool, 485
 in Symbol Tables container, 788
 in Viz, **535-536**
 Layers collection, 826
 Layers property, 825
 layout blocks, 821-822
 Layouts collection, 764
 Le command, 240
 Leader Line & Arrow tab, **242-243**
 Leader Line option, 243
 Leader Settings dialog box, 241, 241
 Annotation tab, **242**
 Attachment tab, **244**, 244
 Leader Line & Arrow tab, **242-243**
 leaders for dimensions, 220, **240-244**,
 243-244, 247
 leading zeros, 50
 Learning Assistance option, 83
 Left UCS orientation, 364, 364
 length of chords, 56
 length units in databases, **854**
 Lengthen tool, 39, 39
 less-than symbols (<)
 for angles, 48
 in comparison operators, 753, 755
 in Diesel, 641
 in pull-down menus, 631
 for text, 213-214
 libraries
 constants in, 743-744
 icons for, 692, 692
 for materials, 880-881, 880
 for ObjectARX, 831

- lifetime of variables, **748–752**
 - lighting effects, **888–889**
 - interior lighting, **889–892**, 890–892
 - night scene lighting, **892–893**, 894–895
 - scenes for, **895–899**, 896–899
 - Lights dialog box, 871, 871, 874–875, 890, 893
 - Lights tool, 870, 870, 875
 - .lin extension, 644
 - Line button, 93
 - Line command, 44, **92–94**, 92–93, 132
 - line feeds, 807
 - line groups, **649–653**
 - LINE string, 811
 - Line tool, 39, 39, 44, 44
 - line types
 - creating, **592–594**, 592–593, **644–648**, 645–647
 - in ObjectDBX, 837
 - in Symbol Tables container, 788
 - viewing, **642**, 643
 - Linear Dimension tool, 209, 211, 237
 - LineDetails type, 752
 - lines
 - cleaning up, **121–122**, 121–122
 - closing, 51
 - for dimensions, 209, 210
 - drawing, **44–46**, 45, **92–94**, 92–93
 - erasing, **95**
 - extending, **104–105**, 105
 - extruding objects along, **401–402**, 402–403
 - offsetting, **102–103**, 103
 - stretching, **73–75**, 74
 - trimming, **105–109**, 106–109
 - with UCS, 379
 - for walls
 - exterior, **115–118**, 116–117
 - interior, **118–126**, 119–126
 - Lines And Arrows tab, 201–204, 202
 - lines of text in command window, **17–18**, 17–18
 - Linetype command, 642, 644
 - linetype function, 837
 - Linetype Manager, 593
 - linetype table, 788
 - Linetypes collection, 826
 - lineweights as integers, **850**
 - Link and Label Settings tool, 348, 351, 354
 - Link Manager dialog box, 354–355, 355
 - Link Select dialog box, 349–350, 349
 - Link Template dialog box, 346–347, 346
 - link templates, **346–347**, 346
 - Linked Files list box, **532**
 - linked text documents, **571–572**
 - linking objects, **793–794**
 - links
 - creating, **345–348**, 346, 348
 - editing, **354–355**, 355, **530–532**, 531
 - File Link Manager for. *See* File Link Manager
 - finding objects through, **349–351**, 349–350
 - labels with, **351–354**
 - list boxes of objects and procedures, 673–675, 675
 - List command, **264–267**, 265
 - List tool, 83–84
 - List Entity Xdata tool, 601
 - List Xref/Block Entities tool, 575
 - ListBox controls, 663
 - Load button in Design Center, 290
 - Load/Unload Applications dialog box, 701, 703
 - loading
 - Express tools, **562**
 - menus, **626–629**, 627–628
 - project files, **699–703**, 700–702
 - local character sets, 856
 - local variables, 747
 - location of hatch patterns, **176–179**, 177–178
 - Lock Objects Layer tool, 566
 - logarithms for real numbers, 852
 - logical operators in help searches, 80
 - long lines in menus, 632
 - loop counters, 759
 - loops, **757**
 - For, **757–759**
 - While, **759**
 - .lsp extension, 604
 - LUNITS setting, 849
- ## M
- macros, 659–660, **683–684**, **775–776**
 - with AutoLISP, **602–605**, 603
 - for buttons, 619–620
 - code for, **687–694**
 - Diesel language for, **636–641**
 - for menus, 626, **632**
 - running, **696–697**, 696–697
 - saving, **604–605**, **694–695**, 695
 - standard modules in, **685–687**, 685–686
 - starting applications from, **703–704**

944 Macros dialog box—ModelSpace property

- Macros dialog box, 685–686, 685, 696–697, 696
- Make Block command, 252
- Make Block tool, 39, 39, 254
- Make Linetype tool, **592–594**, 592–593
- MakeShape.dwg file, 594
- mantissas, 852–853
- mapcar function, 815
- Mapping dialog box, 907, 907
- Mapping tool, 907, 907
- masking
 - text backgrounds, **566–569**, 568
 - Wipeout tool for, **578–580**, 579–581
- mass of solids, 491–492, 492
- Mass Properties tool, 491–492
- Massprop command, 491
- Match Objects Layer tool, 565
- Match Properties tool, 187–188
- matching hatch patterns, **187–188**
- Materials dialog box, 880–883, 880, 901, 905–906
- materials for rendering, **879–885**, 880–886
- Materials Library dialog box, 880–881, 880, 889
- Materials tool, 880, 880
- matrices, two-dimensional arrays for, 740
- Maximize icon, 289
- Maximum Elev. option, 507
- Mclose option, 407
- measurement units, 10–11, 10
 - in databases, **854**
 - default setting for, 43
 - for dimensions, **197–199**, **204–206**, 205
- members of classes, 761, 797
- memory
 - for data types, 734, 737
 - for string types, **735**
 - for variables, 747
- Menu Bar tab, 627–628, 628
- Menu Customization dialog box, 627–629, 627–628
- Menu Groups tab, 627, 627
- menu option labels, **639–641**
- menus
 - accelerator keys in, **634–635**
 - cascading, **631**, **710**
 - for commands, **29–30**, 29, **629–630**, 660
 - creating, **626**
 - Diesel for, **638**
 - dividing lines on, 632
 - files for, **624–625**
 - help messages for, **632–634**
 - loading, **626–629**, 627–628
 - long lines in, 632
 - operation of, **629–635**
 - pull-down, **12–13**, 12–13, **29–30**, 29
 - right-click, **58–59**, 58–59
 - submenus, **632**
 - in VBA, 660, **708–710**, 709
- Merge Object with Current Design option, 515, 525
- meshes
 - editing, **405–408**, 406
 - settings for, **397–398**, 397
- methods
 - icons for, 692, 692
 - of objects, **773–774**, 796
- Metric-Imperial Converter application
 - captions in, **671–673**, 671
 - code window for, **673–678**, 673–675
 - GUI for, **668–670**, 668
 - running, **678–679**, 679
 - saving, **679–680**, 679–680
- mi command, 144
- MicroCAD, 803
- Microsoft Form objects, **764–766**, 765
- Microsoft Forms collection, **765**
- Middle justification option, 164
- Minimum Elev. options, 507
- minus signs (-)
 - in Diesel, 641
 - in distance formats, 119
 - in line type patterns, 644–645
 - in pull-down menus, 631–632
- mirror attribute for glass, **901–903**, 902–903
- Mirror command, 76, **143–145**, 144, 226
- mirror lines, 144
- Mirror tool, 39, 39, 144
- mirroring
 - objects, **143–145**, 144
 - with UCS, 394, 394
- missing properties, **798**
- mistakes, correcting, 47, **132**
- MKLTYPE dialog box, 592, 592
- MKSHAPE dialog box, 594
- .mns extension, 625
- .mnu extension, 624
- *MODEL_SPACE block, 790–791, 816–818
- ModelSpace collection, 761, 764
- ModelSpace property, 826

- Modemacro system variable, 636–637
 - Modify Dimension Style dialog box, 206, 486
 - Modify Distant Light dialog box, 875, 876, 903
 - Modify Granite Material dialog box, 883, 883, 885
 - Modify menu
 - 3D Operation menu
 - Align command, 408
 - Rotate 3D command, 410, 452
 - Boolean menu
 - Subtract command, 489
 - Union command, 489
 - Clip menu
 - Image command, 591
 - Xref command, 591
 - Copy command, 142
 - Erase command, 96
 - Extend command, 104
 - Fillet command, 100
 - In-place Xref command, 284
 - Mirror command, 144
 - Object menu
 - Attribute menu, Block Attribute Manager command, 323
 - Attribute menu, Global command, 320
 - Attribute menu, Single command, 317
 - Polyline command, 407
 - Text menu, Edit command, 213
 - Offset command, 98, 116
 - Polyline command, 375
 - Rotate command, 137
 - Solids Editing menu
 - Subtract command, 443
 - Union command, 441
 - Text command, 165–167, 171
 - Trim command, 105
 - Modify Spotlight dialog box, 898
 - Modify Standard Material dialog box, 884–885, 884, 901–902
 - Modify tab, 548
 - Modify toolbar, **38–40**, 93, 93
 - Modify Zones option, 508
 - modifying. *See* editing
 - module-level scope, **748**
 - modules
 - icons for, 692, 692
 - VBA, 661
 - More menu
 - Adjust command, 418
 - Adjust Clipping Planes command, 423
 - Swivel Camera command, 422
 - More Options dialog box, 901
 - Move Copy Rotate tool, 576
 - Move Down option, 325–326
 - Move Faces tool, 460–461, 460
 - Move Text, Add Leader option, 220
 - Move Text, No Leader option, 220
 - Move tool, 39, 39, 60, 69–71
 - Move Transform Type-in dialog box, 517
 - Move UCS origin tool, 395
 - Move Up option, 325–326
 - moving
 - arcs, 68–69
 - blocks, 283
 - dimension text, **200–201**, 201, **219–221**, 219, 221
 - with grips, 72, **75–76**
 - Move Copy Rotate tool for, **576–577**
 - objects, **65**, 66, **75–76**
 - surfaces, **460–462**, 461–462
 - in UCS, **366–367**, 367–368, 380
 - vertices, 226
 - Wipeout objects, 579
 - mtxt, **168–171**, 168–170
 - mullions, 555
 - multidimensional arrays, **740**
 - multiline text, **168–171**, 168–170
 - Multiline Text Editor, 168–171, 169, 214, 214
 - Multiline tool, 39, 39
 - Multiline Text tool, 40, 40
 - MultiPage controls, 664–665
 - multiple dimensions, editing, **215**
 - Multiple Entity Stretch tool, 576, 576
 - Multiple Pedit tool, 578–579, 579
 - Multiple selection option, 67
- ## N
- Name property for controls, 668, 672
 - named objects, 286
 - named objects dictionary, 820
 - Named UCSs tab, 365, 366
 - Named View tab, 385
 - Named Viewports tab, 372–373, 373
 - namedobjdict function, 820
 - names
 - attributes, 326
 - buttons, 619
 - controls, 665, 668, 672
 - drawings, **22**

946 Nclose option—ObjectARX environment

- entities, **815–816**
 - event procedures, 775
 - files, 44
 - icons, 621
 - layers, 563
 - line types, 644
 - macros, 686
 - objects, 659
 - text styles, 161
 - toolbars, 613–614
 - UCS, 365–366
 - in VBA, **736**
 - capitalization of, 689–690
 - constants, 741
 - Nclose option, 407
 - Nearest Osnap button, 268
 - negative numbers
 - for arcs, 146
 - integers, 845–846
 - nesting
 - If statements, 754
 - VIZblocks, 536
 - New Command Alias dialog box, 589, 589
 - New Dimension Style dialog box, 196, 196–197
 - Alternate Units tab, 204–206, 205
 - Fit tab, 203, 203
 - Lines And Arrows tab, 201–204, 202
 - Primary Units tab, 197–199, 198
 - Text tab, 199–201, 200
 - New Distant Light dialog box, 871, 871
 - new drawings, **42–47**
 - New Label Template command, 353
 - New Label Template dialog box, 353
 - New Label Template tool, 351–353, 351
 - New Link Template command, 346
 - New Link Template dialog box, 346, 346
 - New Link Template tool, 346
 - New menu, Text Document command, 336
 - New options
 - for boundary sets, 186
 - for toolbars, 613
 - New Point Light dialog box, 890–891, 890
 - New Query dialog box, 342, 342
 - New Record command, 344
 - New Scene dialog box, 896, 896
 - New Spotlight dialog box, 893
 - New Standard Materials dialog box, 906
 - New Text Style dialog box, 161, 161
 - New Toolbar dialog box, 614, 614
 - New View dialog box, 385
 - New Viewports tab, 371, 372
 - newBlockReferenceIterator method, 836
 - newIterator function, 835–836, 838
 - newsgroups, 607–608
 - Next clauses, 758
 - night scene lighting, **892–893**, 894–895
 - non command, 281
 - nonorthogonal objects, dimensions for, **234–239**, 236–238, 240
 - Normal hatch pattern style, 185
 - normal vectors, **862–863**
 - normalized vectors, 859
 - normals, 538
 - North Location dialog box, 874, 874
 - not equal to operator (<>), 753, 755
 - notes
 - for arrows and dimensions, **240–244**, 243–244
 - linked text documents for, **571–572**
 - in Paper Space, **485–487**
 - noun/verb selection method, **68–72**
 - Number of Points leader option, 243
 - Number of Sides polygon prompt, 235
 - number signs (#), 746
- ## O
- o command, 98, 116
 - Object Browser, **742–746**, 742–745
 - Object Coordinate System (OCS), 861
 - Object lists, 673
 - Object options for slices, 456
 - object-oriented programming. *See* ObjectARX environment; ObjectDBX environment
 - Object Osnap tab, 233–234
 - Object Selection cursor, 54, 54
 - Object-Selection mode, 60
 - Object Snap flyout, 135
 - Object Snap tab, 133–134, 134
 - Object Snap toolbar, 147–148
 - Object Snaps (Osnaps). *See* Osnap Tracking and overrides
 - Object Type rollout, 541
 - object types
 - adding, **913**
 - for hatch patterns, **185**
 - Object UCS tool, 377, 378
 - ObjectARX environment, 602, **830–831**
 - container iteration in, **834–836**

- for database access, **831–832**
- objects in, **832–834**
- ObjectDBX environment
 - angles in, 854
 - binary data in, 865
 - Booleans in, 851
 - character sets in, 856
 - colors in, 850
 - coordinate systems in, 861–862
 - database settings in, **839**
 - dates in, 855
 - dictionaries in, **838**
 - entity handling in, **836–837**
 - enumerations in, 849
 - group codes in, 849
 - handles in, 857
 - integers in, 845–848
 - pointers in, 857
 - points in, 858
 - real numbers in, 852
 - result buffers in, **839**
 - strings in, 855
- ObjectIDs, 792
- ObjectName property, 827
- objects, **760**. *See also* entities
 - in ActiveX Automation, **825–826**
 - aligning, **408–409**, 409
 - associating dimensions with, **228–231**, 229–230
 - in AutoLISP, **820–822**
 - blocked. *See* blocks
 - classes of, **760–761**
 - collections of, **761–762**
 - converted to blocks, 263
 - copying, **141–143**, 142–143
 - covered, **798–799**
 - in databases, **787–788**
 - combining into blocks, **790–791**
 - dictionaries, **789–790**
 - embedding, 794
 - identifying, **792–793**
 - linking, **793–794**
 - pointers for, **857–858**
 - symbol tables, **788–789**
 - for defining surfaces, **398–399**, 400–401
 - deselecting, 61
 - drawing, 673, **762**, 763
 - Application object, **762**
 - Documents collection, **763–764**
 - in DXF, **810–812**
 - editing, **72–78**, **224–226**, 224
 - extruding
 - along circular surface, **403–405**, 404
 - along straight lines, **401–402**, 402–403
 - finding, **349–350**, 349
 - for layer control, **565–566**
 - Microsoft Forms, **764–766**, 765
 - mirroring, **143–145**, 144
 - moving, **65**, 66, **75–76**
 - named, 286
 - names of, 659
 - nonorthogonal, dimensions for, **234–239**, 236–238, 240
 - in ObjectARX, **832–834**
 - overlapping, 92, 92, **189–191**, 190
 - properties of, **84–85**, 85, **796–798**
 - rotating. *See* rotating
 - selecting, **59–62**, 61–62
 - base points for, **62–66**
 - noun/verb method, **68–72**
 - options for, **66–68**
 - stretching, **73–75**, 74, **576**
 - trimming, **577**
 - unblocking, 283
- Objects option, 297
- OBJECTS sections, 810
- oblique angle for dimension text, 215
- Oblique Angle option, 162
- oblique dimension lines, 245
- Oblique options, 215
- OCS (Object Coordinate System), 861
- ODBC (Open Database Connectivity), **334**, 338–339, 338
- ODBC Microsoft Access Setup dialog box, 338–339, 338
- Offset command, **97–100**, 98–99, 116
 - distance with, **100**, 119
 - errors with, 132
 - vs. Fillet, 118
- Offset Faces tool, 462, 462
- Offset from Dim Line option, 201, 201
- Offset From Origin option, 202
- Offset tool, 39, 39
- offsets
 - in databases, **859–860**
 - for dimensions, 194, 194
 - for lines, **102–103**, 103

948 One Object option—Pack & Go dialog box

- for surfaces, **462**, *463*
 - for UCS orientation, **379–380**, *380*
 - One Object option, *536*
 - One-to-One option, *536*
 - online Help facility, *712*
 - online services, **607–608**
 - Open a Drawing option, *4*, *115*
 - Open Database Connectivity (ODBC), **334**, *338–339*, *338*
 - Open Drawings button, *290*
 - Open-DWG Alliance, *840–841*
 - open mode, *833*
 - Open VBA Project dialog box, *700*, *700–702*
 - Open Visual Basic Editor option, *700*
 - openBlockBegin function, *836*
 - openBlockEnd function, *836*
 - opening
 - bitmap files for icons, *621*
 - databases, **340–341**
 - drawings, **4–5**, *4–6*
 - objects, **701**, **832–834**
 - toolbars, **616–617**
 - openings
 - floors with, **522–527**, *523–526*
 - marking, **102–103**, *103*
 - walls, **126–132**, *127–131*
 - operands in VIZ, *505*
 - operators in Diesel, *636*
 - Option Base statement, **740**
 - Option Explicit statement, **737–738**
 - OptionButton controls, *664*
 - options, choosing, **55–59**, *57*
 - Options dialog box
 - for associative dimensions, *227*
 - for background color, *15*, *16*
 - for command windows, *17–18*
 - for crosshair cursor, *20*, *20*
 - for Data Link files, *339*
 - for grips, *264*
 - for isolines, *445*
 - for keyword color, *689*, *689*
 - for right-clicking, *34*
 - for scrollbars, *17*
 - for smoothness, *875*
 - for VBA, **711**, *711*
 - Editor tab, **711–714**
 - General tab, **714**, *714*, *716*
 - for Option Explicit, *738*
 - Or command, *245*
 - order of controls, **779–781**
 - Ordinate Dimension tool, *246*, *246*
 - ordinate dimensions, **245–247**, *246*
 - orientation
 - of dimension text, *201*
 - with UCS, **377–381**, *378*, *380*, *382*, **383–384**, *384*
 - of VIZblocks, *537*
 - Origin UCS tool, *364*, *364*, *380*
 - origins
 - for dimensions, *194*, *194*
 - for hatch patterns, *177*
 - for line groups, *651*, *652*
 - in ordinate dimensions, *245–246*
 - for UCS, *245–246*, *365*, *365*, *370*, **378–381**, *380*
 - in WCS, *860*
 - Ortho button, *138*
 - orthogonal projections, *475*
 - Orthogonal views, **478–479**, *480*, *515*
 - Orthographic UCSs tab, *363–365*, *363*
 - Osnap Flyout toolbar, *147–148*
 - Osnap marker, *54*, *54*
 - Osnap menu, *63–65*
 - Osnap Tracking and overrides, *54*, *135*
 - for base points, *63–64*, *64*
 - for center of circles, *307*
 - for dimensions, **233–234**
 - disabling, *60*
 - for polylines, *388*, *389*
 - in UCS, *367*
 - Other Predefined tab, *181–182*, *181*
 - Outdent command, *724*
 - Outer hatch pattern style, *185*
 - Over the Dimension Line, with a Leader
 - option, *204*
 - Over the Dimension Line, without a Leader
 - option, *204*
 - overlapping objects
 - display order with, **189–191**, *190*
 - lines, *92*, *92*
 - Override option, *505*
 - ownership for links, *793*
- ## P
- p-code, *732*
 - in debugging, *724*
 - options for, *714*
 - Pack & Go dialog box, *582–583*, *583*

- Pack 'n Go feature, **582-584**, 583-584
- Pack 'n Go tool, 582, 582
- Palette tab, 769, 769
- Pan button, 276-277
- panning in perspective views, **416-417**
- paper clip symbols for linked files, 532
- Paper Space, dimensions in, **485-487**
- *PAPER_SPACE block, 791, 816-818
- PaperSpace property, 826
- Parameter Info feature, 773, 773
- parameters, **781-782**
 - help for, 713, 713
 - for methods, 773, 773
 - for terrains, **505-506**, 505
- Parameters rollout, **505-506**, 505
- parentheses ()
 - for arrays, 738
 - in Diesel, 636-637
 - for functions, 604
 - for methods, 774
- Parquet tile pattern, 178
- Paste command, 723
- Paste tool, 289
- patterns
 - hatch. *See* hatch patterns
 - for line types, 644
- pause function, 604
- pausing
 - in AutoLISP programs, 605
 - for input in menus, **630-631**
- PCX files, 917
- people in 3D models, **913-915**, 914-915
- periods (.), 50, 853
- Perpendicular Osnap, 154
- perspective views, **411-415**
 - animation in, **427**
 - camera in, **418-423**, 419-423
 - clipping planes in, **423-426**, 424-426
 - turning on, **416-417**, 416
 - visual aids in, **417**, 418
 - zooming in, 419, 420
- PHANTOM linetypes, 643
- Photo Raytrace Render Options dialog box, 901
- Photo Real Render Options dialog box, 877-878, 878
- Pick Operand rollout, **505**, 505
- Pick Point setting, 255
- pick points
 - with attributes, 307
 - with hatch patterns, 178, 187
- pickboxes, 32-33, 32-33, 96
- picking. *See* selecting
- Pin Riser Count setting, 542-544
- plan views, 48
- planar entities, 862
- plans for VIZ
 - importing, **514-521**, 515-522
 - setting up, **508-514**, 509-513
- Pljoin command, 597
- Pljoin.dwg file, 597
- PlotConfigurations collection, 829
- plus signs (+)
 - in Diesel, 636, 641
 - in menus, 631
- point filters, blips with, **277-280**, 279
- point lists, **858-859**
- Point Selection cursor, 54, 54
- point selection mode, 47
- point style, macro for, 605
- Point tool, 39, 39
- pointer arrow, 26
- pointers
 - in databases, **857-858**
 - for links, 793
- points
 - coordinates for, 92-93, 858-859
 - in databases, **858-864**
 - for dimensions, **216**
 - indicating, **62-66**
 - selecting, 44-45
 - with UCS, 379
- Pol command, 235
- Polar button, 46
- polar coordinates, **48-49**, 49, **97**
- Polar Tracking feature, 46, 54, 54
- Polygon tool, 39, 39, 235
- polygons, dimensioning, **235-239**, 236-238, 240
- Polyline tool, 39, 39, 436
- Polyline Join tool, **596-597**
- polylines
 - for 3D views, 375-376, 377
 - extruding, **436-437**, **445-449**, 446-448, 450
 - filleting, **596-597**, 597
 - for hatch patterns, 186
 - for meshes, **388**, 389
 - properties of, **577-578**
 - revolving, **450-454**, 451-454
 - for solid modeling, **436-440**, 437-440
 - with UCS, 379

950 position—question marks (?)

- position
 - arcs, 139
 - hatch patterns, **176–179**, 177–178
 - menu bar and toolbar, 708
 - text boxes, 719
 - toolbox controls, **666–667**
 - PostScript files, 917
 - pound signs (#), 746
 - precision of real numbers, 852
 - Precision option, 198
 - predefined hatch patterns, 178–179
 - Preferences dialog box, 54
 - prefixes for constants, 743
 - Preserve Access to Individual Objects option, 535–536
 - Preset attribute option, 312
 - preset values, changing properties with, **767–770**, 768–770
 - Preview button, 290, 293
 - previewing
 - blocks, 293–294, 294
 - images, 5, 5
 - Previous options
 - for selections, 65, 67
 - in zooming, 125
 - Primary Units tab, 197–199, 198
 - primitives, 430–432, 432, **438–440**, 438–440
 - boolean operations with, 430–433, 433
 - creating, **434–436**, 435–436
 - extruding polylines for, **445–449**, 446–448, 450
 - joining, **440–444**, 441–444
 - revolving polylines for, **450–454**, 451–454
 - Print-ACADProject dialog box, 722, 722
 - Print Setup dialog box, 722, 722
 - printing UserForms, **721–722**, 722
 - private scope, **747**
 - private-module level scope, **748**
 - procedure level scope, **747**
 - Procedure lists, 673–675, 675
 - procedures, **776–779**, 776
 - declaring, 677
 - event, 662, **674–678**, 675, 774–775
 - static, 748
 - processTwoValues procedure, 782
 - Product Support on Point A option, 82
 - Profiles tool, 12
 - program statements, **732**
 - programs, **782**
 - Project Explorer window, **716–717**, 717
 - project files
 - icons for, 692, 692
 - loading, **699–703**, 700–702
 - Projection menu, Perspective command, 416
 - Prompt for Width option, 242
 - Prompt Only If File Cannot Be Found option, 539
 - prompts, 27
 - for attributes, 304, 306, 310
 - for commands, **30–32**, 31–32
 - responding to, **55–59**
 - properties and Properties dialog box, **767**
 - for attributes, 309–310, 309–310, 318–319, 318, **323–326**, 323–325
 - for block detection, **266–267**, 267
 - for captions, 671–672, 671
 - changing values of, **767–773**, 768–772
 - defined vs. calculated, **797**
 - for dimension text, 219–220
 - for flyouts, **622–624**
 - for hatch patterns, **182–183**, 183
 - icons for, 692, 692
 - missing, **798**
 - for objects, **84–85**, 85, **796–798**
 - for polylines, 375, **577–578**
 - for solids, **491–492**, 492
 - for text, **166–168**, 166–167, 171
 - for toolbars, 612–613
 - Properties tool
 - for dimensions, 213
 - importance of, **248**
 - Property Settings dialog box, 188, 188
 - proxies, 913
 - ptx macro, 605
 - public scope, **747**
 - public-module level scope, **748**
 - pull-down menus, **12–13**, 12–13, **29–30**, 29
 - purging drawings, 298
- Q**
- Qdim command, 231
 - Query Editor dialog box, 342–343, 342
 - Query for Selections option, 918
 - Query tool, 342
 - question marks (?)
 - for linked files, 532
 - as wildcard characters, 746

Quick Dimension tool, 231
 Quick Leader tool, 240
 Quick Query tab, 342–343, 342
 Quick Setup Wizard, **9–11**, 9–11, 42–43, 43
 quotation marks (")
 in distance formats, 119
 in macros, 604
 in VBA, 688

R

r command, 282
 radians for angles, 854
 radii
 for arcs, 139
 dimensions for, **239**, 240
 with Fillet, 100–101
 Radius Dimension tool, 239
 Radius of Circle prompt, 235
 Range frame, 722
 ranges
 of characters in databases, **856–857**
 of real numbers, 852
 raster images, clipping, 590–591
 Ray Casting option, 185
 Ray Trace shadow method, 875
 Ray Tracing, **900–904**, 902–904
 Raytrace Rendering Options dialog box, 920
 real numbers, **852–855**
 rec command, 134
 recalling layer settings, **562–565**, 563–564
 records
 in databases, **341–344**
 in dictionaries, 789–790
 Rectangle command, 134–135
 Rectangle tool, 39, 39
 redefining blocks, **326–327**
 Redo command, 47, 723
 Redo tool, 47
 Redraw command, 280, 282
 Redraw tool, 53, 905
 Refedit toolbar, 285
 Reference Edit dialog box, 284, 284
 Reference Elev. option, 507
 reflections in 3D models, **900–904**, 902–904
 reflectivity for materials, 883
 Reg command, 489
 reg flags, 532
 Regen command, 53
 regeneration, controlling, 53
 Region.dwg drawing, **489**, 490–491
 Region tool, 40, 40, 489
 Region Zoom tool, 519
 regions, 470–471, **488–489**, 490–491
 registered application table, 788
 RegisteredApplications collection, 826
 relative coordinates, **48–52**, 49–52, **95–97**, 96
 Reload button, **533**
 Remote Text objects, 572–574
 Remove Islands option, 184
 Rename options
 for attributes, 326
 for UCS, 366
 renaming
 attributes, 326
 drawings, **22**
 toolbars, 613
 UCS, 366
 Render dialog box, 869, 873, 916–919
 Render tool, 869, 869, 873
 Render toolbar, 868
 Render window, **916–917**, 916
 Renderable option, 554
 Rendered Object Smoothness setting, 875
 rendering 3D models, **867–868**
 background scenes for, **886–887**, 886–888
 Elevation view in, 921, 922
 to files, **917–918**
 landscape and people in, **910–915**, 911–912, 914–915
 lighting effects for, **888–899**, 890–892, 894–899
 materials for, **879–885**, 880–886
 Ray Tracing in, **900–904**, 902–904
 to Render window, **916–917**, 916
 resolution settings in, **919–920**, 919
 setting up for, **868–869**, 869–870
 shadows in, **875–879**, 876–879
 smoothing images in, **920–921**, 921
 sunlight angle for, **870–874**, 871–874
 texture maps for, **904–908**, 905–907, 909
 Repeat command, 102
 repeating code, loops for, **757**
 For, **757–759**
 While, **759**
 repetitive tasks. *See* macros
 Replace command, 723
 replacing text, **569–571**, 570–571

952 Report dialog box—saving

- Report dialog box, 584, 584
 - Require Variable Declaration option, 712, 738
 - Rescale to Match Units option, 537
 - Reset command, 725
 - resizing
 - text boxes, **719–721**
 - windows, 708
 - resolution in rendering 3D models, **919–920**, 919
 - Resolve External Reference File dialog box, 539, 539
 - Resolve External References (Xrefs) option, 539
 - resource files, 625
 - Restart List command, 265
 - restarting commands, 102
 - result buffers, **839**
 - Retain option, 263
 - Retain Boundaries option, 185
 - Retriangulate option, 506
 - returning to AutoCAD, **680–681**
 - Reuse Current annotation option, 242
 - Reuse Next annotation option, 242
 - Rev command, 451
 - revising. *See* editing
 - Revision Cloud tool, 581, 581
 - revision clouds, **581–582**, 582
 - Revolve tool, 451, 451
 - Revolved Surface tool, 403, 403
 - revolving polylines, **450–454**, 451–454
 - Right-Click Customization option, 34
 - right-clicking, 30
 - for ending commands, **34**
 - menu options in, **58–59**, 58–59
 - right-hand rule, 860
 - right-side views, **475–479**
 - Right UCS orientation, 364, 364
 - Riser Ht setting, 542, 544
 - ro command, 137
 - root dictionaries, 789–790
 - Rotate command, 76, 137, 226
 - Rotate Faces tool, 464–465, 465
 - Rotate method, 773, 773
 - Rotate option, 215
 - Rotate tool, 39, 39, 137
 - rotating
 - in 3D space, **410**, 452–453, 453
 - blocks, 258, 258, **271–273**, 272–273, 283
 - dimension text, 215, **221–222**
 - dimensions, 226, 237, 237
 - doors, **137–138**, 138
 - with grips, **76–77**, 77
 - line types, 648
 - Move Copy Rotate tool for, **576–577**
 - perspective views, 414, 414
 - stairs, 544
 - surfaces, **464–465**, 465
 - text, 163, 165
 - UCS, **366–367**, 367–368, **381–383**, 382, 448
 - Rotation option, 163, 165
 - roughness for materials, 883
 - rounding corners, **100–102**, 101, **456–457**, 457
 - rounding numbers, 813, 853
 - rows, database, 334, **341–344**
 - Rtext command, 572–573
 - rubber banding, **44–45**, 45, 52
 - Ruled Surface tool, 399, 399
 - ruled surfaces, **398–399**, 400–401
 - Run menu, Sub/UserForm command, 678, 725, 728
 - Run Sub/UserForm tool, 696
 - run time vs. design time, **767**
 - RunMetricToImperialConverter procedure, 703–704
 - running
 - applications, **678–679**, 679
 - code, **725**
 - macros, **696–697**, 696–697
 - Running Osnaps, 60
- ## S
- Save As dialog box
 - for attribute data, 332
 - in VBA, 680, 680, 695, 695
 - Save button, 21, 21
 - Save Drawing As dialog box, 21–22, 21, 44
 - Save/Save As option, 533
 - Save UCS with Viewport option, 371, 385
 - saving
 - applications, **679–680**, 679–680
 - attribute data, **332–333**, 332
 - drawings, **21–22**, 21–22
 - files, 71
 - icons, 621
 - layer settings, **562–565**, 563–564
 - macros, **604–605**, **694–695**, 695
 - rendered views, 916–917
 - UCS, **365–366**, 366

- Savoye-ground.dwg file, 508
- Scale command, 76
- Scale tool, 39, 39
- scaling
 - blocks, 257, 283
 - dimensions, 234, 486
 - with inserting, 313
 - materials, 883
- Scene tool, 895, 895
- Scenes dialog box, 895, 896, 899
- scenes for lighting, **895–899**, 896–899
- scope, **746**
 - procedure level, **747**
 - public vs. private, **747**
 - Static keyword in, **748–751**, 749
 - UserForm and module-level, **747–748**
- screen, **11–12**
 - cleaning up, **53**
 - command window, **17–18**, 17–18
 - crosshair cursor, **20**, 20
 - drawing area, **15–17**, 16
 - scrollbars, **17**
 - status bars, **18–19**, 18–19
 - title bars and pull-down menus, **12–13**, 12–13
 - toolbars, **13–15**, 14–15
 - UCS icon, **19**, 19
- Screen Coordinate System (SCS), 861
- ScrollBar controls, 665
- scrollbars
 - turning off, **17**
 - on UserForms, 665
- SCS (Screen Coordinate System), 861
- Search Results pane, 745
- Search tab, **80–82**, 80–81
- Search the Web For option, 81
- searching
 - for blocks, **264–267**, 265
 - for database records, **341–344**
 - for files, 290
 - in help system, **80–82**, 80–81
 - with Object Browser, **744–746**
 - for objects, **349–350**, 349
 - for text, **569–571**, 570–571
- Second Point option, 140
- SECTION string, 809
- Section tool, 487, 487
- sections
 - drawing, **487**, 488
 - in DXF files, 809
- seek function, 835
- Select All command, 727
- Select and Move tool, 517–519, 544, 550
- Select and Rotate tool, 544
- Select by Name tool, 500, 516
- Select Case statement, **756–757**
- Select Color dialog box, 473, 474
- Select Data Source dialog box, 337–338, 337
- Select Drawing File dialog box, 477
- Select File dialog box, 5, 5, 115
- Select File to Import dialog box, 514, 525
- Select Layers dialog box, 539, 539
- Select Menu File dialog box, 627
- Select Object dialog box, 500
- Select object to offset: prompt, 98, 116
- Select Object tool, 520, 526
- Select Objects control, 663
- Select Objects dialog box, 516–519, 530
- Select Objects: prompt, 104–105
- Select Project dialog box, 686
- Select Shape File dialog box, 594
- Select Text File dialog box, 572
- selecting
 - cutting edges, 151–152, 152
 - Express tools for, **598–600**
 - menus, 627
 - objects, **59–62**, 61–62
 - base points for, **62–66**
 - noun/verb method, **68–72**
 - options for, **66–68**
 - points, 44–45
 - previous selections, 65
 - right-click menu options, **58–59**, 58–59
 - with subtraction, **598–599**
- Selection tab, 264
- Selection Tools menu, Get Selection Set command, 600
- semicolons (;), 630
- sentinel strings, 808
- Separate tool, 474
- separating divided solids, **474**, 474
- sequencing in DXF files, 806
- serialization with DXF. *See* DXF (Drawing Interchange Format) files
- setAt function, 838
- setCecolor function, 839
- setColor function, 837
- setLinetype function, 837
- Settings dialog box, 325, 325

954 Setup Choices dialog box—solids and solid modeling

- Setup Choices dialog box, 562
- Setup Drawing tool, 485
- Setup option, 722
- Setup Profile tool, 482–484
- Setup View tool, 478–482
- setvar function, 822–823
- SetVariable method, 830
- shading in perspectives, 417, 418
- Shading Modes menu
 - Gouraud Shaded command, 427
 - Hidden command, 417
- Shadow Map method, **875–879**, 876–879
- Shadow Options dialog box, 876–877, 876, 879, 903
- Shadow Volumes/Ray Trace Shadows option, 903
- shadows
 - adding, **875–879**, 876–879
 - Ray Tracing for, **903–904**, 904
- shape definitions, 594
- shapes
 - closing, 95
 - creating, **594–596**, 595
 - grips for editing, 72
 - for line types, 648, 649
 - with UCS, 379
- sharing information. *See also* exporting; importing
 - accessing databases for, **333–345**
 - Design Center for, **289–295**, 291–296
 - dragging and dropping for, **286–289**, 287–288
 - inserting drawings, **298–299**
 - linking databases for, **345–355**
 - Wblock for, **296–298**, 297
- sharpness of materials, 885
- Shelf Specification application, 776–779, 776
- Shell tool, 469, 469
- shells, turning solids into, **469**, 470
- Shift key
 - in accelerator keys, 634–635
 - for base points, 63
- shortcut menus, 34, 58–59, 59
- Show Labels command, 354
- Show Options option, 533
- Show ToolTips option, 613, 716
- .shx extension, 648, 798
- sides of openings, 127
- signed integers in databases, **845–848**
- Simplification rollout, **506–507**, 506
- single-line text
 - inserting, **162–164**, 163
 - justification points for, **164–165**, 164–165
 - properties of, **166–168**, 166–167
 - wording of, **165–166**, 165
- single quotes (')
 - in distance formats, 119
 - in VBA, 688
- Single selection option, 68
- size
 - arcs, 139
 - crosshair cursor, **20**, 20, 54
 - drawings, 10–11
 - grips, 73
 - hatch patterns, **179–180**
 - shadow maps, 876, 878–879, 879
 - text, 161
 - text boxes, **719–721**
 - toolbox controls, **666–667**
 - windows, 708
- skeleton procedures, 775
- skewing
 - dimension lines, **244–245**, 245
 - UCS, 382–383
- Skip Hatches and Points option, 539
- slashes (/)
 - in Diesel, 636, 641
 - for options, 56
- Slice command, 454
- Slice tool, 454, 454
- sliding glass doors, **147–155**, 147–154
- Smooth surface option, 407
- smoothness
 - in 3D models, **920–921**, 921
 - of arcs and circles, **874–875**
- Snapbase system variable, 177, 179
- soft owners, 793
- soft pointers, 793
- softness of shadows, 879
- Solid command, 179
- Solid hatch pattern, 179
- Solid to Top of Zone option, 508
- Solidedit command, **471–472**
- solids and solid modeling, **430–432**
 - for 2D drawings, **488–489**, 490–491
 - chamfering in, **458–459**, 458–459
 - command line for, **471–472**
 - copying faces and edges on, **470–471**
 - creating primitives for, **434–436**, 435–436

- deleting surfaces, **463–464**, 464
- extruding surfaces, **467–469**, 468
- moving surfaces, **460–462**, 461–462
- offsetting surfaces, **462**, 463
- polylines for, **436–440**, 437–440
- properties of, **491–492**, 492
- with regions, **488–489**, 490–491
- rotating surfaces, **464–465**, 465
- rounding corners on, **456–457**, 457
- separating divided solids, **474**, 474
- splitting, **454–456**, 455
- stereolithography in, **492–493**
- surface features for, **472–474**, 473
- tapering surfaces, **466**, 466–467
- turning solids into shells, **469**, 470
- with UCS, 379
- Solids toolbar, 434, 434
- Solids Editing toolbar, 440, 440
- source text files, 625
- space planning and hatch patterns, **188–191**, 190
- spaces
 - in attribute values, **321**
 - in distances, 119
 - in fixed-length strings, 735
 - in hatch patterns, 175
- special characters, 171
- Specify base point or displacement: prompt, 142
- Specify first corner point: prompt for rectangles, 134
- Specify first part of mirror line: prompt, 144
- Specify first point: prompt, 94
- Specify insertion point: prompt, 277–278
- Specify next point: prompt, 94
- Specify offset distance: prompt, 97, 100
- Specify On Screen option, 257, 477
- Specify other corner point: prompt, 136
- Specify point on side to offset: prompt, 98
- Specify rotation angle: prompt, 157, 258
- Specify second part of mirror line: prompt, 144
- Specify second point of arc: prompt, 140
- Specify second point of displacement: prompt, 142
- Specify start point of arc: prompt, 139
- Sphere tool, 439
- spheres, 430, 432, 439, 439
- spherical coordinate format, **387–388**
- SpinButton controls, 665
- Spiral Stair option, 543
- spiral stairs, **543–545**, 544
- Spline option, 549
- Spline Rendering Group option, 534
- Spline tool, 39, 39
- splines for topography, **498–502**, 498–502
- splitting solids, **454–456**, 455
- spotlights, **892–893**, 894–895, 898, 898–899
- spreadsheet files, extracting data for, 333
- square brackets ([])
 - for line types, 647–648
 - for menu items, 633–635
- ssget function, 813
- STA (Stereolithograph Apparatus), 493
- stairs
 - circular, **543–545**, 544
 - finishing, **545–546**, 545–547
 - parameters for, **542–543**, 542
 - tracing over imported lines, **540–542**, 541
 - walls for, **547–552**, 548–551
- Standard cursor, 53, 54
- Standard dimension style, 195, 195
- standard hatch patterns, 650
- standard line types, **642**, 643
- standard modules, **685–687**, 685–686
- standard symbols, 55, 55
- Standard text style, 160
- Standard toolbar, 14, 708, **715–716**, 715
- standard windows, 69–71, 70
- Start from Scratch option, 6
- start-section brackets, 809
- starting applications from macros, **703–704**
- starting points for arcs, 139, 146
- StartPoint property, 827
- startup, loading projects at, **701–702**, 702
- Startup dialog box, **4**
 - for new drawings, **6–8**, 6–9
 - opening drawings in, **4–5**, 4–6
- Startup Suite dialog box, 701–702, 702
- StartupPosition property, 768, 768
- statements, **732**
- Static keyword, **748–751**, 749
- status bars, **18–19**, 18–19
- step function, 835
- Steps clause, 758
- stereolithography, **492–493**
- Stitch Border option, 506
- .stl extension, 493
- Stlout command, 493
- Stretch command, **73–75**, **224–226**
- Stretch tool, 39, 39, 224–226

956 stretching—terrains

- stretching
 - dimensioned objects, **224–226**, 224
 - lines, **73–75**, 74
 - objects, **576**
 - strings
 - in binary DXF files, 807
 - concatenating, 698
 - in databases, **855–857**
 - of dimensions, **231–232**, 232
 - memory for, **735**
 - Style option, 163
 - styles
 - for arrows, **201–204**, 202–203
 - for dimensions, **194–207**, **218–223**, **599–600**, 599–600, 788
 - for Island Detection, **185**
 - for text, **160–162**, 160–161, 788
 - Su command, 443
 - Sub-Object button, 552
 - Sub statement, 688, 776
 - submenus, **632**
 - Subtract tool, 443, 443
 - subtraction
 - of primitives, 430, 431, 433, **443–444**, 444, 489
 - selection with, **598–599**
 - Sun Angle Calculator dialog box, 871–873, 872
 - sunlight angle
 - for 3D models, **870–874**, 871–874
 - for windows, 271
 - Super Hatch tool, **584–587**, 585
 - SuperHatch dialog box, 585–587, 585
 - Support Assistance option, 83
 - surfaces, **385**
 - adding features to, **472–474**, 473
 - curved, **389–396**, 391, 393–395, 397
 - defining, **398–399**, 400–401
 - deleting, **463–464**, 464
 - edges of, 389–390, **396**
 - extruding, **467–469**, 468
 - laying out forms for, **385–388**, 386–387
 - mesh settings for, **397–398**, 397
 - modeling, **429–430**
 - moving, **460–462**, 461–462
 - offsetting, **462**, 463
 - polylines for, **388**, 389
 - rotating, **464–465**, 465
 - tapering, **466**, 466–467
 - Surfaces toolbar, 396, 396
 - Surftab1 system variable, 397, 402, 405
 - Surftab2 system variable, 397, 405
 - Surftype system variable, 407
 - swinging doors, **133–141**, 135–136, 138, 140
 - SwitchIt1 procedure, 749–751
 - SwitchIt2 procedure, 749–751
 - Symbol Tables container, **788–789**
 - symbolic constants, **741–742**
 - symbols and symbol tables, 171
 - in AutoLISP, 821
 - in databases, **788–789**
 - in expressions, 732
 - standard, 55, 55
 - syntax errors, **711–712**, 711–712, 732
 - SYSCODEPAGE setting, 856
 - System tab, 768–769, 769
- ## T
- T intersections, cleaning up, 122
 - Tab Delimited File option, 332
 - tab order, **779–781**
 - Tab Width setting, 714
 - TabIndex property, 781
 - tables
 - database, 334
 - two-dimensional arrays for, 740
 - TABLES sections, 809
 - tabs, spaces for, 714
 - TabStrip controls, 664
 - Tabulated Surface tool, 401, 401
 - tags
 - for blocks, 306, 309, 320
 - in DXF files, 806
 - Taper Faces tool, 466, 466
 - tapering
 - extrusions, **445–446**, 446–447
 - surfaces, **466**, 466–467
 - Targa files, 917
 - tblnext function, 816, 818
 - tblobjname function, 815–817
 - TDINDWG setting, 855
 - Template folder, 7
 - templates
 - for drawings, **7–8**, 8–9
 - link, **346–347**, 346
 - temporary tracking points, 135
 - terrains
 - options for, **504–505**, 504
 - Color by Elevation rollout, **507–508**, 507

- Parameters rollout, **505–506**, 505
- Pick Operand rollout, **505**, 505
- Simplification rollout, **506–507**, 506
- splines for, **498–502**, 498–502
- updating, **502–504**, 502–504
- text, **159**
 - for attributes, 307
 - backgrounds for, **566–569**, 568
 - for dimensions, 194, 194
 - appending data to, **213–214**
 - height of, **199–200**, 200
 - location and orientation of, **200–201**, 201
 - moving, **219–221**, 219, 221
 - rotating, **221–222**
 - styles for, **218**
 - tool for, **223**
 - editing, **566–574**
 - finding and replacing, **569–571**, 570–571
 - height of, 307
 - in line types, 647–648
 - multiline, **168–171**, 168–170
 - single-line, **162–168**, 163–167
 - style for, **160–162**, 160–161, 788
 - in title bars, 672
 - for ToolTips, 716
 - with UCS, 379
- text boxes and TextBox controls,
 - 663, **665–667**
 - position of, 719
 - size of, **719–721**
- text documents, linked, **571–572**
- Text Fit tool, 574
- text justification points, 164
- text lines in command window, **17–18**, 17–18
- Text Mask tool, 567, 567
- Text Options group, 307
- Text Options tab, 318, 318
- Text Style dialog box, 160–162, 160
- text style table, 788
- Text tab, 199–201, 200
- Text Window, **83–84**, 84, 264–265, 265
- TextBox_KeyDown procedure, 675–676
- TextBox1_KeyDown procedure, 675–676, 678
- TextBox1_KeyPress procedure, 778
- TextBox2_KeyDown procedure, 676
- TextBox2_KeyPress procedure, 778
- TextBox3_KeyPress procedure, 778
- TextStyles collection, 826
- texture. *See* hatch patterns
- texture maps, **904–908**, 905–907, 909
- TGA format, 917
- thickness
 - for trusses, 554
 - for VIZblocks, 536
- Thickness setting, 554
- third-party software, **605–607**
- ThisDrawing object, 673, **684–685**, 684, 764
- three-dimensional arrays, 740
- Through option, 100
- THUMBNAILIMAGE sections, 810
- .tif extension and tiff files, 917
- tildes (~), 632
- tiled viewports, 371
- Time function, 698–699
- timers, 855
- times
 - in databases, **854–855**
 - retrieving, 698–699
- title bars, **12–13**, 12–13
 - color of, 670
 - text in, 672
 - in VBA, 661, 708
- title blocks, 476
- titles, menu, 629
- .tlb libraries, 802
- Toggle Breakpoint buttons, 718
- ToggleButton controls, 664
- Tol command, 247
- Tolerance dialog box, 242
- tolerance symbols, **247–248**, 247
- Tolerance tool, 247
- Toolbar command, 616
- toolbar flyouts, **28–29**, 28
- Toolbar menu, Inquiry command, 14
- Toolbar properties dialog box, 612–613, 613
- toolbars
 - buttons on, **26–27**, 26–27, **618–624**
 - creating, **614–616**
 - docking, **13–15**, 14–15
 - flyouts with, 40–41, 40
 - opening from command line, **616–617**
 - options for, **612–614**, 612–613
 - in VBA, 708, 709, **715**
 - Debug, **718**, 718
 - Edit, **717**, 718
 - standard, **715–716**, 715
 - UserForm, **719–721**, 719
 - working with, 41
- Toolbars dialog box, **561**, **612–614**, 612

958 toolbox controls—U command

- toolbox controls, **662–667**, 662
 - dimensions and position of, **666–667**
 - placing in UserForms, **665–667**
 - Toolbox icon, 662
 - tools, 104
 - Tools menu
 - Attribute Extraction command, 328
 - Customize Menu command, 627
 - dbConnect command, 340
 - Display Order menu
 - Bring to Front command, 189
 - Send to Back command, 189, 191
 - Drafting Settings command, 133, 233
 - Inquiry command, 83, 264
 - List Entity Xdata command, 601
 - Load Application command, 701, 703
 - Macro menu
 - Load Project command, 700, 703
 - Macros command, 685, 696
 - VBA Manager command, 701
 - Visual Basic Editor command, 660
 - Move UCS command, 381
 - Named UCS command, 365, 370
 - New UCS menu
 - Object command, 377
 - Origin command, 380, 450
 - View command, 481
 - World command, 450, 487
 - Y command, 448
 - Z Axis Rotate command, 381
 - Options command. *See* Options dialog box
 - Orthographic UCS command, 447
 - Preferences command, 54
 - UCS menu
 - 3 Point command, 390
 - Named UCS command, 390, 481
 - Origin command, 245
 - World command, 386
 - Z Axis Vector command, 382
 - in VBA, **710–711**
 - Xdata Attachment command, 601
 - ToolTips, 4, 613
 - for flyouts, 28, 28
 - options for, 714
 - text for, 716
 - for toolbars, 14, 26
 - VBA, 725
 - Top UCS orientation, 364, 364
 - top views, **475–479**
 - Topics Found dialog box, 734, 734
 - topography
 - options in, **504–508**, 504–507
 - splines for, **498–502**, 498–502
 - updating, **502–504**, 502–504
 - tori, 430, 432, 439, 439
 - Torus tool, 439
 - tr command, 105
 - Trace UCS option, 379
 - tracing over imported lines, **540–542**, 541
 - tracking for blocks, **276–277**
 - Tracks line type, 647
 - trailing spaces, 735
 - Transform gizmo, 550
 - transparency of materials, 883–884
 - transparent commands, 143
 - Tree View, 290–291
 - trees in 3D models, **910–915**, 911–912, 914–915
 - Trim tool, 39, 39
 - Trim to Block Entities tool, 575
 - trimming, 105
 - in blocks, 575
 - Edgemode variable for, 152
 - errors with, 132
 - vs. Fillet, 122
 - lines, **105–109**, 106–109
 - objects, **577**
 - picking lines with, 124
 - zooming for, 122–124, 123
 - True Associative Dimensioning, **227–232**, 227–230
 - True values, 755
 - trusses, **552–555**, 552–555
 - TTF files, 798
 - tubes, modeling, 430, 431–432
 - tubular trusses, 553, 553
 - Turn Objects Layer tool, 566
 - two-car garage, **156–157**, 156
 - two-dimensional arrays, 740
 - Txtpath.lsp tool, 574
 - Type keyword, 752
 - type libraries, 802
 - Type option, 175
 - types. *See* data types
- ## U
- U command, 47, 515
 - with grips, 75
 - for selecting, 61, 102

- UCS (user coordinate system), **360**, 360, 860
- controlling, **377**
 - defining, **361–365**, 362, 364
 - icon for, **19**, 19, 360, **370–371**
 - mirroring with, 394, 394
 - moving in, **366–367**, 367–368
 - orientation of, **377–381**, 378, 380, 382, **383–384**, 384
 - origins for, 245–246, 365, 365, 370, **378–381**, 380
 - rotating, **366–367**, 367–368, **381–383**, 382, 448
 - saving, **365–366**, 366
 - in Symbol Tables container, 788
 - working in, **366–371**, 367–369
- UCS command, 245, 377, 380, 384
- UCS Control dialog box, 481
- UCS dialog box, 365–365, 363, 366, 370, 370
- UCS toolbar, 363, 363
- UCS II toolbar, **395**, 395
- unblocking objects, 283
- Uncheck All button, 329
- Uncomment Block button, 717
- underscores (_)
- for commands, 31
 - in line type patterns, 644–645
 - in names, 775
- Undo button and command, 723
- for icons, 621
 - for lines, 102, 107
 - for object selection, 67
 - for Trim and Extend, 132
- Undo tool, 47
- for grips, 75
 - for selecting, 61
- ungrouping blocks, 283
- Uni command, 441
- Unicode character set, 856
- Unify Normals option, 515, 538
- Union tool, 441, 441
- unions of primitives, 430, 433, 441, 442, 489
- unit vectors, 859
- Units dialog box, 42–43, 43
- units of measurement, 10–11, 10
- in databases, **854**
 - default setting for, 43
 - for dimensions, **197–199**, **204–206**, 205
- Unlock Objects Layer tool, 566
- Unnamed option, 365–366
- Up button, 290
- Update View to Plan When UCS is Changed option, 371
- updating
- DrawText macro, **698–699**
 - labels, **572–574**, 573
 - VIZ changes, **502–504**, 502–504
- Use 1/2 of Lines option, 507
- Use 1/2 of Points option, 506
- Use 1/4 of Lines option, 507
- Use 1/4 of Points option, 506
- Use a Template option, 476
- Use a Wizard option, 9
- Use Background option, 901
- use first point as displacement option, 63–64
- Use Overall Scale Of option, 203
- User Coordinate System object, 537
- user coordinate system table, 788
- User Coordinate Systems. *See* UCS (user coordinate system)
- user-defined hatch patterns, 175
- User Defined options, 175
- user-defined types, 692, 692, **752**
- user input in menus, **630–631**
- User Preferences tab
- for associative dimensions, 227
 - for right-clicking, 34
- UserCoordinateSystems collection, 826
- UserForm modules, **661–662**, 661
- UserForm scope, **747–748**
- UserForm toolbar, **719–721**, 719
- UserForms, 661, 661
- placing toolbox controls in, **665–667**
 - printing, **721–722**, 722
- ## V
- values
- displaying, 713
 - in expressions, 732–733
- variables, **733–735**, 733
- arrays of, **738–740**
 - declaring, 712, **734–738**
 - displaying values of, 713
 - lifetime of, **748–752**
 - scope of, **746–752**, 749
 - static, 748
- Variant type, 735–736
- vb prefix, 743

960 VBA (Visual Basic for Applications)—viewports

- VBA (Visual Basic for Applications)
 - for ActiveX Automation, 824
 - applications in, 658, **782-783**
 - running, **678-679**, 679
 - saving, **679-680**, 679-680
 - starting from macros, **703-704**
 - captions in, **671-673**, 671
 - code window for, **673-678**, 673-675
 - coding in. *See* coding in VBA
 - constants in, **740-746**, 742-745
 - data types in, **733-735**, 733
 - for arrays, 690, 738-739
 - defining, **752**
 - memory for, 734, 737
 - environment for, **659-660**, 660
 - IDE. *See* IDE (Integrated Development Environment)
 - toolbox, **662-667**, 662
 - UserForm modules, **661-662**, 661
 - expressions in, **732-733**
 - GUIs, creating, **668-670**, 668
 - macros in. *See* macros
 - project files in, **699-703**, 700-702
 - returning to AutoCAD, **680-681**, **697**
 - statements in, **732**
 - variables in
 - arrays of, **738-740**
 - declaring, **734-738**
 - scope in, **746-752**, 749
- VBA Manager dialog box, 701
- vbaide command, 660
- vectors in databases, **859-860**
- Verify option, 312
- verifying attributes, 307, 312
- Vertex option, 548
- vertical dimensions, 200, **209-210**, 210
- vertical lines, 46
- vertices
 - for 3D meshes, 407
 - for curves, 548-550, 549-551
 - moving, 226
- View Aligned option, 912
- View AutoCAD button, 680, 680
- View Control dialog box, 319
- View Linked Objects in Drawing tool, 350
- View Linked Record in Table tool, 349
- View menu
 - 3D Views menu
 - Front command, 477
 - Plan View command, 385
 - SE Isometric command, 481
 - Select command, 435
 - SW Isometric command, 362
 - Camera command, 411
 - Code command, 661
 - Display command, 19, 19
 - Hide command, 443
 - Named View command, 312, 385
 - Object command, 661, 674
 - Object Browser command, 743
 - Paper Space command, 477, 481
 - Project Explorer command, 688, 704, 717
 - Properties Window command, 671
 - Redraw command, 280, 910
 - Redraw View command, 53
 - Render menu
 - Landscape Edit command, 915
 - Landscape New command, 910
 - Lights command, 870, 875, 890, 893, 903
 - Mapping command, 907
 - Materials command, 880, 883, 901-902, 905
 - Render command, 869, 873
 - Scene command, 895, 899
 - Set UCS command, 384
 - Shade menu
 - 2D Wireframe command, 369
 - Hidden command, 369
 - Toolbars command, 715
 - Toolbox command, 662
 - User command, 515
 - Viewports command, 371-372
 - Views command, 515
 - Zoom command, 361
- View Selections hatch pattern option, 184
- View slice option, 456
- view table, 788
- View UCS tool, 384, 384
- viewing
 - built-in constants, **742-746**, 742-745
 - line types, **642**, 643
- Viewpoint Presets dialog box, 435, 435
- viewpoints, 435
- viewport table, 788
- viewports
 - for 3D drawings, **371-376**, 373-375, 377
 - hidden lines in, **482-484**, 484

for standard views, **477–479**, 478
 in Symbol Tables container, 788
 Viewports collection, 826
 Viewports dialog box, 371–372, 371, 373
 views
 with 3D rotating, 410
 perspective. *See* perspective views
 for solid modeling, 435
 standard, **475–479**
 in Symbol Tables container, 788
 Views button, 290
 Views collection, 826
 visibility of attributes, **322**, 323
 Visibility property, 850–851
 Visible property, 767
 Visual Aids menu
 Compass command, 417
 Grid command, 417
 Visual Basic for Applications. *See* VBA (Visual
 Basic for Applications)
 Visual Basic Reference dialog box, 726, 726, 734,
 765, 765
 Visual C++ language, 831
 visualization of blocks, 790
 VisualLISP language, 812
 VIZ, **497–498**
 elevations and wall profiles in, **527–528**
 File Link Manager in. *See* File Link
 Manager
 floors with openings in, **522–527**, 523–526
 options in, **504–508**, 504–507
 plans for
 importing, **514–521**, 515–522
 setting up, **508–514**, 509–513
 stairs in
 circular, **543–545**, 544
 finishing, **545–546**, 545–547
 parameters for, **542–543**, 542
 tracing over imported lines,
 540–542, 541
 walls for, **547–552**, 548–551
 for topography, **498–502**, 498–502
 trusses in, **552–555**, 552–555
 updating changes in, **502–504**, 502–504
 VIZblocks, **534–538**
 vl-load-com function, 824
 Volumetric Shadows, 875
 Vpoint command, 435

W

W command, 226
 Walker, John, 803
 walls
 exterior, **115–118**, 116–117
 interior, **118–126**, 119–126
 laying out, **114**, 115
 openings for, **126–132**, 127–131
 in VIZ
 profiles for, **527–528**
 for stairs, **547–552**, 548–551
 Wblock command, **296–298**, 297
 WCS (world coordinate system), 360, 360,
 860–864
 Wedge tool, 439–440
 wedges, 430, 432, 439–440, 440
 Weld option, 537
 Wend clause, 759
 What's New option, 83
 When Rendering option, 506
 While loops, **759**
 width
 of polylines, 578
 of text, 161
 Width Factor setting, 161
 Width property, 767
 wildcard characters, **746**
 window blocks
 creating, **267–270**, 268–270
 inserting, **271–283**, 272–274, 276, 279, 282
 Window menu
 open drawings on, 289
 Tile Vertically command, 286
 Window options, 67
 Window Polygon option, 67
 Window Polygons, 67, 226
 windows
 appearance of, 271
 crossing, **69–71**, 224–226, 224
 for cutting edges, 151–152, 152
 mullions for, 555
 resizing, 708
 for selecting objects, 61–62, 62, 67, **69–71**,
 70–71
 Windows Render Options dialog box, 916, 916
 Wipeout object, **567–569**
 Wipeout tool, **578–580**, 579

962 Wizards for new drawings—zoom windows

Wizards for new drawings, **9–11**, 9–11
 Wizards option, 42
 word-wrap, 162
 wording of single-line text, **165–166**, 165
 world coordinate system (WCS), 360, 360,
 860–864
 World Wide Web (WWW) sites, **607–608**
 WP command, 226
 Write Block dialog box, 296–298, 297
 www.autodesk.com site, 606–607
 www.cadence.com site, 608
 www.omura.com site, 608
 www.sybex.com site, 608

X

x axes, UCS for, 19
 X Axis Rotate option, 381
 x coordinates
 for points, 92, 858–859
 in status bar, 18
 X scale factor for blocks, 258
 Xaxis option, 410
 Xdata Attachment tool, 601
 Xdatum option, 246
 XY/YZ/ZX slice option, 456

Y

y axes, UCS for, 19
 Y Axis Rotate option, 381
 y coordinates
 for points, 92, 858–859
 in status bar, 18
 Y scale factor for blocks, 258

Y scale factor: prompt, 257
 Yaxis option, 410
 Ydatum option, 246

Z

Z Axis Rotate UCS tool, 381, 381
 Z Axis Vector UCS tool, 382–383, 383
 Z buffer shaded models, 869
 z command, 123
 z coordinates
 for points, 858–859
 in status bar, 18
 Z factor for blocks, 258
 Zaxis option
 with 3D rotating, 410
 with slicing, 456
 zeros
 in dimension text, 199
 with fractions, 692
 leading, 50
 Zigzag line type, 647
 Zones by Base Elevation list, 501–502, 508
 Zoom command and zooming
 with hatch patterns, 187
 in perspective views, 419, 420
 for trimming, 122–124, 123
 Zoom Extents, 121
 Zoom Previous, 125, 259–260
 Zoom Extent tool, 549
 Zoom Extents tool, 40–41, 40, 540
 Zoom Extents All tool, 543, 545
 Zoom Window flyout, 40
 Zoom Window option, 123, 259
 zoom windows, 123, 123, 259–260