



Index

• Numerics •

- 3X zoom, 14
- 10X zoom, 14–15
- 35mm equivalent, 15

• A •

- Action mode
 - for animal subject, 97
 - at big event, 93
 - description of, 12, 64
- Add Items option (Windows DVD Maker), 300, 302
- address label, 28
- Adobe Photoshop Elements, 132
- AF Illuminator, 54–55
- AF (Auto Focus) mode, 54–55
- all-in-one printer, 228
- Alt key (Windows Live Photo Gallery), 197
- Analyze button (Adjust Detail option), 219
- angles, shooting from
 - unexpected, 76–78
- animal, as subject, 97–98
- antishake feature, 15–16, 67
- Aperture option (Info pane), 169
- Aperture priority mode, 116, 118–119

- aperture size
 - Automatic mode and, 111–112
 - controlling, 118–119
 - importance of, 113
 - lighting and, 115
 - measurement of, 114
 - shutter speed and, 115–116
- archival quality photo paper, 229
- Arrange by button (Windows Live Photo Gallery), 176
- arrow keys, 37, 46
- Ascending button (Windows Live Photo Gallery), 176
- aspect ratio
 - description of, 51–52
 - of digital picture frame, 281–282
- Attach files dialog box (Windows Live Photo Gallery), 254–255
- attaching photo to e-mail, 253–256
- audio, recording video and, 41
- author, e-mail address of, 4
- Author option (Info pane), 168
- Auto adjust option (Fix menu), 206

- Auto Focus (AF) mode, 54–55
- Automatic (Auto) mode
 - aperture size, shutter speed, and, 111–112
 - at big event, 93
 - flash and, 74
 - menu choices in, 47–48
 - using, 32–34
- automatic scene mode, 8
- AutoPlay dialog box (Windows Live Photo Gallery), 152–153
- auto-review setting, 57

• B •

- background, including or excluding, 71
- backing up photos, 187–190
- Backlight mode, 65
- backup software, 188
- bag, for camera, 23
- battery
 - installing, 27
 - types of, 13, 23
- battery charger, 23
- battery power for digital picture frame, 284
- Beach mode, 100–101
- Beep setting, 49–50
- big event, planning
 - photos at, 92–94
- bird, as subject, 95–97

- Black and white (B&W) mode, 121
- black and white photo shooting, 123–124
 - turning color photo into, 215–217
- book of photos, creating online
 - book style, 308
 - Collect Pictures screen, 311, 313–314
 - Edit Pages screen, 314–316
 - Join Shutterfly screen, 310–311
 - Organize Pictures screen, 313, 315
 - overview of, 307–318
 - paper pattern, 309
 - Preview book screen, 317
 - Quantity and Recipients screen, 317–318
 - reviewing, 316
 - Upload Pictures screen, 311–312
- book, Web site for, 4
- bracketing, 118, 123
- bridge camera
 - description of, 9–10
 - modes, 117
 - zoom lens of, 14
- brightness
 - digital picture frame and, 282, 289
 - of scene, 62
 - brightness setting for LCD and electronic viewfinder, 56–57
 - Brightness slider, 208–209, 211
- bug, extreme close-up of, 94–95
- Burn a Disc dialog box (Windows Live Photo Gallery), 242
- Burn button (Windows DVD Maker), 304
- burning data CD, 242–243
- Burst mode
 - description of, 34
 - landscape photo and, 101
 - portraits and, 82
- buying
 - accessories, 22–25
 - memory card, 16–17, 22
 - printer, 227–229
 - buying camera
 - features, deciding on, 11–18
 - price range, 10–11
 - researching on Web, 18–20
 - in store, 20–22
 - types of, 8–10
- B&W (Black and white) mode, 121
- C •
- cable
 - to connect camera to printer, 231
 - to connect computer and camera, 150–152
 - description of, 22
 - for printer, 228–229
- calendar, on digital picture frame, 284
- camera
 - printing directly from, 231
 - setting up, 25–28
 - types of, 8–10
- Camera option (Info pane), 168
- caption, creating, 167
- card reader, 23
- Casio camera, compact, point-and-shoot, 8
- CD
 - copying photo to, 241–243
 - printing from, at in-store kiosk, 243–244
- CD-R compared to CD-RW, 241
- center focus, 16
- center-point focus, 120
- center-weight metering, 119
- Change default autoplay options (Windows Live Photo Gallery), 150
- Cheat Sheet, 18
- Choose the programs you want to install dialog box (Windows Live Photo Gallery), 135–136
- city scene, 106–108
- clock, on digital picture frame, 284, 289
- Clock setting, 48–49
- close-up, extreme, of flower or bug, 94–95

- close-up setting, 13–14
 - CNET Web site, 11, 19
 - Collect Pictures screen (Shutterfly), 311, 313–314
 - color, adjusting, 214–217
 - Color mode, 121
 - color photo, turning into black and white, 215–217
 - Color temperature slider, 214–215
 - compact, point-and-shoot camera, 8
 - composing photo
 - landscape shot, 102
 - overview of, 68–70
 - panorama, capturing, and, 109
 - shooting from unexpected angles, 76–78
 - computer
 - as accessory, 25
 - copying photos directly from camera to, 150–154
 - copying photos from memory card to, 155–156
 - copying photos from, to digital picture frame, 291–293
 - desktop background, turning photo into, 296–297
 - finding photos on, 175–177
 - printing from, 232–237
 - screen saver, turning photo into, 297–300
 - setting up and connecting printer to, 229–230
 - viewing photos onscreen, 158–161
 - configuring Windows Live Photo Gallery, 144–150
 - contact, adding in Flickr, 274–275
 - Contact sheet option (Print Pictures dialog box), 233–234
 - Contacts menu (Flickr), 275
 - context menu, Send To option, 188–189
 - contrast ratio, and digital picture frame, 282, 289
 - Contrast slider, 209–211
 - controls. *See also* manual controls
 - for digital picture frame, 283–284
 - locating, 30–31
 - for slideshow, 165–166
 - copy (Ctrl+C), 156
 - Copy button (Windows Vista), 204
 - copying folder for backup, 188
 - copying photo
 - for backup, 189
 - to CD, 241–243
 - from computer to digital picture frame, 291–293
 - directly from camera to computer, 150–154
 - to flash drive, 241
 - from memory card to computer, 155–156
 - Create Your Account button (Flickr), 261
 - crescent moon symbol, 101, 106
 - cropping
 - description of, 183–184
 - photo for digital picture frame, 290
 - printing and, 239–240
 - steps in, 193–195
 - Ctrl+0 (fit to window), 219
 - Ctrl+A (select all), 156
 - Ctrl+C (copy), 156
 - Ctrl+P (print), 232
 - Ctrl+R (revert), 202
 - Ctrl+V (paste), 156, 177
 - Ctrl+X (cut), 156, 177
 - Ctrl+Y (redo), 199
 - Ctrl+Z (undo), 199
 - cut (Ctrl+X), 156, 177
- D •
- date, changing, 48–49
 - Date Imported + Name option (Windows Live Photo Gallery), 145
 - Date Taken + Name option (Windows Live Photo Gallery), 145–146, 149
 - Date Taken option (Info pane), 168

- Date Taken Range + Name option (Windows Live Photo Gallery), 146
 - Date Taken, searching by, 175
 - deep depth of field, 114
 - Delete button, 31, 38
 - Delete files from device after importing option (Windows Live Photo Gallery), 149
 - deleting photo
 - from camera, 38–39
 - from computer, 162–163
 - from digital picture frame, 291
 - depth of field, 114–116
 - Descending button (Windows Live Photo Gallery), 176
 - description, adding
 - on Flickr, 268
 - to photo, 167–169
 - desktop background, turning photo into, 296–297
 - Details pane (Windows Explorer), 180
 - Details view (Windows Live Photo Gallery), 142
 - digital picture frame
 - changing settings, 288–289
 - copying photos from computer to, 291–293
 - description of, 279
 - editing photos for, 290–291
 - memory card, displaying photos from, 287–288
 - selecting, 280–286
 - setting up, 286–287
 - digital single-lens reflex (DSLR) camera
 - description of, 9
 - modes, 117
 - dimensions of screen of digital picture frame, 281
 - Dimensions option (Info pane), 168
 - diopter correction knob or wheel, 13
 - Display button, 32
 - displaying
 - index of thumbnails, 36, 43
 - metadata in Windows Explorer, 180–181
 - distractions, excluding, 71
 - dock, for camera, 231
 - document, adding photo to, 304–306
 - down button, 46–47
 - Download complete dialog box (Windows Live Photo Gallery), 135
 - Downloading
 - information from the Internet dialog box, 248, 250–251
 - DSLR (digital single-lens reflex) camera
 - description of, 9
 - modes, 117
 - DVD slideshow, creating, 300–304
- E •**
- ease of use, 12
 - Edit Pages screen (Shutterfly), 314–316
 - Edit↔Copy (Word), 304
 - Edit↔Cut (Word), 304
 - editing photo
 - backing up before, 187–190
 - color, adjusting, 214–217
 - cropping, 183–184, 193–195
 - for digital picture frame, 290–291
 - exposure, correcting, 205–213
 - in-frame, and digital picture frame, 284
 - making copy, 191–192
 - red-eye, removing, 196–197
 - reverting to original photo, 200–204
 - selecting photo, 190–191
 - sharpening, 217–219
 - stitching panorama shots together, 221–223
 - straightening, 219–221
 - undoing and redoing changes, 197–200

- editing software, 183. *See also* Windows Live Photo Gallery
- Edit⇨Paste (Word), 304
- electronic viewfinder
brightness setting, 56–57
description of, 12–13
switching display from LCD to, 30
- e-mail
attaching photos to, 253–256
resizing photos for, 256–259
- enabling Red-Eye Reduction, 56
- Erase after importing option (Windows Live Photo Gallery), 153–154
- Estimated time left dialog box (Windows Live Photo Gallery), 135
- event, planning photos at, 92–94
- EXIF (exchangeable image file), 179
- Explorer (Windows)
Include Folder in Gallery option, 179
metadata, displaying in, 180–181
moving photo using, 177–178
undeleting or restoring photo using, 164
viewing photos in, 156
viewing photos using, 161
- exposure
adjusting further, 207–213
correcting, 205–207
definition of, 62, 112, 205
- Exposure compensation function, 122
- Exposure option (Info pane), 168
- external hard drive, backing up photos to, 188
- **F** •
- Face Recognition/
Detection function, 12, 81, 83
- Facebook, 260
- features, deciding on
common, 12–13
intermediate, 13–18
- File Download-Security Warning dialog box (Windows Live Photo Gallery), 133–134
- file format, 17
- File name option (Windows Live Photo Gallery), 147–149
- file type, selecting, 52–54
- File⇨Include a Folder in the Gallery (Windows Live Photo Gallery), 178
- File⇨Make a Copy, 191–192
- Filename option (Info pane), 167
- File⇨Print (Word), 306
- File⇨Save (Word), 306
- File⇨Screen Saver Settings (Windows Live Photo Gallery), 297–298
- fill flash, 74
- Filter By option (Windows Live Photo Gallery), 176
- finding photo on
computer, 175–177
- Fireworks mode, 100–101
- Fit Picture to Frame option (Print Pictures dialog box), 234–237
- Fit to Window (Ctrl+O), 219
- Fix pane (Windows Live Photo Gallery)
Adjust Color option, 214–215
Adjust Detail option, 217–218
Adjust Exposure option, 207–208
Auto adjust option, 206
Black and White Effects option, 215–217
Brightness slider, 208–209, 211
Contrast slider, 209–211
Fix red eye option, 196
Highlights slider, 210–212
histogram, 212–213
Proportion list, 194
Shadows slider, 210–211

- Fix pane (Windows Live Photo Gallery)
 - (*continued*)
 - showing or hiding, 190–191
 - Straighten Photo option, 219–221
 - flash
 - at big event, 94
 - effective range of, 74
 - outdoors, 72
 - portraits and, 82
 - slow-synchro, 94, 106
 - turning on and off, 34–35
 - using, 73–74
 - Flash control, 30, 35
 - flash drive
 - backing up photos to, 188–189
 - copying photos to, 241
 - digital picture frame and, 285
 - printing from, at in-store kiosk, 243–244
 - Flash mode
 - landscape photo and, 101
 - portraits and, 82–83
 - flexible-point focus, 120–121
 - Flickr
 - contacts, adding, 274–275
 - description of, 260
 - home page, 263
 - Mail link, 274
 - organizing photos on, 267–269
 - pro account, 265
 - setting up account, 261–263
 - sharing photos with family and friends, 269–271
 - sharing photos with groups, 271–274
 - tracking recent activity on, 276–277
 - uploading photos to, 263–267
 - flowers
 - extreme close-up of, 94–95
 - field of, photographing, 116–117
 - Focal length option (Info pane), 169
 - focal point
 - depth of field and, 116
 - landscape photo and, 99
 - focus
 - areas of, 67
 - description of, 62–63
 - landscape photo and, 99
 - on subject, 66–68
 - Focus mode, 16, 120–121
 - folder
 - adding to Photo Gallery, 178–179
 - copying for backup, 188
 - searching in, 175
 - Folder name option (Windows Live Photo Gallery), 144–147
 - forced flash, 74, 82
 - foreground, including or excluding, 71
 - Format Memory Card option, 57
 - Format Picture⇨Size (Word), 305
 - Format setting, 53–54
 - frame. *See* digital picture frame
 - framing photo
 - landscape shot, 102
 - overview of, 68–70
 - panorama, capturing, and, 109
 - shooting from unexpected angles, 76–78
 - frequency of photo
 - change on digital picture frame, 289
 - f-stop, 114
 - Full page photo option (Print Pictures dialog box), 233
 - function guide, 48
- G •**
- Gallery view (Windows Live Photo Gallery), 184–186
 - glossy photo finish, 248
 - Google Photos, 260
 - Google Picasa
 - description of, 3, 131–132
 - installing, 138
 - green triangle in green square symbol, 36
 - group portrait, shooting, 91–92
 - grouping photos, 177
 - Groups⇨Search for a Group (Flickr), 271–272

• **H** •

- hard drive, external,
 - backing up photos to, 188
- head symbol, 64
- help feature, 48
- High sensitivity mode, 65
- Highlights slider, 210–212
- histogram, 212–213
- How do I change my import settings? link (Windows Live Photo Gallery), 150

• **I** •

- image sensor, 16
- image size, setting, 50–52
- image stabilization
 - feature, 15–16
- Import Photos and Videos dialog box (Windows Live Photo Gallery)
 - Add tags option, 170
- Import Photos and Videos dialog box (Windows Live Photo Gallery), 153–154
- Import tab (Windows Live Photo Gallery), 144–145, 149–150
- indoor light, 124–125
- Indoor mode, 65
- indoors, using natural light, 72–73
- Info pane (Windows Live Photo Gallery)

- Add Descriptive Tag
 - option, 171
- changing information
 - in, 167–169
 - opening, 141
 - viewing photos onscreen and, 158–159
- inkjet printer, 228
- Insert→Shapes (Word), 306
- installing
 - memory card, 25–26
 - Picasa, 138
 - Windows Live Photo Gallery, 133–138
- in-store kiosk, printing
 - from, 243–244
- iPhoto, 132–133
- ISO mode, 65–66, 122–123
- ISO option (Info pane), 169

• **J** •

- Join Shutterfly screen (Shutterfly), 310–311
- Join This Group link (Flickr), 272
- JPEG file, 17, 53

• **K** •



- keyboard shortcuts
 - Ctrl+0 (fit to window), 219
 - Ctrl+A (select all), 156
 - Ctrl+C (copy), 156
 - Ctrl+P (print), 232
 - Ctrl+R (revert), 202
 - Ctrl+V (paste), 156, 177

- Ctrl+X (cut), 156, 177
- Ctrl+Y (redo), 199
- Ctrl+Z (undo), 199
- kiosk, in-store, printing
 - from, 243–244

• **L** •

- labeling camera, 28
- Landscape mode
 - aperture size and, 116
 - depth of field and, 115
 - description of, 64–66, 100
- landscape orientation, 64, 85
- landscape photo
 - city scene, 106–108
 - focus and, 99
 - at night, 105–106
 - panorama, capturing, 108–110
 - settings for, 100–101
 - at sunrise or sunset, 103–105
 - taking, 102–103
- Landscape plus Portrait mode, 64
- laser printer, 228
- LCD screen
 - brightness setting, 56–57
 - description of, 12–13
 - Display button and, 32
 - gridlines on, 69
 - switching from viewfinder to, 30
- leading lines, 69–70
- left button, 46–47
- lens cover/cap, 27, 32

- light conditions
 - aperture size, shutter speed, and, 115
 - indoor light, 124–125
 - natural light, 72–73
- light sensitivity, 122–123
- lightning bolt symbol, 35, 67, 82–83
- liquid crystal display screen. *See* LCD screen
- Live Photo Gallery (Windows). *See also* Navigation pane
 - Alt key in, 197
 - attaching photo to e-mail, 253–256
 - burning data CD, 242–243
 - color, adjusting, 214–215
 - configuring, 144–150
 - cropping photo, 193–195
 - deleting photo, 162–163
 - description, adding to photo, 167–169
 - description of, 2–3, 130–131
 - Details view, 142
 - exposure, fixing, 205–213
 - File name option, 147–149
 - File→Make a Copy, 191–192
 - folder, adding to, 178–179
 - Folder name option, 144–147
 - Gallery view, 184–186
 - Import tab, 144–145, 149–150
 - Info pane, 141, 158–159, 167–169, 171
 - installing, 133–138
 - menu items, 140–141
 - moving photo, 177–178
 - Navigation pane, 158–159, 170–171
 - People tags, 173–174
 - Photo Gallery screen, 139–140
 - Preview view, 184–185, 187
 - printing from, 232–237
 - properties of photos, examining, 179–181
 - red-eye, removing, 196–197
 - resizing photos for e-mail, 256–259
 - reverting to original photo, 200–202
 - rotating photo, 161–162
 - saving changes when editing, 195
 - Screen Saver Settings dialog box, 297–298
 - search box, 175
 - selecting photo to edit, 190
 - Set as desktop background option, 296–297
 - sharpening photo, 217–219
 - slideshow, watching, 165–166
 - starting, 139
 - stitching panorama shots together, 221–223
 - straightening photo, 219–221
 - Tab key in, 208
 - tags, adding to photos, 169–174
 - Thumbnail view, 143
 - undeleting photo, 164–165
 - undoing editing change, 197–200
 - View button, 142
 - viewing photos onscreen, 158–161
- **M** •
 - Macro mode, 94
 - Make→Burn a DVD (Windows Live Photo Gallery), 300–301
 - Make→Create Panoramic Photo (Windows Live Photo Gallery), 222
 - manual controls
 - Aperture priority mode, 118–119
 - bracketing, 123
 - Color mode, 121
 - Exposure compensation, 122
 - Focus mode, 120–121
 - ISO mode, 122–123
 - Metering mode, 119–120
 - Shutter priority mode, 117–118
 - White Balance, 121
 - manual focus, 16, 121
 - Manual mode, 117

- manufacturers of
 cameras, Web sites
 of, 20
- matte photo finish, 248
- megapixels, 16
- memory card
 copying photos to
 computer from,
 155–156
 description of, 16–17
 displaying photos from,
 on digital picture
 frame, 287–288
 installing, 25–26
 printing directly from,
 231
 printing from, at in-
 store kiosk, 244
 removing, 26
 size of image and space
 on, 51
 spare, having on hand,
 22
- memory card reader,
 155–156
- memory card slot in
 digital picture frame,
 282
- memory, internal, of
 digital picture frame,
 283
- Menu button
 Delete option, 38–39
 setup menu, 46
- menu items (Windows
 Live Photo Gallery),
 140–141
- menu options,
 consistency of, 47
- merger, 71
- metadata, 179–181
- Metering mode, 119–120
- Microsoft. *See also*
 Windows Explorer;
 Windows Live Photo
 Gallery
 Live Photos, 260
 Word document, adding
 photo to, 304–306
 WordArt, 306
- Mode dial, 46
- modes. *See also*
 Automatic (Auto)
 mode; Landscape
 mode; Portrait mode;
 Sports mode
 Action, 12, 64, 93, 97
 Aperture priority, 116,
 118–119
 Auto Focus (AF), 54–55
 automatic scene, 8
 Backlight, 65
 Beach, 100–101
 Black and white (B&W),
 121
 Burst, 34, 82, 101
 Color, 121
 Fireworks, 100–101
 Flash, 82–83, 101
 Focus, 16, 120–121
 High sensitivity, 65
 Indoor, 65
 ISO, 65–66, 122–123
 Landscape plus Portrait,
 64
 Macro, 94
 Manual, 117
 Metering, 119–120
 Movie, 39–41, 48
 Night scene, 65–66
 Night sky, 100–101,
 105–106
- Panorama, 100–101, 109
- Party, 65
- Program, 117
- Review, 48
- Scene (SCN), 65–66, 100
- scene, 12, 63–66
- Sepia color (S), 121
- Shutter priority, 116
- Smile Shutter, 66
- Snow, 100–101
- Twilight, 64
- Vivid color (V), 121
- monopod
 city scene and, 108
 description of, 24
- More Services  Publish
 on Flickr (Windows
 Live Photo Gallery),
 263
- mountain peaks symbol,
 64
- movement of camera
 while shooting video,
 40
- Movie mode
 options, 48
 video, shooting, 39–41
- moving
 crop box, 194
 photo, 177–178
- multiple spot focus, 16
- multi-point focus, 120
- multi-point metering, 119
- Myspace, 260
-  •
- Name + Date Imported
 option (Windows Live
 Photo Gallery), 147

- Name + Date Taken option (Windows Live Photo Gallery), 147, 149
 - Name + Date Taken Range option (Windows Live Photo Gallery), 147
 - Name option (Windows Live Photo Gallery), 147–148
 - natural light, 72–73
 - Navigation pane (Windows Live Photo Gallery)
 - Descriptive Tags option, 170–171
 - example of, 140
 - Gallery view and, 184–186
 - viewing photos onscreen and, 158–159
 - netbook, 286
 - Night scene mode, 65–66
 - Night sky mode
 - landscape photo and, 100–101
 - night photo and, 106
 - night, taking photo at, 105–106
 - Nikon camera, DSLR, 9
 - noise, reducing, 218
 - None option (Windows Live Photo Gallery), 147
 - number of copies, choosing to print, 234
 - 0 •
 - OK button, 37, 46–47
 - online review, 18–19
 - Open Windows Live Photo Gallery after importing files option, 149
 - opinion-sharing Web site, 20
 - optical zoom, 15
 - order of photos on digital picture frame, 289
 - Order Prints dialog box, 246
 - ordering prints online, 239, 244–252
 - Organize Pictures screen (Shutterfly), 313, 315
 - Organize→New Folder, 156
 - organizing photos
 - on Flickr, 267–269
 - software for, 129–133
 - Original File Name option (Windows Live Photo Gallery), 148
 - Original File Name (Preserve Folders) option (Windows Live Photo Gallery), 149
 - overexposure, 62
 - p •
 - panning, 159
 - panorama, capturing, 108–110
 - Panorama mode
 - description of, 100–101
 - framing photo in, 109
 - panorama shot, stitching together, 109–110, 221–223
 - paper, archival quality, 229
 - Paper size option (Print Pictures dialog box), 236
 - Paper type option (Print Pictures dialog box), 236
 - Party mode, 65
 - paste (Ctrl+V), 156, 177
 - PC Magazine Windows Vista Solutions*, 161
 - People tags, 173–174
 - perspective, changing, 76–78
 - Photo Book, creating online
 - book style, 308
 - Collect Pictures screen, 311, 313–314
 - Edit Pages screen, 314–316
 - Join Shutterfly screen, 310–311
 - Organize Pictures screen, 313, 315
 - overview of, 307
 - paper pattern, 309
 - Preview book screen, 317
 - Quantity and Recipients screen, 317–318
 - reviewing, 316
 - Upload Pictures screen, 311–312
- photo editing software, 183. *See also* Windows Live Photo Gallery
- Photo Gallery. *See* Windows Live Photo Gallery
- Photo Gallery screen (Windows Live Photo Gallery), 139–140

- photo organizing
 - software
 - choosing, 130–133
 - description of, 129
- photo sharing service
 - choosing, 260–261
 - contacts, adding, 274–275
 - organizing photos on, 267–269
 - setting up account, 261–263
 - sharing photos with family and friends, 269–271
 - sharing photos with groups, 271–274
 - tracking recent activity on, 276–277
 - uploading photos to, 263–267
- Photo size option (Attach files dialog box), 254–255
- photostream page (Flickr), 266–267
- Picasa (Google)
 - description of, 3, 131–132
 - installing, 138
- PictBridge standard, 231
- picture frame, digital
 - changing settings, 288–289
 - copying photos from computer to, 291–293
 - description of, 279
 - editing photos for, 290–291
 - memory card, displaying photos from, 287–288
 - selecting, 280–286
 - setting up, 286–287
- picture quality, setting, 50–52
- pixels, 16
- planning photos at big event, 92–94
- playing slideshow, 165–166
- point-and-shoot camera, 8
- Popular link (Flickr), 277
- portrait
 - casual, shooting, 87–88
 - definition of, 79
 - group, shooting, 91–92
 - posed, shooting, 84–86
 - self-portrait, snapping, 88–90
 - settings for, 80–84
- Portrait menu item, 80
- Portrait mode
 - aperture size and, 116
 - depth of field and, 115
 - description of, 12, 64, 66, 80
 - group shot and, 91
 - landscapes and, 100
 - options, 85
- portrait orientation
 - description of, 64, 85
 - landscape photo and, 103
- Portrait symbol, 80
- Power button, 30–31
- power-saving setting, 57
- preparing photo for printing, 240–241
- Preview book screen (Shutterfly), 317
- Preview button (Screen Saver Settings dialog box), 299
- Preview view (Windows Live Photo Gallery), 184–185, 187
- price range for camera, 10–11
- Print Pictures dialog box (Windows Live Photo Gallery), 232–236
- Print Test Page button, 230
- printer. *See also* printing as accessory, 25 buying, 227–229 setting up and connecting to computer, 229–230
- Printer option (Print Pictures dialog box), 235
- Printer⇨Properties, 230
- printing. *See also* printer from computer, 232–237 cropping and, 239–240 directly from camera or memory card, 231 from in-store kiosk, 243–244 ordering prints online, 244–252 preparing photos for, 240–241 Word document, 306
- Print⇨Order Prints (Windows Live Photo Gallery), 244–245
- Print⇨Print, 232

privacy notice when
ordering prints
online, 246

Program mode, 117

properties of photo,
examining, 179–181

prosumer camera, 9–10

Publish on Flickr dialog
box, 264–265

• Q •

Quality option (Print
Pictures dialog box),
236

Quantity and Recipients
screen (Shutterfly),
317–318

• R •

Rathbone, Andy, *Windows
Vista For Dummies*,
161

Rating option (Info
pane), 168

RAW file, 17, 53

RAW+JPEG file, 54

Ready to Burn Disc screen
(Windows DVD
Maker), 302–303

rechargeable battery,
13, 23

rectangle stack symbol, 82

red X symbol, 163

Red-Eye Reduction
description of, 18
enabling, 56
flash and, 74
portraits and, 82

red-eye, removing in
Photo Gallery,
196–197

redo (Ctrl+Y), 199

Redo button (Windows
Live Photo Gallery),
198, 200

Reduce Noise slider,
217–219

Remove Items option
(Windows DVD
Maker), 300, 302

removing
memory card, 26
red-eye, 196–197

tag from photo, 171

repositioning photo in
text, 306

researching cameras on
Web, 18–20

Resize dialog box
(Windows Live Photo
Gallery), 256–257

resizing

crop boxes, 194
photos for digital
picture frame,
290–291

photos for e-mail,
256–259

photos in Word
document, 304–306

resolution of screen of
digital picture frame,
281

Restore defaults option
(Windows Live Photo
Gallery), 150

Restore This Item button
(Windows Explorer),
164

restoring photo, 164–165
reverting to original
photo, 200–204

Review button, 31,
36–37, 57

Review mode, 48

reviewing photos
on camera, 36–38
in online book, 316

right button, 46–47

Rotate photos during
import option
(Windows Live Photo
Gallery), 149

rotating photo
on computer, 161–162
for digital picture frame,
290

Rule of Thirds, 68–69

running stick figure
symbol, 64

• S •

S (Sepia color) mode, 121

Saturation slider,
214–215

saving
changes when editing,
195

Word document, 306

Scene mode (SCN)
landscape photo and,
100

menu options, 65
selecting, 66

Scene Mode dial, 30

scene modes, 12, 63–66

scenery, taking photo of
city scene, 106–108
focus and, 99
at night, 105–106

- panorama, capturing, 108–110
- settings for, 100–101
- at sunrise or sunset, 103–105
- taking, 102–103
- screen of digital picture frame, 281
- Screen Saver Settings dialog box (Windows Live Photo Gallery), 297–298
- screen saver, turning photo into, 297–300
- search options, 175–176
- select all (Ctrl+A), 156
- selecting photo to edit, 190–191
- self-portrait, snapping, 88–90
- Send To option (context menu), 188–189
- Sending pictures to the printing company dialog box, 252
- Sepia color (S) mode, 121
- Set as desktop background option (Windows Live Photo Gallery), 296–297
- sets, adding on Flickr, 269
- setting up camera, 25–28
- setup menu options, 46–48
- Shadows slider, 210–211
- shallow depth of field, 114
- Share this photo dialog box (Flickr), 270–271
- sharing photo
 - with family and friends, 269–271
 - with Flickr Groups, 271–274
- Sharpen slider, 217–218
- sharpening photo, 217–219
- shooting video, 39–41
- shortcuts
 - Ctrl+0 (fit to window), 219
 - Ctrl+A (select all), 156
 - Ctrl+C (copy), 156
 - Ctrl+P (print), 232
 - Ctrl+R (revert), 202
 - Ctrl+V (paste), 156, 177
 - Ctrl+X (cut), 156, 177
 - Ctrl+Y (redo), 199
 - Ctrl+Z (undo), 199
- Shuffle Contents option (Screen Saver Settings dialog box), 299
- Shutter priority mode, 116
- Shutter Release button
 - Auto mode and, 33–34
 - description of, 30–31
 - location of, 21
- shutter speed
 - aperture size and, 115–116
 - Automatic mode and, 111–112
 - importance of, 112–113
 - lighting and, 115
 - setting, 117–118
- Shutterfly, creating Photo Book on
 - book style, 308
 - Collect Pictures screen, 311, 313–314
 - Edit Pages screen, 314–316
 - Join Shutterfly screen, 310–311
 - Organize Pictures screen, 313, 315
 - overview of, 307–318
 - paper pattern, 309
 - Preview book screen, 317
 - Quantity and Recipients screen, 317–318
 - reviewing, 316
 - Upload Pictures screen, 311–312
- size. *See also* aperture size; resizing
 - of image, setting, 50–52
 - of photo, choosing to print, 233–234
- Size option (Info pane), 168
- Slide Show Speed option (Screen Saver Settings dialog box), 299
- Slideshow button, 42
- slideshow, DVD, creating, 300–304
- slideshow, watching, 165–166
- slow-synchro flash, 94, 106
- Smile Detection function, 81
- Smile Shutter mode, 66
- Snow mode, 100–101
- Sony camera, bridge type, 10
- sound, controlling, 49–50

- speakers, audio, for digital picture frame, 284
- special effects features, 18
- Sports mode
 - for animal subject, 97
 - description of, 12, 64, 66
 - shutter speed and, 116
- spot metering, 120
- Start⇨Computer, 164
- starting
 - Info pane (Windows Live Photo Gallery), 167
 - Microsoft Word, 304
 - Windows Explorer, 164
 - Windows Live Photo Gallery, 139
- Start⇨Pictures, 156
- Start⇨Printers, 230
- stitching panorama shots together, 109–110, 221–223
- store, looking for camera in, 20–22
- straightening photo, 219–221
- subject of photo
 - animals, 97–98
 - birds, 95–97
 - context and, 71
 - description of, 62
 - flowers or bugs, 94–95
 - focusing on, 66–68
 - portraits and, 79
- submitting photo to
 - Flickr Group, 273–274
- sunrise or sunset, photo at, 103–105

• T •

- T (Zoom/Telephoto) button, 36–38
- Tab key (Windows Live Photo Gallery), 208
- tag
 - adding on Flickr, 269
 - adding to photos, 169–174
 - description of, 157
 - searching by, 175
- telephoto lens, 14
- 10X zoom, 14–15
- test page, printing, 230
- text, flowing around
 - photo in document, 305–306
- Text Wrapping⇨Square (Word), 305
- Text Wrapping⇨Top and Bottom (Word), 305
- 35mm equivalent, 15
- 3X zoom, 14
- Thumbnail view (Windows Live Photo Gallery), 143
- thumbnails, description of, 157
- thumbnails, displaying
 - index of
 - on camera, 36
 - on TV, 43
- TIF or TIFF file, 54
- time, changing, 48–49
- time of day, and natural light, 72–73
- timer settings, portraits and, 83–84
- Tint slider, 214–215
- title, adding on Flickr, 268

- tracking recent activity on Flickr, 276–277
- transition effects, and digital picture frame, 289
- tripod
 - night shot and, 105
 - panorama, capturing, and, 108
 - selecting, 23–24
 - using, 74–76
- turning camera on and off, 32
- turning flash on and off, 34–35
- TV, viewing photo or video on, 41–43
- Twilight mode, 64

• U •

- ultrazoom camera, 14
- undeleting photo, 164–165
- underexposure, 62, 104
- undoing editing change, 197–200
- up button, 46–47
- Upload Pictures screen (Shutterfly), 311–312
- uploading photo to Flickr, 263–267
- USB connection, 150–151
- USB flash drive
 - backing up photos to, 188–189
 - copying photos to, 241
 - digital picture frame and, 285
 - printing from, at in-store kiosk, 243–244

- Use All Photos and Videos from Windows Live Photo Gallery option (Screen Saver Settings dialog box), 297
- Use Photos and Videos from option (Screen Saver Settings dialog box), 298
- Use This Theme option (Screen Saver Settings dialog box), 298
- User Account Control dialog box (Vista), 135–136
- user rating, 18
- *V* •
- V (Vivid color) mode, 121
- vibration reduction feature, 15–16
- video
 - shooting, 39–41
 - viewing on TV, 41–43
- video format, and digital picture frame, 285
- Video In connection, 41–42
- Video Out connection, 41
- View button (Windows Live Photo Gallery), 142
- viewfinder
 - brightness setting, 56–57
 - description of, 12–13
 - switching display from LCD to, 30
- viewing
 - photos onscreen, 158–161
 - photos or videos on TV, 41–43
- viewing angle, and digital picture frame, 283
- Vista (Windows)
 - backup software, 188
 - resources on, 161
 - reverting to original photo, 202–204
 - running screen saver in, 300
 - search box, 177
 - User Account Control dialog box, 135–136
- Vivid color (V) mode, 121
- *W* •
- W (Wide) button, 36–37
- Wait option (Screen Saver Settings dialog box), 300
- Walgreens, ordering prints online from, 245–252
- Wallet option (Print Pictures dialog box), 233
- wallpaper, turning photo into, 296–297
- WB (White Balance) function, 121, 124–125
- Web sites
 - for book, 4
 - camera and feature review, 18–20
 - CNET, 11, 19
- digital picture frame
 - reviews, 280
- photo sharing services, 260
- Picasa, 131
- Shutterfly, 307
- sunrise and sunset times, 104
- Windows Live Photo Gallery, 133
- Welcome to Windows Live! dialog box (Windows Live Photo Gallery), 138
- White Balance (WB) function, 121, 124–125
- Wide (W) button, 36–37
- wide-angle shot, 14–15
- Windows DVD Maker, 300–304
- Windows Explorer
 - Include Folder in Gallery option, 179
 - metadata, displaying in, 180–181
 - moving photo using, 177–178
 - undeleting or restoring photo using, 164
 - viewing photos in, 156
 - viewing photos using, 161
- Windows Live Photo Gallery. *See also* Navigation pane
 - Alt key in, 197
 - attaching photo to e-mail, 253–256
 - burning data CD, 242–243

- Windows Live Photo Gallery. (*continued*)
 - color, adjusting, 214–217
 - configuring, 144–150
 - cropping photo, 193–195
 - deleting photo, 162–163
 - description, adding to photo, 167–169
 - description of, 2–3, 130–131
 - Details view, 142
 - exposure, fixing, 205–213
 - File name option, 147–149
 - File↔Make a Copy, 191–192
 - folder, adding to, 178–179
 - Folder name option, 144–147
 - Gallery view, 184–186
 - Import tab, 144–145, 149–150
 - Info pane, 141, 158–159, 167–169, 171
 - installing, 133–138
 - menu items, 140–141
 - moving photo, 177–178
 - People tags, 173–174
 - Photo Gallery screen, 139–140
 - Preview view, 184–185, 187
 - printing from, 232–237
 - properties of photos, examining, 179–181
 - red-eye, removing, 196–197
 - resizing photos for e-mail, 256–259
 - reverting to original photo, 200–202
 - rotating photo, 161–162
 - saving changes when editing, 195
 - Screen Saver Settings dialog box, 297–298
 - search box, 175
 - selecting photo to edit, 190–191
 - Set as desktop background option, 296–297
 - sharpening photo, 217–219
 - slideshow, watching, 165–166
 - starting, 139
 - stitching panorama shots together, 221–223
 - straightening photo, 219–221
 - Tab key in, 208
 - tags, adding to photos, 169–174
 - Thumbnail view, 143
 - undeleting photo, 164–165
 - undoing editing change, 197–200
 - View button, 142
 - viewing photos onscreen, 158–161
 - Windows Vista
 - backup software, 188
 - resources on, 161
 - reverting to original photo, 202–204
 - running screen saver in, 300
 - search box, 177
 - User Account Control dialog box, 135, 136
 - Windows Vista For Dummies* (Rathbone), 161
 - wireless connectivity, and digital picture frame, 286
 - Word document, adding photo to, 304–306
 - WordArt (Microsoft), 306
- X •
 - X symbol, red, 163
- ! •
 - You're almost done! dialog box (Windows Live Photo Gallery), 137
- Z •
 - Zoom control, 46
 - zoom lens, 14–15
 - zooming
 - at big event, 94
 - depth of field and, 116
 - landscape photo and, 102–103
 - onscreen, 159–160
 - while recording video, 40
 - on wildlife, 98
 - Zoom/Telephoto (T) button, 36–38