

# Index

## *Symbols and Numerics*

\_ (underscore) in filenames, 93, 195, 281  
3D Color Matrix II mode, 138–140  
3D Tracking AF-area mode, 167  
16-bit image files, 243  
18–55mm Vibration Reduction (VR) zoom lens, 10, 12, 38  
35mm equivalent focal lengths, 181


## • A •

A (aperture-priority autoexposure) mode  
Auto ISO setting in, 137  
close-up photography, 215  
depth of field, controlling, 180  
Exposure Compensation setting in, 143  
flash photography, 148–156  
landscape photography, 212  
metering mode in, 140  
overview, 129, 134  
still photography, 203–205  
ACR (Adobe Camera Raw) converter, 242  
action photography  
overview, 208–211  
reducing resolution for, 70  
Active D-Lighting feature  
bracketing, 157  
expanding tonal range with, 145–148  
shadow recovery with, 285–286  
sunrise/sunset images, 213  
turning off for increased speed, 210  
Active D-Lighting icon, 100  
Active D-Lighting option, 146–147, 310  
Active Folder option, 86, 307–308  
Add Items option, 305–306  
Adobe Camera Raw (ACR) converter, 242  
Adobe Photoshop, 76, 148, 242  
Adobe Photoshop Elements,  
76, 148, 227, 242, 247  
Adobe RGB color mode, 194–195

Advanced Exposure modes, 128–129. *See also* A mode; M mode; P mode; S mode  
AE Lock (Hold) option, 311  
AE Lock Only option, 311  
AE/AF Lock option, 311  
AE-L (Autoexposure Lock) feature,  
144–145, 311  
AE-L/AF-L/Protect button  
autoexposure lock, 144–145  
autofocus lock, 172  
changing function of, 310–312  
overview, 21  
protecting photos, 104  
AF. *See* autofocus  
AF Lock Only option, 311  
AF-A (auto-servo autofocus) mode, 169–171  
AF-area mode  
adjusting, 167–168  
overview, 165–167  
selecting single focus point, 168–169  
Spot mode, 139  
AF-area mode icon, 167–168  
AF-assist lamp, 23, 39, 151, 163  
AF-C (continuous-servo autofocus) mode,  
169–171  
AF-L (Autofocus Lock) feature,  
171–172, 311  
AF-ON option, 311  
AF-S (single-servo autofocus) mode,  
169–171  
annotating images, 301–303  
anti-shake. *See* vibration reduction  
aperture (f-stop)  
adjusting, 132–134  
autoexposure meter, 39  
depth of field, 127, 176, 178, 180  
exposure balancing, 127–128  
exposure-setting side effects, 122–127  
focus, 41  
landscape photography, 50–51, 212  
overview, 120–122

- aperture (*continued*)
    - settings, 41
    - still photography, 203
  - aperture ring, 11
  - aperture-priority autoexposure mode. *See*
    - A mode
  - artifacts, JPEG, 64–65, 73–74
  - aspect ratios, cropping to, 298–299
  - Assign AE-L/AF-L Button option, 310–311
  - Assign Fn Button option, 309–310
  - Attach Comment option, 303
  - attaching lenses, 10–11
  - audio/visual (AV) port, 274
  - Auto Area AF-area mode, 166–167
  - Auto Bracketing option, 310
  - Auto Bracketing Set option, 157–158, 192
  - Auto Distortion Control option, 294
  - Auto Flash mode, 42
  - Auto Flash Off mode, 42, 48
  - Auto Image Rotation option, 31, 84
  - Auto Information Display option, 29
  - Auto ISO setting, 137. *See also* ISO
  - Auto mode, 38–41, 44–47
  - Auto Off Timers options, 32–33, 85, 130–131
  - Auto white balance setting, 183–184. *See also* white balance
  - Auto-Distortion Control feature, 60, 175
  - auto-downloaders, 227–229
  - Autoexposure Lock (AE-L) feature, 144–145, 311
  - autoexposure meter, 39
  - autofocus (AF)
    - AF-area mode, 139, 165–169
    - Auto mode, 40, 45–46
    - Autofocus Lock feature, 171–172
    - Child mode, 49
    - Close Up mode, 51–52
    - combination settings, 171
    - Focus mode setting, 169–170
    - Landscape mode, 51
    - Live View mode, 105, 172–175
    - overview, 10
    - Portrait mode, 48
    - rapid-fire photography, 210
    - recording movies, 111
    - setting mode, 13
    - Sports mode, 51–52
    - still photography, 206
  - Autofocus frame, 108
  - Autofocus Lock (AF-L) feature, 171–172, 311
  - Autofocus mode icon, 173
  - autofocus points, 162
  - Autofocus submenu
    - AF-area mode option, 167–168
    - Live View Autofocus options, 107, 173–174
    - Rangefinder option, 164–165
  - autofocus-assist illuminator, 39
  - Auto/Manual focus switch, 13–14, 38, 162
  - automatic bracketing, 157, 215
  - automatic exposure modes
    - Auto Flash Off, 48
    - Auto, 38–41, 44–47
    - Child, 48–50
    - Close Up, 52–53, 180, 215
    - Landscape, 41, 50–51, 180, 197–198, 212
    - Night Portrait, 53
    - overview, 47–48
    - Portrait, 41, 48–50, 180
    - Scene, 53–55
    - Sports, 41, 51–52
  - Automatic Picture Rotation, 82–84
  - automatic rotation, 84
  - auto-servo autofocus (AF-A) mode, 169–171
  - Autumn Colors mode, 55
  - AV (audio/visual) port, 274
  - AVI format, 111, 274
  - Axial Color Aberration option, 247
- **B** •
- backgrounds, 206–208
  - backing up files, 228
  - back-of-body controls, 20–22
  - banding, 76
  - barrel distortion, 60, 175, 293–294
  - battery status indicator, 27, 106, 225
  - Beach/Snow mode, 55
  - Beep option, 33
  - bit depth, 75–76
  - Black-and-White option, 292–293
  - Blossom mode, 55
  - blown highlights, 96–97, 145–146
  - blur
    - Exposure Delay Mode option, 34
    - exposure settings, 127–128
    - increasing in background, 182

- ISO settings, 124–125
  - Live View, 105
  - Night Portrait mode, 53
  - reducing with VR lens, 12
  - shutter speed settings, 41, 122–124, 165
  - slow-sync flash mode, 152
  - Sports mode, 51–52
  - bracketing
    - Active D-Lighting feature, 147
    - interval timer shooting, 61
    - overview, 157–160
    - in tricky light, 214–215
    - white balance, 188, 191
  - Bracketing Increment setting, 158
  - bracketing progress indicator, 159
  - Bracketing/Flash submenu
    - Auto Bracketing Set option, 157–158, 192
    - Flash Cntrl for Built-In Flash, 319–320
  - Brightness histogram, 94–95, 99
  - bulb exposure, 121, 155, 214
  - burst mode (Continuous setting),
    - 56, 159, 209
- C •
- Calendar view, 89–90, 103
  - calibration, monitor, 257–258
  - Camera Control Pro 2 software, 241
  - camera-to-subject distance, 177, 180
  - Candlelight mode, 55
  - Capture NX 2 software, 76, 93, 242–243
  - card reader, 224–225
  - card stock measurement technique,
    - 188–189
  - CDs, backup, 228
  - Center-Weighted metering mode, 138–139
  - Change File Names check box, 250
  - Change the Image Size check box,
    - 249, 264–265
  - channels, color, 75, 96
  - Child mode, 48–50
  - Choose Tab option, 304–305
  - circular polarizing filter, 217–218
  - Clean Image Sensor option, 30
  - cleanliness, lens, 11, 64–65, 80
  - clipped highlights, 96
  - Close Up mode, 52–53, 180, 215
  - close-up (macro) lenses, 10, 216
  - color
    - Auto mode, 46
    - Child mode, 49–50
    - color balance, 290–291
    - digital lens filters, 288–290
    - Landscape mode, 50–51
    - Picture Controls feature, 196–199
    - Portrait mode, 48, 50
    - sRGB versus Adobe RGB, 194–195
    - white balance, 182–189, 191
  - Color Balance option, 290–291
  - Color Booster slider, 247
  - color cast, 46, 64–65
  - color channels, 75, 96
  - color intensifiers, 289
  - Color Outline option, 314–315
  - color saturation, 96, 244
  - Color Space option, 195
  - color temperature, 182
  - colorimeter, 258
  - Command dial
    - Calendar display mode, 89
    - overview, 20
    - scrolling through pictures with, 87–88
    - setting Scene mode settings with, 54
    - zooming options, 91
  - Comment item, 98, 100
  - compressed air, cleaning with, 80
  - Compression Ratio slider, 265
  - computer
    - connecting camera to, 225–227
    - transferring files to, 224–229
  - continuous autofocus, 105
  - Continuous setting (burst mode),
    - 56, 159, 209
  - continuous-servo autofocus (AF-C) mode,
    - 169–171
  - contrast
    - boosting, 286–288
    - Landscape mode, 51
  - Controls submenu
    - Assign AE-L/AF-L Button option, 310–311
    - Assign Fn Button option, 309–310
    - No Memory Card option, 35
    - Reverse Indicators option, 131–132
  - convergence, 295

- Convert Files button, 248
  - Convert Files dialog box, 248–250, 264–266
  - cool light, 182
  - Create Movie option, 271
  - Create Movie screen, 273–274
  - Create Subfolder for Each Transfer option, 233
  - crop factor, 181
  - cropping, 208, 256, 297–299
  - Cross Screen filter, 312–314
  - CSC code, 93, 246, 281
  - custom folders, 86, 306–308
  - Custom Setting menu
    - Autofocus submenu, 107, 164–165, 167–168, 173–174
    - Bracketing/Flash submenu, 157–158, 192, 319–320
    - Controls submenu, 35, 131–132, 309–311
    - Exposure submenu, 143, 159
    - overview, 24
    - restoring default settings, 35
    - Shooting/Display submenu, 33–35, 114–115, 134–135
    - Timers/AE Lock submenu, 32–33, 56–58, 85, 130–131, 309
  - cyanotype, 291–293
  - Cyanotype option, 292–293
- 
- 
- dampening noise, 136
  - data-restoration software, 101
  - date
    - Calendar display mode, 89–90
    - deleting by, 102
    - overview, 94
    - setting, 30
  - Date Imprint option, Shooting/Display submenu, Custom Setting menu, 34–35
  - default settings, restoring, 35
  - Delayed Remote setting, 56
  - Delete button, 21, 100–101
  - Delete option
    - Active Folder submenu, 308
    - Playback menu, 101–103
  - Delete original files after transfer check box, 234
  - deleting photos
    - all, 101
    - in Nikon ViewNX, 241
    - one at a time, 100
    - selected, 102
  - depth of field
    - aperture settings, 41, 128
    - Child mode, 49
    - Close Up mode, 53
    - close-up photography, 215
    - effect of aperture on, 122–123
    - Landscape mode, 50–51
    - overview, 176–182
    - Portrait mode, 48
  - digital lens filters, 288–290
  - Digital Print Order Format (DPOF)
    - technology, 259
  - Digital Vari-Program modes
    - Auto Flash Off, 48
    - Child, 48–50
    - Close Up, 52–53, 180, 215
    - Landscape, 41, 50–51, 180, 197–198, 212
    - Night Portrait, 53
    - overview, 47–48
    - Portrait, 41, 48–50, 180
    - Scene, 53–55
    - Sports, 41, 51–52
  - diopter adjustment control, 14–15, 21
  - diopters, 216–217
  - dirty lenses, 64–65, 80
  - disabling Instant Review feature, 85
  - Display Calibrator Assistant utility, 257
  - Display Mode option, 91–92, 97
  - displaying folder contents, 239–240
  - distortion, 60, 175, 293–295
  - Distortion Control filter, 294–295
  - D-Lighting filter, 148, 285–287. *See also*
    - Active D-Lighting feature
  - D-Lighting HS option, 247
  - downloading files, 18, 230–234
  - downsampling, 262
  - dpi, 67, 253
  - DPOF (Digital Print Order Format)
    - technology, 259
  - drop-off printing services, 252
  - DSC code, 93
  - dual-drive backup, 228

Dusk/Dawn mode, 55  
 dust, 11, 80  
 DVDs, backup, 228  
 Dynamic Area AF-area mode, 166, 171  
 dynamic close-ups, 215–217

## • E •

editing programs, 230  
 18–55mm Vibration Reduction (VR) zoom  
   lens, 10, 12, 38  
 e-mail, downsizing images for  
   in camera, 262–264  
   in Nikon ViewNX, 264–267  
   overview, 68, 260–262  
 e-mail wizard, Nikon ViewNX, 266  
 EV (exposure value), 141–143, 154, 159  
 EV Steps for Exposure Control option,  
   143, 159  
 exposure  
   action photography, 209  
   Active D-Lighting feature, 145–148  
   Advanced Exposure modes, 128–129  
   Autoexposure Lock feature, 144–145  
   balancing, 127–128  
   bracketing exposures, 157–160  
   Exposure Compensation feature, 141–144  
   flash photography, 148–156  
   f-stop settings, 39  
   Highlight display mode, 96–97  
   histograms, 95  
   ISO, controlling, 134–138  
   metering modes, 138–141  
   movies, 111  
   overview, 120–122, 132–138  
   reading meter, 129–132  
   setting side effects, 122–127  
   shutter speed settings, 39  
 Exposure Compensation, 141–144  
 Exposure Compensation button,  
   19, 141–142, 155  
 Exposure Compensation value, 108  
 Exposure Delay Mode option, 34  
 exposure metering, 109, 132, 138–141, 165  
 Exposure submenu, 143, 159  
 exposure value (EV), 141–143, 154, 159

external camera controls  
   AE-L/AF-L button, changing function of,  
     310–312  
   back-of-body controls, 20–22  
   front-left buttons, 22–23  
   front-right controls, 23  
   function button, assigning duty to,  
     309–310  
   topside controls, 18–20  
 external flash, 156, 207  
 Eye-Fi SD cards, 15  
 Eye-Fi Upload option, 31

## • F •

face detection, 91  
 Face Priority autofocus mode, 172, 174  
 File Format drop-down list, 248, 264–265  
 file formats, 71–72  
 File Information mode, 92–94  
 File Number Sequence option, 34–35  
 filenames  
   changing, 250  
   overview, 93  
   RAW files, 246  
   retouched images, 281  
 files. *See also* e-mail, downsizing images for  
   browsing, 234–238  
   downloading, 18, 230–234  
   numbering, 34–35, 93  
   organizing, 239–241  
   processing RAW, 242–250  
   size of, 69, 71, 77, 110  
   transferring, 224–229  
   viewing metadata, 238–239  
 Fill flash mode, 42, 205  
 Filter Effects option, 288–290, 312–313,  
   315–316  
 filters. *See also* Retouch menu  
   circular polarizing, 217–218  
   digital, 288–290  
   noise-reduction, 136  
 fireworks, photographing, 217  
 firmware, 4, 31  
 Firmware Version option, 31  
 Fisheye filter, 294–295

- flash
  - advanced exposure modes, 148–156
  - Auto mode, 40, 46
  - close-up photography, 216
  - Digital Vari-Program modes, 47–49, 51–53
  - external, 156, 207
  - indoor portraits, 204
  - outdoor photography, 205
  - timing, 155
- Flash button, 22–23, 43, 148
- Flash Cntrl for Built-In Flash option, 319–320
- Flash compensation button, 22–23
- Flash Compensation feature, 108, 148, 153–156, 320
- Fluorescent white balance mode, 185–186
- Fn (Function) button, 23, 58, 309–310
- focal length, 14, 99, 177, 179–181
- focus. *See also* autofocus; manual focus
  - depth of field, 176–182
  - f-stop, 127
  - locking, 144–145, 171–172, 311
  - overview, 162–163
- Focus modes, 13, 169–170
- focusing points, 39
- focusing ring, 13–14, 163
- folders
  - custom, 86
  - names, 93, 307–308
  - Nikon Transfer, 232–233
  - Nikon ViewNX, 240–241
- Folders panel, 235, 239
- Food mode, 55
- force flash, 149
- Format command, 16
- Format Memory Card option, 29, 103
- formatting memory cards, 16–17, 29, 103
- Frame Interval setting, 267–268
- Frame Number value, 92, 97
- Frame Rate setting, 110, 271
- Frame Size option, 270
- Framing Grid option, 114–115
- front-curtain sync, 151
- front-left buttons, 22–23
- front-right controls, 23
- f-stop. *See* aperture
- Full Screen view, 237–238
- full-frame view, returning to after zooming, 91
- Function (Fn) button, 23, 58, 309–310

## • G •

- glass, shooting through, 217
- gold contacts, on memory cards, 16
- GPS (Global Positioning System) Data mode, 98
- GPS item, 100
- GPS label, 31
- grain, film, 124
- grayscale images, 197–198
- green focus lamp, 39–40
- gridlines, viewfinder, 34

## • H •

- hard drive reliability, 228
- HDMI (High-Definition Multimedia Interface) devices, 115
- HDMI (High-Definition Multimedia Interface) option, 30, 275
- HDMI (High-Definition Multimedia Interface) port, 274
- head room, 256
- heat levels, 106
- Help button, 21, 28
- Hi ISO settings, 136–138
- Hide Image feature, 103
- Hide Indicators option, 114–115
- hiding folder contents, 239–240
- High Key mode, 55
- high-bit images, 244
- High-Definition Multimedia Interface (HDMI) devices, 115
- High-Definition Multimedia Interface (HDMI) option, 30, 275
- High-Definition Multimedia Interface (HDMI) port, 274
- Highlight display mode, 96–97
- Highlight Protection option, 247
- high-speed memory cards, 18

histograms, 94–96, 99  
 horizon lines, straightening, 283–284  
 hot shoe, 156

## • I •

ICC profile, 259  
 icons, 3–4  
 Image Comment option, 31, 238, 301–303  
 Image Dust Off Ref Photo option, 31  
 Image Overlay feature, 316–319  
 Image Quality options  
   JPEG, 72–75, 78  
   NEF (RAW), 75–78  
   overview, 71–72  
   setting, 79–80  
 Image Quality symbol, 94, 108  
 Image Quality/Size option, 310  
 Image Review option, 85, 210  
 image sensor, 64–65, 80  
 image size. *See* resolution  
 Image Size settings, 66–67, 69–71,  
   79–80, 253  
 Image Size symbol, 94, 108  
 image stabilization. *See* vibration reduction  
 Image Viewer display, Nikon ViewNX,  
   236, 247  
 in-camera processing feature, 76–77,  
   242, 244  
 Incandescent white balance mode, 183–184  
 indoor portraits, 204, 206  
 Info button, 19, 26  
 Info Display Format option, 29  
 Info Wrap-Around option, 29–30  
 Information Edit button, 22, 26–27  
 ink cartridges, 258  
 Input Comment option, 302  
 inserting memory cards, 16  
 Instant Review feature, 84–85  
 Interval Timer Shooting feature, 58–61  
 IPTC data, 238  
 ISO  
   action photography, 209  
   controlling, 134–138  
   overview, 121–122, 127–128

ISO Display option, 34, 134–135  
 ISO Sensitivity setting, 47, 136–137, 310  
 ISO value, Shooting Data display mode, 98

## • J •

JPEG artifacts, 64–65, 73–74  
 JPEG Basic option, 72–74  
 JPEG Fine setting, 72–74, 78  
 JPEG images  
   bracketing, 191  
   downsizing, 264–265  
   NEF (RAW) Processing option, 244  
   overview, 72–75  
   sizes of, 71  
   white-balance bracketing, 157–159  
 JPEG Normal setting, 72–74

## • K •

keystoning, 295  
 kit lens, 10, 12, 38

## • L •

Landscape mode, 41, 50–51,  
   180, 197–198, 212  
 landscape orientation, 83  
 landscape photography, 212–215  
 Language setting, 30  
 Launch automatically when device is  
   attached check box, 233  
 Launch Utility button, 247  
 LCD Brightness option, 29  
 LCD monitor, 82  
 length, movie, 110  
 lenses  
   attaching, 10–11  
   cleanliness of, 11, 64–65, 80  
   kit lens, 10, 12, 38  
   long, 105, 181  
   macro, 10, 216  
   removing, 11–12  
   setting focus mode, 13  
   super-long telephoto, 10

- lenses (*continued*)
    - telephoto, 149, 151, 181
    - VR lens, 12–13
    - wide-angle, 10, 60, 175, 181, 293–295
    - zooming, 13–14
  - Lens-release button, 11–12, 23
  - Lexar Image Rescue software, 101
  - light. *See also* aperture; exposure; flash; ISO; shutter-speed
    - bright, effect on camera, 106
    - reading meter, 129–132
  - light cube, 218–219
  - light tent, 218–219
  - Live View Autofocus options, 107, 173–174
  - Live View Display options, 35
  - Live View (Lv) button, 21, 107, 109
  - Live View mode
    - AF performance, 172–175
    - customizing, 114–115
    - overview, 105–107
    - recording movies, 109–113
    - taking pictures in, 107–109
  - Lo ISO settings, 137
  - Lock Mirror Up for Cleaning option, 30
  - lock switch, memory card, 17
  - locked monitor position, 22
  - Long Exposure Noise Reduction feature, 136, 217
  - long exposure photography, 53
  - long lenses, 105, 181
  - lossy compression, 72, 75, 243, 249
  - Low Key mode, 55
  - Lv (Live View) button, 21, 107, 109
- **M** ●
- M (manual exposure) mode
    - Auto ISO setting in, 137
    - bracketing, 157
    - Exposure Compensation setting in, 144
    - flash photography, 148–156
    - metering mode in, 140
    - overview, 129, 134
  - M focus setting. *See* manual focus
  - macro (close-up) lenses, 10, 216
  - macro lenses, 10, 216
  - magic hour, 214
  - magnification factor, 181
  - manual (M) focus
    - aids for, 163–165
    - versus autofocus, 172
    - focusing ring, 10, 163
    - Live View mode, 105, 107
    - movies, 111
    - rapid-fire photography, 210
    - selecting focus point, 168–169
    - setting, 13
  - manual exposure mode. *See* M mode
  - Manual Focus (MF) mode, 170. *See also* manual focus
  - matching resolution to print size, 253–255
  - Matrix metering mode, 138–140
  - Maximum Sensitivity option, 137
  - MediaRecover software, 101
  - megapixels, 67
  - memory buffer, 46
  - memory card access light, 16, 40, 42
  - memory card reader, 224–225
  - memory cards
    - formatting, 16–17, 29, 103
    - handling, 16
    - number of pictures on, 71
    - overview, 15–18
    - preventing shooting without, 35
  - Menu button, 21, 23–24
  - metadata, 35, 238–239
  - Metadata tab, 238–239, 303
  - meter orientation, 131–132
  - MF (Manual Focus) mode, 170. *See also* manual focus
  - microphone, 23
  - Minimum Shutter Speed option, 137
  - mireds, 187
  - Mode dial, 19–20, 38, 44–47
  - monitor
    - calibration software, 257–258
    - overview, 82–83
  - Monitor Release tabs, 21
  - Monochrome Picture Control, 197–198, 286, 291–293
  - mounting index, 10–11
  - Movie Quality option, 110

Movie Settings option, 110  
 movies  
   autofocusing, 175  
   file thumbnails, 112–113  
   length of, 110  
 moving subjects, 171. *See also* action  
   photography  
 Multi Selector/OK button  
   choosing display modes, 91  
   choosing zoomed portions with, 90  
   controlling movie playback, 113  
   navigating Calendar display mode, 89  
   navigating with, 24–25  
   overview, 20–21  
   scrolling through pictures, 87–88  
 multiple images, viewing, 87–88  
 My Menu screen, 24–26, 304–305

• *N* •

navigating menus, 24–25  
 NEF (RAW) images  
   downsizing, 264–265  
   editing, 199  
   Image Overlay feature, 316–319  
   overview, 71–78  
   processing, 242–250  
 NEF (RAW) option, 77, 310  
 NEF (RAW) Processing option, 244–246  
 NEF (RAW)+JPEG Basic option, 77  
 NEF (RAW)+JPEG Fine option, 77–78  
 NEF (RAW)+JPEG Normal option, 77  
 neutral density filter, 213  
 Neutral mode, 197–198  
 Night Landscape mode, 54  
 Night Portrait mode, 53  
 nighttime pictures, 152, 214  
 Nikkor 18–55mm Vibration Reduction (VR)  
   zoom lens, 10, 38  
 Nikon Camera Control Pro 2 software, 241  
 Nikon Capture NX 2 software,  
   76, 93, 242–243  
 Nikon Speedlight SB-600, 156  
 Nikon Transfer software, 229–234  
 Nikon ViewNX software  
   browsing images in, 234–238  
   downsizing images in, 264–267

overview, 229  
 printing options, 252  
 processing RAW files, 76, 242, 247–250  
 protected images, 104  
 viewing comments in, 303  
 No Memory Card option, 35  
 noise  
   caused by Live View mode, 106  
   filters, 136  
   ISO settings, 124–126, 138  
   overview, 64–65  
 Normal Area autofocusing mode, 173–174  
 Now option, 58–59  
 numbering, file, 34–35, 93



OK button. *See* Multi Selector/OK button  
 online photo-sharing sites, 252, 267  
 online storage services, 228  
 On/Off switch (shutter button), 19, 56–61  
 Open destination folder with other  
   application after transfer  
   check box, 234  
 operating systems (OSs), 225  
 optical stabilization. *See* vibration  
   reduction  
 organizing picture files, 239–241  
 orientation, 82–83  
 OSs (operating systems), 225  
 outdoor photography, 149–150, 205, 216  
 overexposure, 96–97. *See also* exposure  
 Overview Data mode, 98



P (programmed autoexposure) mode  
   Auto ISO setting in, 137  
   bracketing, 157  
   Exposure Compensation setting in, 143  
   flash photography, 148–156  
   metering mode in, 140  
   overview, 129, 133  
 paper quality, 258–259  
 paper settings, 258  
 Party Indoors mode, 54

- perspective, correcting, 295–296
  - Perspective Control feature, 295–296
  - Pet Portrait mode, 55
  - Photo Information modes
    - File Information, 92–94
    - GPS Data mode, 98
    - Highlight display mode, 96–97
    - overview, 91–92
    - Overview Data mode, 99–100
    - RGB Histogram mode, 94–96
    - Shooting Data display mode, 97–98
  - photo-sharing sites, 252, 267
  - Photoshop, 76, 148, 242
  - Photoshop Elements, 76, 148, 227, 242, 247
  - PictBridge technology, 259
  - Picture Controls, 196–199
  - picture data. *See* Photo Information modes
  - picture elements. *See* pixels
  - picture quality, diagnosing problems with, 64–66
  - pictures remaining data, 27–28
  - pincushion distortion, 60, 175, 293
  - pixelation, 64–65, 254
  - pixels (picture elements). *See also* e-mail, downsizing images for
    - file size, 69
    - print quality, 67–68
    - resolution, 66, 253–255
    - screen display size, 68–69
  - playback, movie, 112–113
  - Playback button, 21, 86
  - playback control icon, 113
  - Playback Folder option, 86
  - Playback menu
    - Delete option, 101–103
    - Display Mode option, 91–92, 97
    - Image Review option, 85, 210
    - overview, 24
    - Playback Folder option, 86
    - Rotate Tall option, 84
    - Slideshow option, 267–268
  - Playback mode
    - displaying photos in Calendar view, 89–90
    - overview, 86–87
    - Retouch menu, 280–281
    - viewing multiple images, 87–88
    - zooming, 90
  - point-and-shoot method, 38–41
  - polarizing filter, 217–218
  - portable storage options, 228
  - Portrait mode, 41, 48–50, 180
  - portrait orientation, 83
  - portrait photography, 176, 203–208
  - Portrait Picture Control, 197–198
  - posterization, 76
  - Preferences tab, 233–234
  - Preset Manual (PRE) option, 186, 188–190
  - Preview option, 273
  - Primary Destination Folder drop-down list, 232
  - Primary Destination tab, 231–232
  - print kiosks, self-serve, 252
  - printer cartridges, 258
  - printer software, 258–259
  - printing pictures
    - color modes, 194–195
    - overview, 252
    - preventing problems, 253–260
    - quality, 67–68
    - resolution, 69
  - profile, monitor, 258
  - programmed autoexposure mode. *See* P mode
  - Protect button. *See* AE-L/AF-L/Protect button
  - Protect feature, 103, 241
  - Protect Status icon, 92, 97, 99
  - protecting photos, 103–104
- 
- 
- Question Mark icon, 149
  - Quick Adjustment tab, 247–248
  - Quick Response Remote mode, 56–57
  - Quick Retouch filter, 286–288
  - Quick Settings display
    - Active D-Lighting setting, 147
    - AF-area mode, 167–168
    - Autofocus mode icon, 173–174
    - Bracketing Increment setting, 158
    - color shift, 193
    - Flash Compensation setting, 156
    - Flash modes, 43–44, 148

- Focus mode settings, 170
  - Image Quality and Size settings, 79
  - ISO setting, 135
  - Live View mode, 107, 109
  - overview, 26–27
  - Release mode settings, 57
  - Set Picture Control, 196
  - white balance, 185
- Quiet mode, 57
- **R** •
- [r 12] value, 46
  - Rangefinder option, 164–165
  - Rank Items option, 306
  - rapid-fire photography
    - Active D-Lighting setting, 148
    - manual focus, 210
    - memory buffer, 46
    - Release mode, 209–210
  - RAW converter, 75–76, 199, 242
  - RAW files. *See* NEF images
  - Rear-Curtain Sync flash mode, 43, 153
  - rear-sync flash, 151–153
  - Rec symbol, 112
  - Recent Settings menu, 24–26, 304–305
  - recording icon, 112
  - recording sound, 110
  - red, green, blue (RGB) Histogram mode, 94–96
  - red-eye, removing, 282–283
  - Red-Eye Correction filter, 282–283
  - red-eye reduction flash, 42, 151, 206
  - reflective surfaces, 217–218
  - Release mode
    - Auto mode, 40
    - Continuous setting, 56, 159, 209
    - Interval Timer Shooting feature, 58–61
    - overview, 56–58
  - Release Mode option, 309
  - Remote On Duration option, 58
  - remote-control unit, wireless, 56
  - Remove check boxes, 249, 266
  - Remove Items option, 306
  - removing
    - lenses, 11–12
    - memory cards, 16
    - red-eye, 282–283
  - Rename option, 308
  - Rename Photos During Transfer check box, 233
  - resampling, 68, 254
  - Reset Custom Settings option, 35
  - resolution (image size)
    - overview, 66–67
    - pixels, 67–69
    - recommendations, 69–71
    - setting, 79–80
  - restoring default settings, 35
  - Retouch Indicator icon, 92, 97, 99
  - Retouch menu
    - applying filters, 279–281
    - applying options to full size images, 88
    - color, adjusting, 288–291
    - cropping, 297–299
    - Cross Screen filter, 312–313
    - distortion, correcting, 60, 175, 293–295
    - Distortion Control filter, 294–295
    - D-Lighting filter, 285–287
    - Filter Effects option, 288–290
    - Fisheye filter, 294–295
    - horizon lines, straightening, 283–284
    - Image Overlay feature, 316–319
    - monochrome photos, 291–293
    - NEF (RAW) Processing option, 244–246
    - overview, 24
    - perspective, correcting, 295–296
    - Quick Retouch filter, 286–288
    - RAW converter, 76–77, 242
    - Red-Eye Correction filter, 282–283
    - red-eye removal, 151, 282–283
    - Small Picture feature, 262–264
    - Soft filter, 315–316
    - Stop-Motion Movie feature, 270
    - Trim feature, 256
  - Reverse Indicators submenu, 131–132
  - RGB (red, green, blue) Histogram mode, 94–96
  - Rotate Tall option, 84

rotating

- images, 31, 82–84
- monitor, 82–83

## • S •

S (shutter-priority autoexposure) mode

- action photography, 209
- Auto ISO setting in, 137
- bracketing, 157
- Exposure Compensation setting in, 143
- flash photography, 148–156
- metering mode in, 140
- overview, 129, 133

SanDisk memory card reader, 224

SanDisk recovery program, 101

saturation, color, 96, 286–288

Save In area, 250, 266

Scene mode, 53–55

scenic vistas, 212–215

screen display size, 68–69

SD (Secure Digital) cards, 15–17

SDHC (Secure Digital High Capacity)  
cards, 15

Select Date option, 102

selecting images in playback, 88

self-serve print kiosks, 252

self-timer capture delay, 56–57

Self-Timer mode, 56–58

Self-Timer option, 56–57, 309

sensor-cleaning mechanism, 80

Sepia option, 292–293

Setup menu

- Auto Image Rotation option, 84
- Format command, 16
- Format Memory Card option, 103
- HDMI option, 275
- Image Comment feature, 301–303
- overview, 24
- Video Mode option, 275

Shadow Protection option, 247

shadow recovery, 285–286

shadows

- boosting, 286–288
- reducing, 207–208

sharing pictures

- e-mail, 260–267
- slide shows, 267–268
- Stop-Motion Movie feature, 269–274
- viewing on television, 274–275

sharpening, 196

Shooting Data display mode, 97–98

Shooting Information display

- AF-area mode, 165–166
- Exposure Compensation setting, 141–142
- exposure meter, 130
- flash modes, 148–149
- flash status, 43
- f-stop, 132–133
- Metering mode icon, 140
- musical note icon, 33
- overview, 19, 26
- Question Mark icon, 149
- Scene mode settings, 54
- Self-Timer mode, 58
- shutter speed, 132–133
- white balance setting icons, 184

Shooting menu

- Active D-Lighting option, 146–147
- Active Folder option, 86, 307–308
- Auto-Distortion Control option,  
60, 175, 294
- Color Space option, 195
- Image Quality settings, 79–80
- Image Size settings, 79–80
- Interval Timer Shooting option, 58–61
- ISO Sensitivity Settings options, 136–137
- Movie Settings option, 110
- overview, 24
- Set Picture Control, 196
- White Balance options, 185–187, 189–190

shooting speed, 70

Shooting/Display submenu

- customizing options, 33–35
- ISO Display option, 134–135
- Live View Display Options, 114–115

Show Indicators option, 114–115

Show Shooting Information option, 114–115

shut-off timing, meter, 130–131

shutter button (On/Off switch), 19, 39–40

- shutter speed
    - adjusting, 132–134
    - autoexposure meter, 39
    - blurry images, 165
    - close-up photography, 216
    - Continuous setting, 56
    - fireworks, 217
    - flash photography, 150, 155
    - landscape photography, 213
    - moving subjects, 41, 208–209
    - nighttime pictures, 214
    - overview, 127–128
    - slow-sync flash mode, 152
    - Sports mode, 51
  - shutter-priority autoexposure mode.
    - See* S mode
  - Side-by-Side comparison option, 280–281
  - silent wave technology, 13
  - Silhouette mode, 55
  - single focus point, selecting, 168–169
  - Single Frame mode, 56
  - Single Point AF-area mode, 166, 171
  - single-servo autofocus (AF-S) mode, 169–171
  - 16-bit image files, 243
  - Skylight filter, 289
  - slide shows, 267–268
  - Slideshow option, 267–268
  - slow-sync flash, 43, 151–153, 206–207
  - Small Picture feature, 262–264
  - Snow/Beach mode, 55
  - Soft filter, 315–316
  - Sound recording option, 110
  - Source tab, 230–231
  - speed classes, memory card, 18
  - Speedlight SB-600, 156
  - Sports mode, 41, 51–52
  - Spot metering mode, 139
  - sRGB (standard red, green, blue), 194–195
  - SSC code, 93, 281
  - standard definition, 275
  - Standard Picture Control, 197–198
  - standard red, green, blue (sRGB), 194–195
  - starburst effect, 312–314
  - Start Time option, 58–59
  - still photography
    - autofocusing, 171, 175
    - portraits, 203–208
      - Stop-Motion Movie feature, 269–274
    - Stop-Motion Movie feature, 269–274
    - stopping down aperture, 122–123
    - storage options, 228
    - Straighten tool, 283–284
    - Subject Tracking autofocus mode, 173, 174
  - sunlight
    - effect on camera, 106
    - using flash with, 150
  - sunrise/sunset, basing exposure on, 213
  - Sunset mode, 55
  - super-long telephoto lenses, 10
- T ●
- telephoto lenses, 149, 151, 181
  - television, viewing pictures on, 274–275
  - 35mm equivalent focal lengths, 181
  - 3D Color Matrix II mode, 138–140
  - 3D Tracking AF-area mode, 167
  - Thumbnail button, 21, 89–91, 102
  - Thumbnail view, 235
  - thumbnails
    - movie files, 112–113
    - viewing, 87–88, 230–231
  - TIFF (8 Bit) option, 248
  - TIFF files, 75, 243, 248
  - time information, 94
  - Time Zone and Date option, 30
  - time-lapse photography, 58–61
  - Timers/AE Lock submenu
    - Auto Off Timers option, 32–33, 85, 130–131
    - Remote On Duration option, 58
    - Self-Timer option, 56–57, 309
  - tonal range, 95, 145–148
  - topside controls, 18–20
  - Total Pictures value, 92
  - Transfer new photos only check box, 233
  - Transfer software, 229–234
  - Trim feature, 256, 298–299

## tripods

- Live View mode, 105
- Night Portrait mode, 53
- Scene modes, 55
- slow shutter speeds, 213
- slow-sync flash mode, 152
- VR lens, 12–13
- TTL setting, 319
- two-button reset method, 35
- Type C mini-pin cable, 274

## • U •

- underscore (\_) in filenames, 93, 195, 281
- updates, firmware, 31
- USB cable, 224–225
- USB port, 224, 226
- Use LZW Compression option, 249
- Use Photo option, 189–190

## • V •

- vibration compensation. *See* vibration reduction
- Vibration Reduction switch, 12, 39
- vibration reduction (VR)
  - for handheld shooting, 162
  - lenses, 12–13
  - Live View, 105, 107
  - Night Portrait mode, 53
  - shutter speed, 41, 124
- video format, 111
- Video Mode option, 30, 275
- video-editing programs, 269
- viewfinder focus, adjusting, 14–15
- Viewfinder Grid Display option, 34
- ViewNX software. *See* Nikon ViewNX software
- Vivid Picture Control, 197–198
- volume, movie playback, 113
- VR. *See* vibration reduction

## • W •

- Warm filter, 289
- warm light, 182
- WB Bracketing option, Auto Bracketing Set
  - sub-submenu, 193
- white balance
  - bracketing, 157–159, 188
  - correcting color with, 182–184
  - presets, 188–189
  - setting, 184–188
  - still photography, 206
- White Balance option, 310
- Wide Area autofocus mode, 172, 174
- wide-angle lenses
  - distortion, 60, 175, 293
  - focal length, 181
  - overview, 10
- windows, shooting out of, 217
- Windows transfer options, 227
- wireless remote-control unit, 56–57

## • X •

- XMP data format, 238
- XMP/IPTC Information, 238

## • Z •

- Zoom In button
  - magnifying images with, 90, 109
  - overview, 22
  - viewing histograms for zoomed sections, 94
  - viewing large previews of thumbnails, 89
  - viewing thumbnails in playback, 88
- Zoom Out button, 21, 89–91, 102
- zooming
  - checking focus, 174
  - depth of field, 203–204, 216
  - focal length, 179
  - lenses, 13–14
  - Playback mode, 90
  - recording movies, 111